 
 
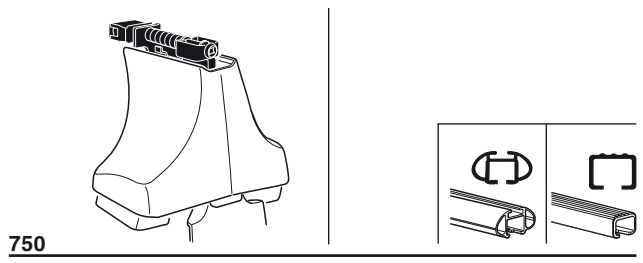 


Kit 1375

 
 
NISSAN Lafesta, 5-dr MPV, 04- (JPN)

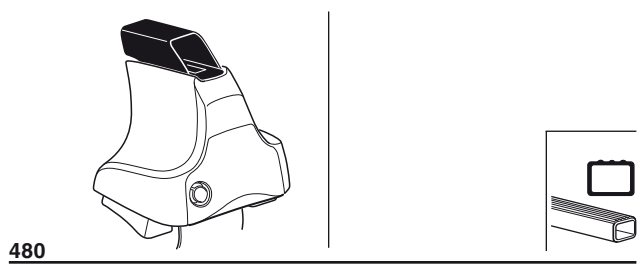

Kit


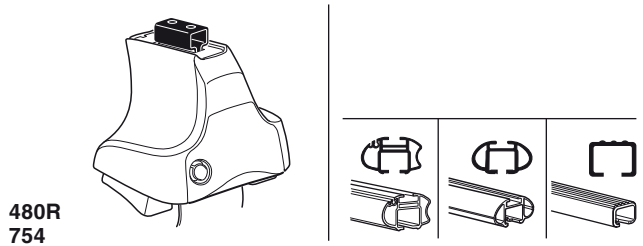


3

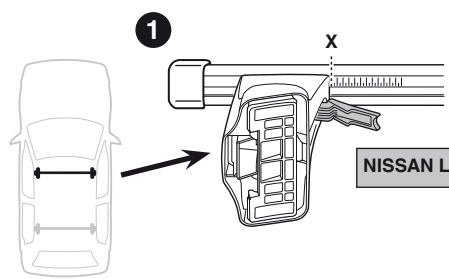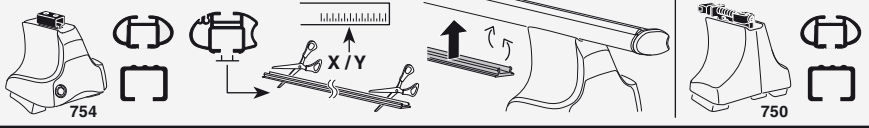





NISSAN Lafesta, 5-dr MPV, 04- (JPN)

  X
49

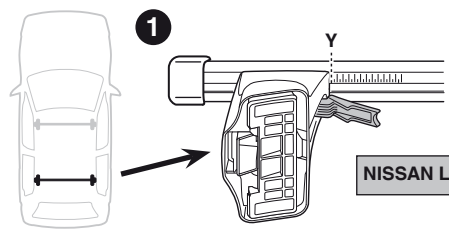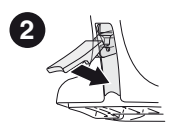




NISSAN Lafesta, 5-dr MPV, 04- (JPN)

    Y
36,5

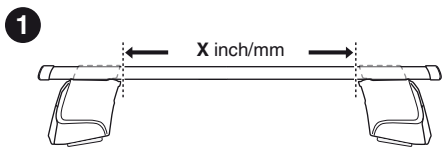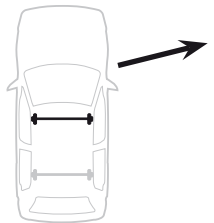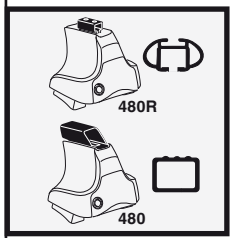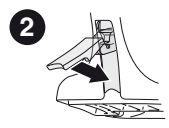


NISSAN Lafesta, 5-dr MPV, 04- (JPN)

X inch	X mm
44 7/8"	1141 mm

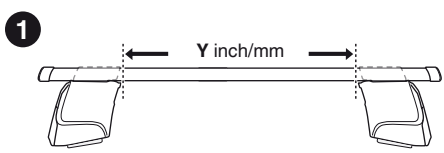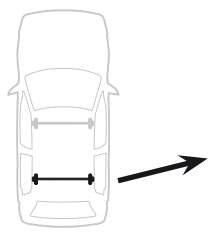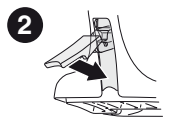   





NISSAN Lafesta, 5-dr MPV, 04- (JPN)

Y inch	Y mm
40"	1016 mm

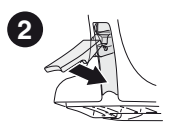 

4







 
NISSAN Lafesta, 5-dr MPV, 04- (JPN)

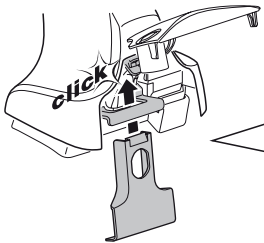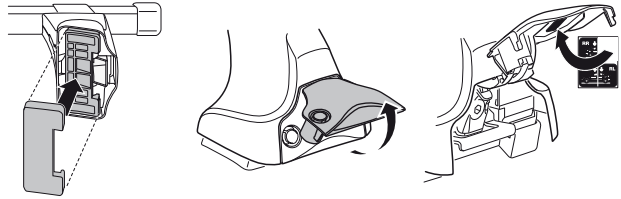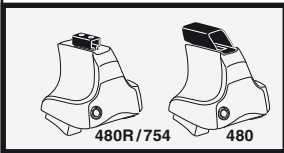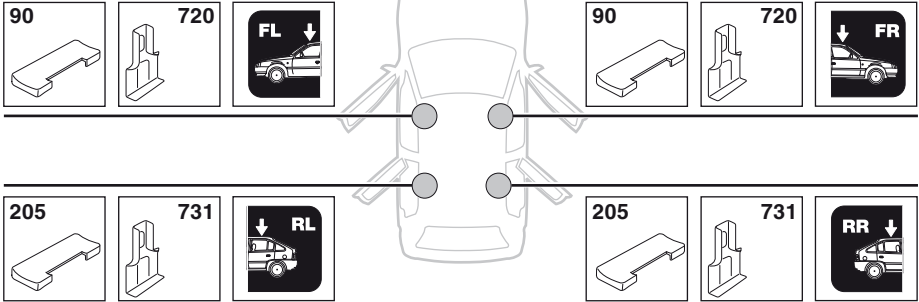

5



	X mm	Y mm	X inch	Y inch
NISSAN Lafesta, 5-dr MPV, 04- (JPN)	345 mm	830 mm	13 ⁵ / ₈ "	32 ⁵ / ₈ "

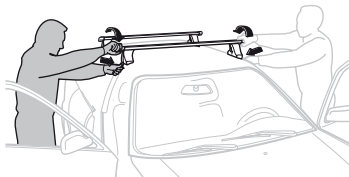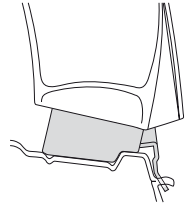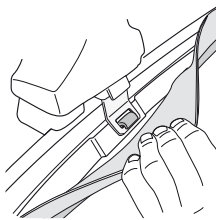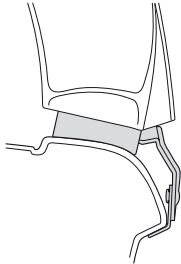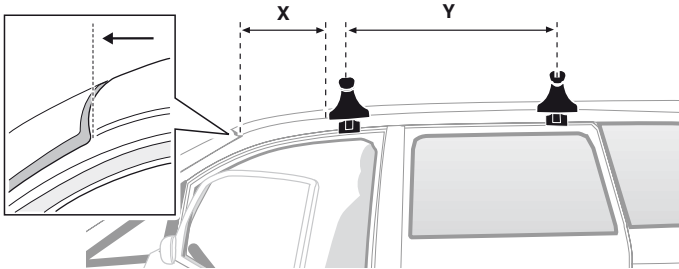       

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันโนแบบสลับ
















6

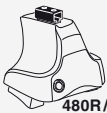

480R/754



               480

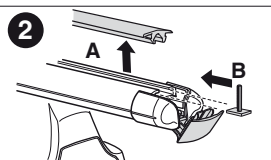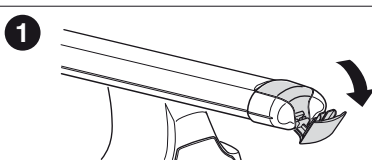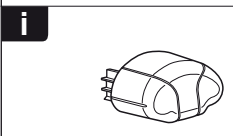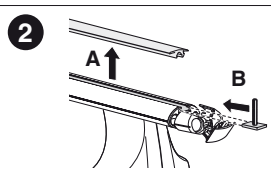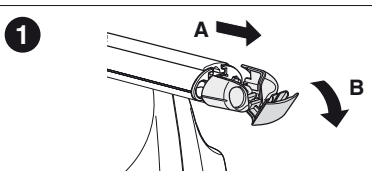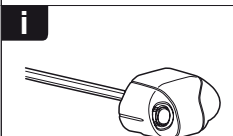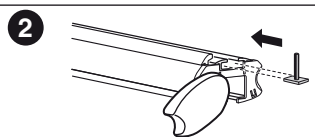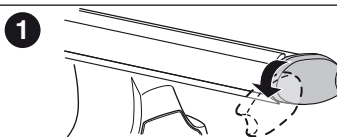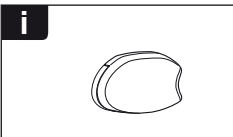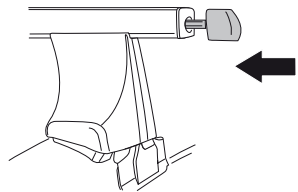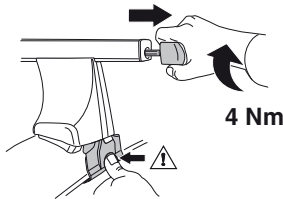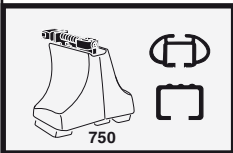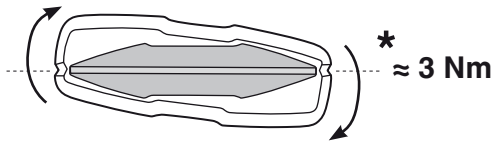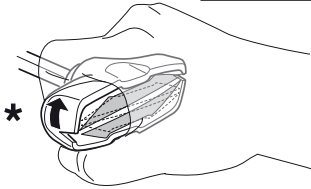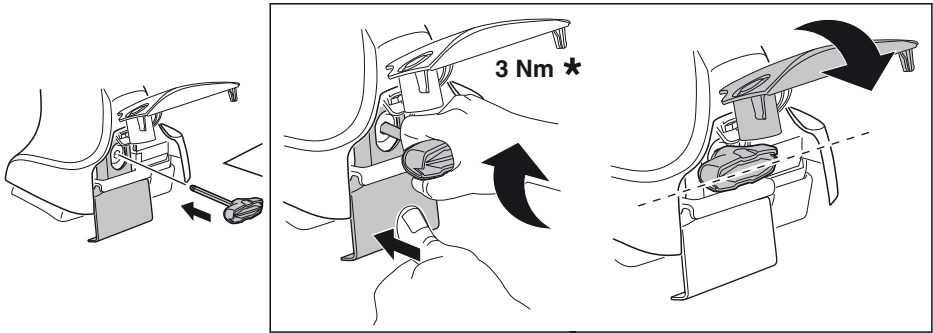



THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA

