

 
 
 
 


THULE[®]
SWEDEN

Thule Rapid System Kit 1787

> Instructions


FORD F-150, 4-dr Double Cab, 15-
FORD Super Duty, 4-dr Crew Cab, 17-
FORD Super Duty, 4-dr Super Cab, 17-

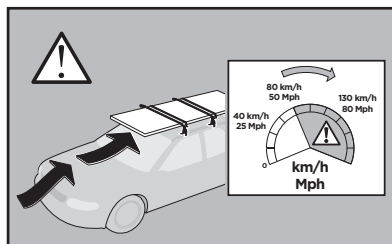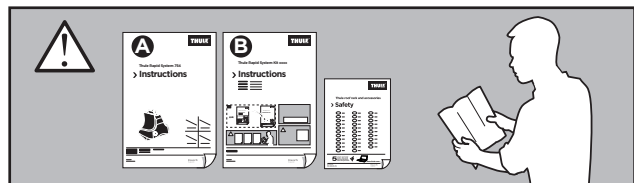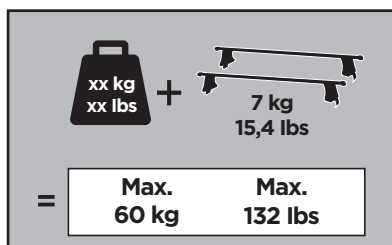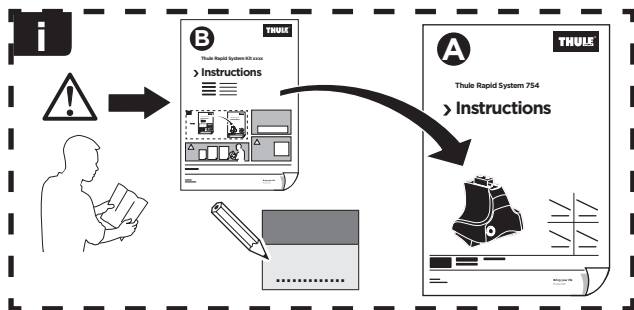

ISO 11154-E

141787
C.20160926
519-1787-02

 Bring your life
thule.com

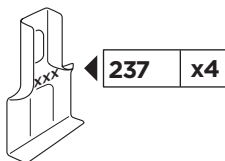



x1



x1

1



	X (scale)	X (mm)	X (inch)
FORD F-150 , 4-dr Double Cab, 15-	67,5	1326	52 1/4
FORD Super Duty , 4-dr Crew Cab, 17-	67,5	1326	52 1/4
FORD Super Duty , 4-dr Super Cab, 17-	67,5	1326	52 1/4

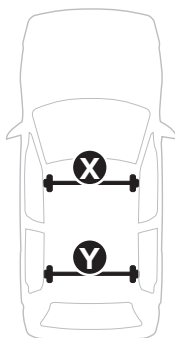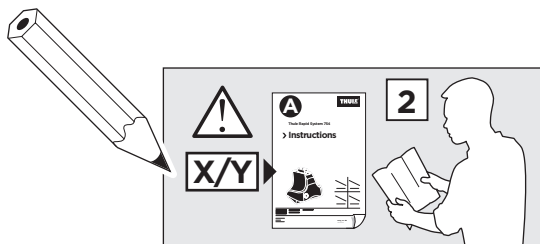  


	Y (scale)	Y (mm)	Y (inch)
FORD F-150 , 4-dr Double Cab, 15-	67	1321	52
FORD Super Duty , 4-dr Crew Cab, 17-	67	1321	52
FORD Super Duty , 4-dr Super Cab, 17-	67	1321	52

2

 
 
FORD F-150, 4-dr Double Cab, 15-
FORD Super Duty, 4-dr Crew Cab, 17-
FORD Super Duty, 4-dr Super Cab, 17-

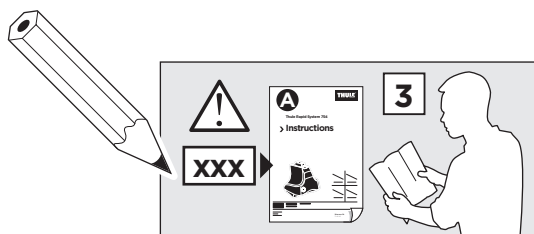
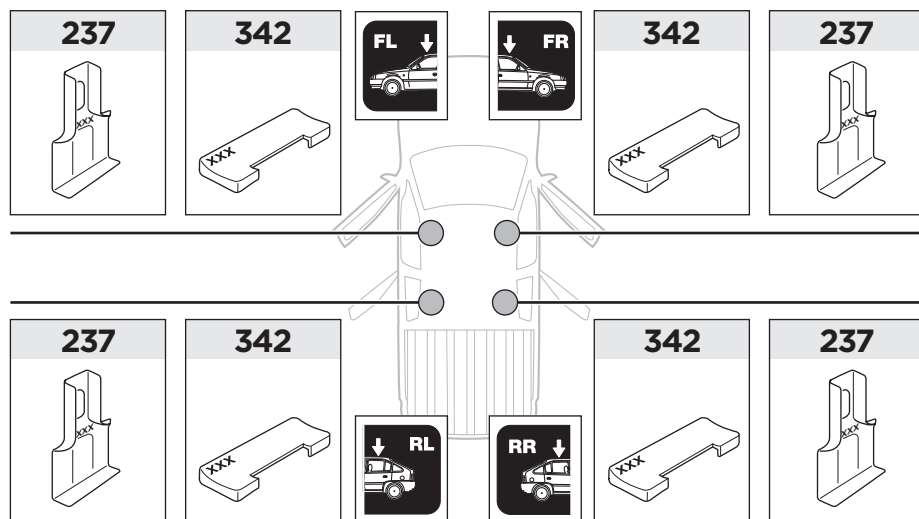




3

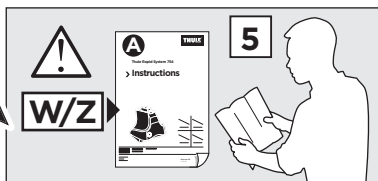 



	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD F-150 , 4-dr Double Cab, 15-	250	735	9 ⁷/₈	28 ⁷/₈
FORD Super Duty , 4-dr Crew Cab, 17-	250	735	9 ⁷/₈	28 ⁷/₈
FORD Super Duty , 4-dr Super Cab, 17-	250	735	9 ⁷/₈	28 ⁷/₈

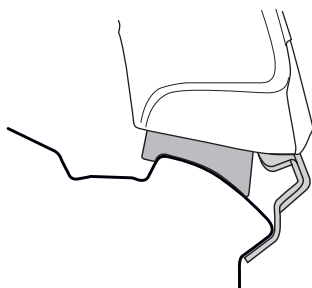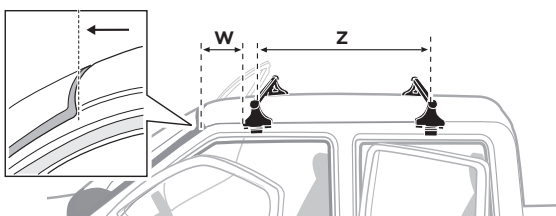  

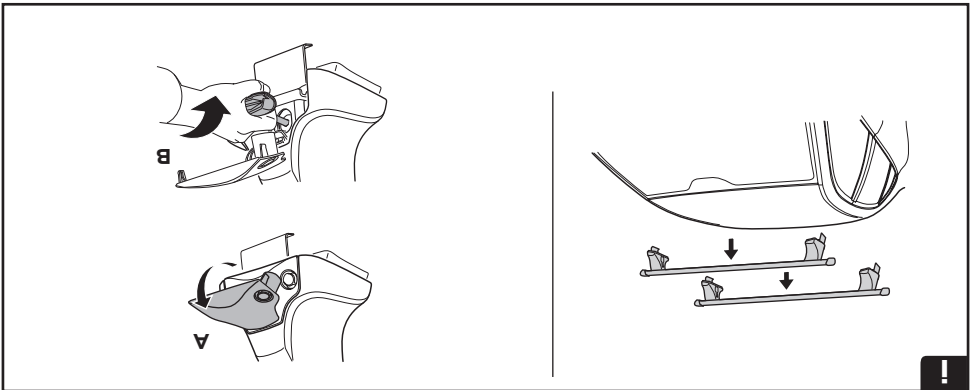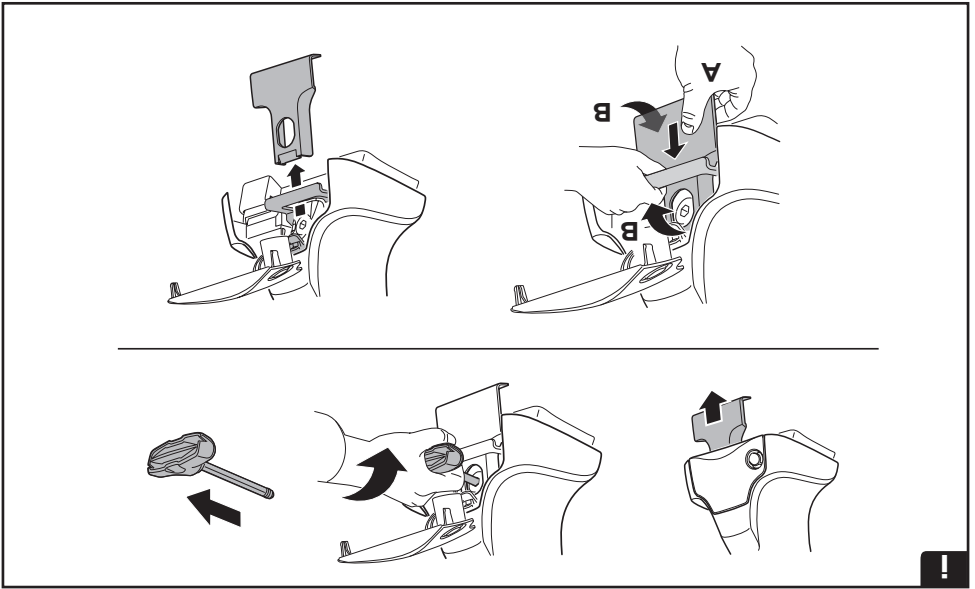  

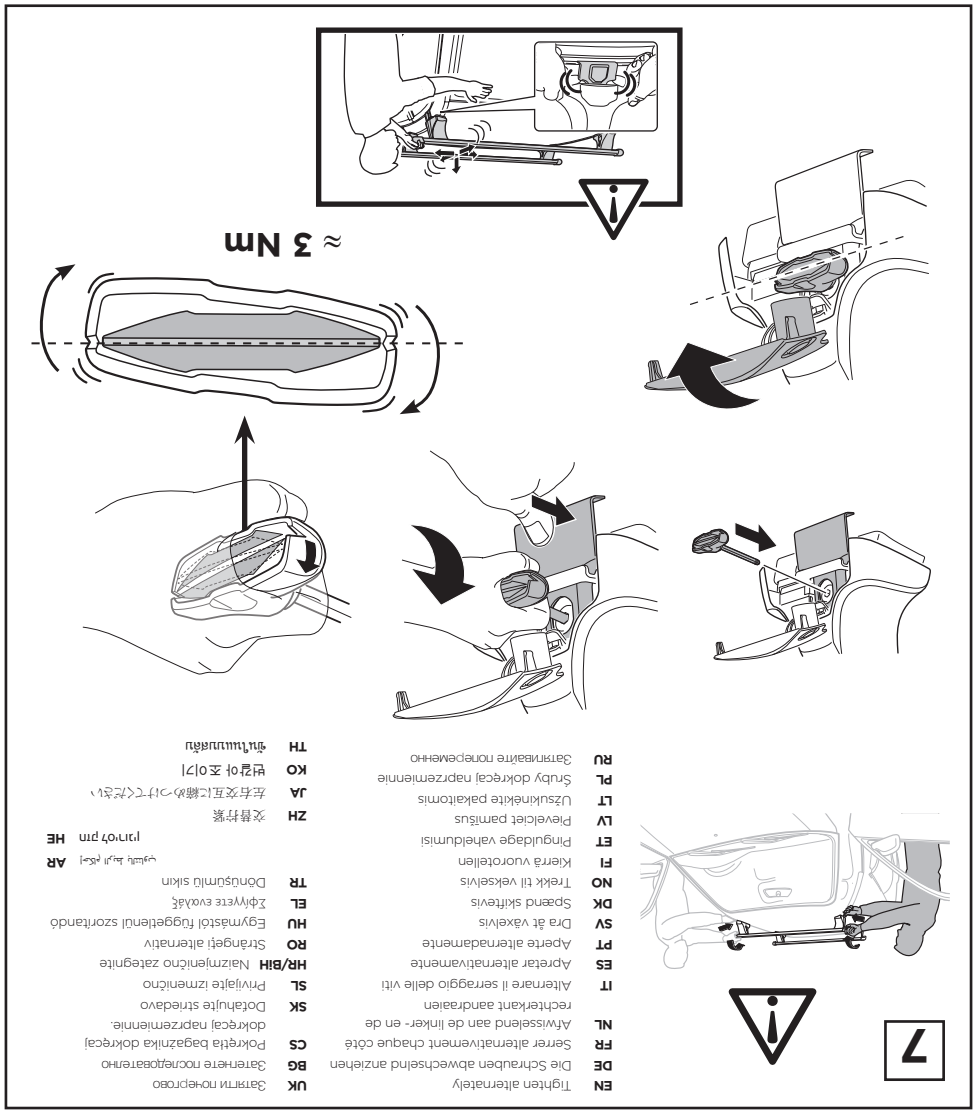 
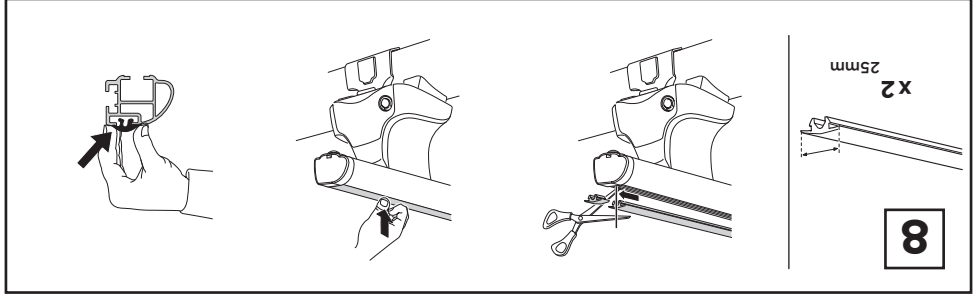 




- EN Tighten alternately
- DE Die Schrauben abwechselnd anziehen
- FR Serrer alternativement chaque côté
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- IT Alternare il serraggio delle viti
- ES Apretar alternativamente
- PT Aperte alternadamente
- SV Dra åt växelvis
- DK Spænd skiftevis
- NO Trekki til vekselvis
- FI Kierrä vuorotellen
- ET Pinguldage vaheldumisi
- LV Pieveiciet pamišus
- LT Užsukinkskite pakaitomis
- PL Śruby dokręcaj naprzemiennie
- RU Свинтовать попеременно
- UK Завертати по-чергово
- BG Завъртете нормално
- CS Pokrčte bagazníka dokřecí
- SK Dotiahnite stredavo
- SL Privijajte izmenično
- HR/BIH Naizmjenično zategnite
- RO Strângereți alternativ
- HU Egyarástól függetlenül szorítandó
- EL Σφιγνείτε εναλλάξ
- TR Dönüştürmüü sıkın
- AR انسخم الزبط البديهي
- HE פרוט' גרמ
- ZH 交替拧紧
- JA 左右交互に締めつけてください
- KO 좌우교차로 조이기
- TH หมุนสลับกัน

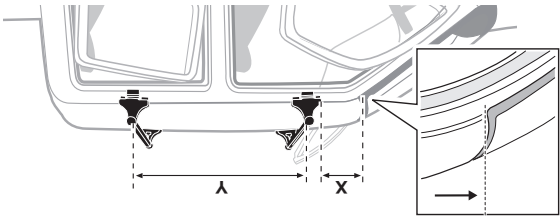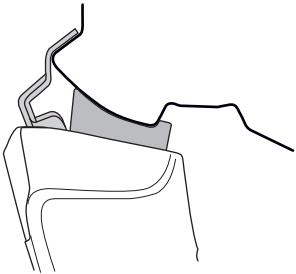  



FORD F-150, 4-dr Double Cab, 15-	250	735	9 7/8	28 7/8
FORD Super Duty, 4-dr Crew Cab, 17-	250	735	9 7/8	28 7/8
FORD Super Duty, 4-dr Super Cab, 17-	250	735	9 7/8	28 7/8

    X mm Y mm X inch Y inch

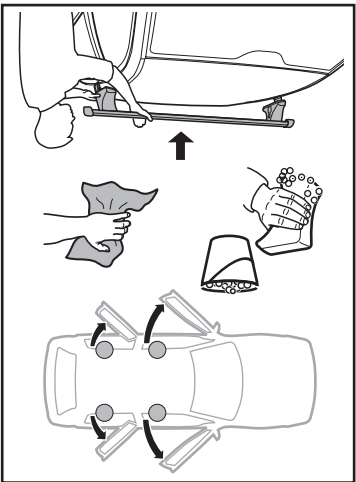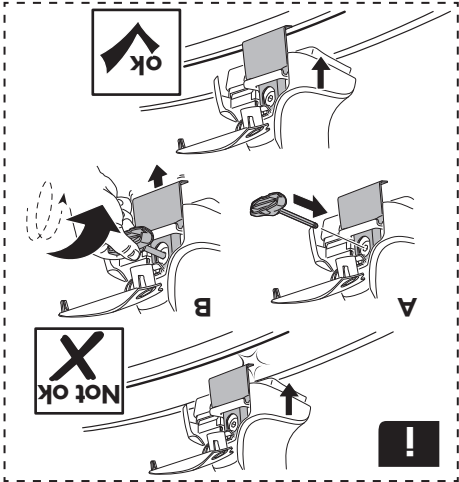

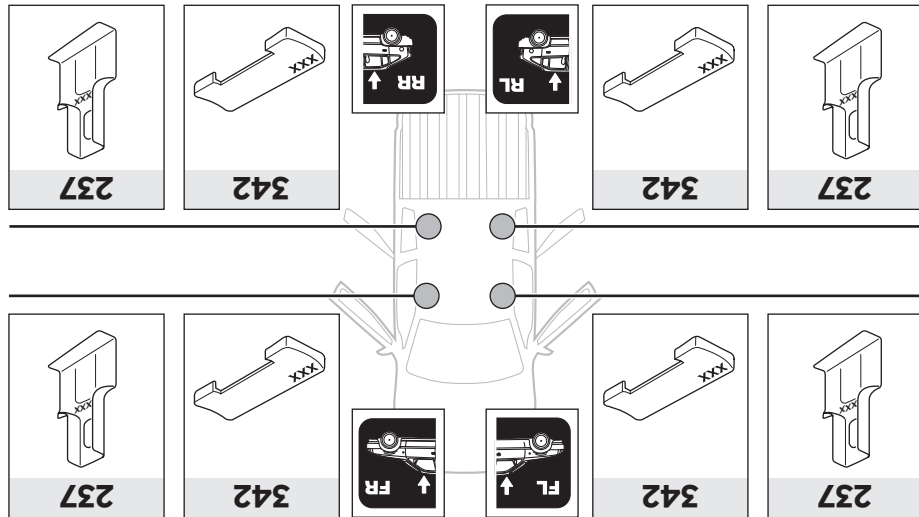
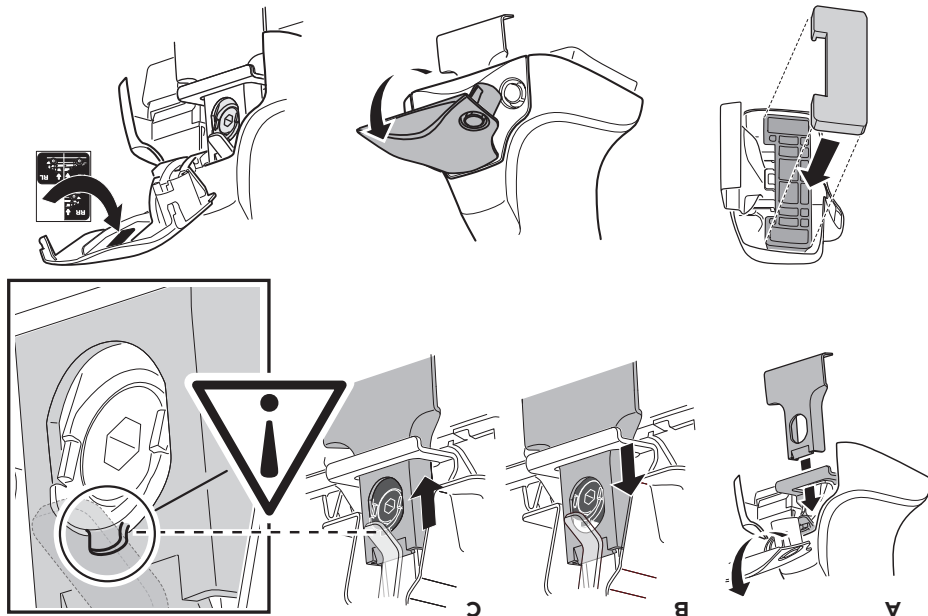


  FORD F-150, 4-dr Double Cab, 15-
FORD Super Duty, 4-dr Crew Cab, 17-
FORD Super Duty, 4-dr Super Cab, 17-

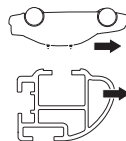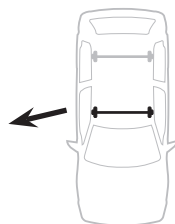


3

Y inch	Y mm
--------	------

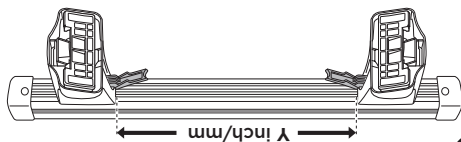 
 






L

 mm x inch x



L

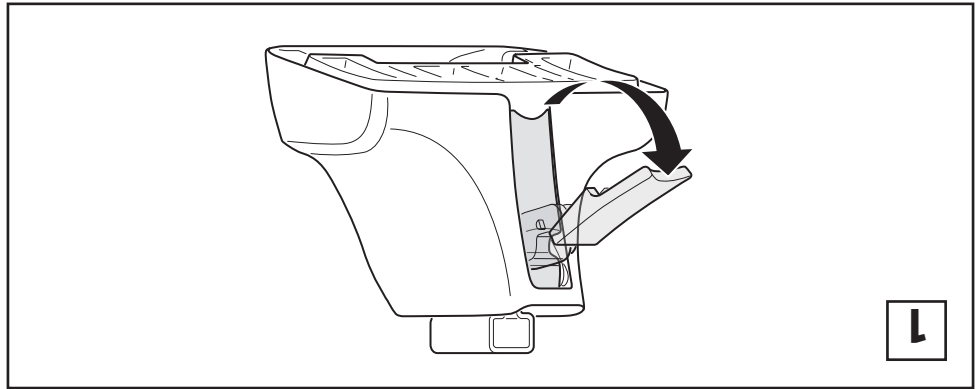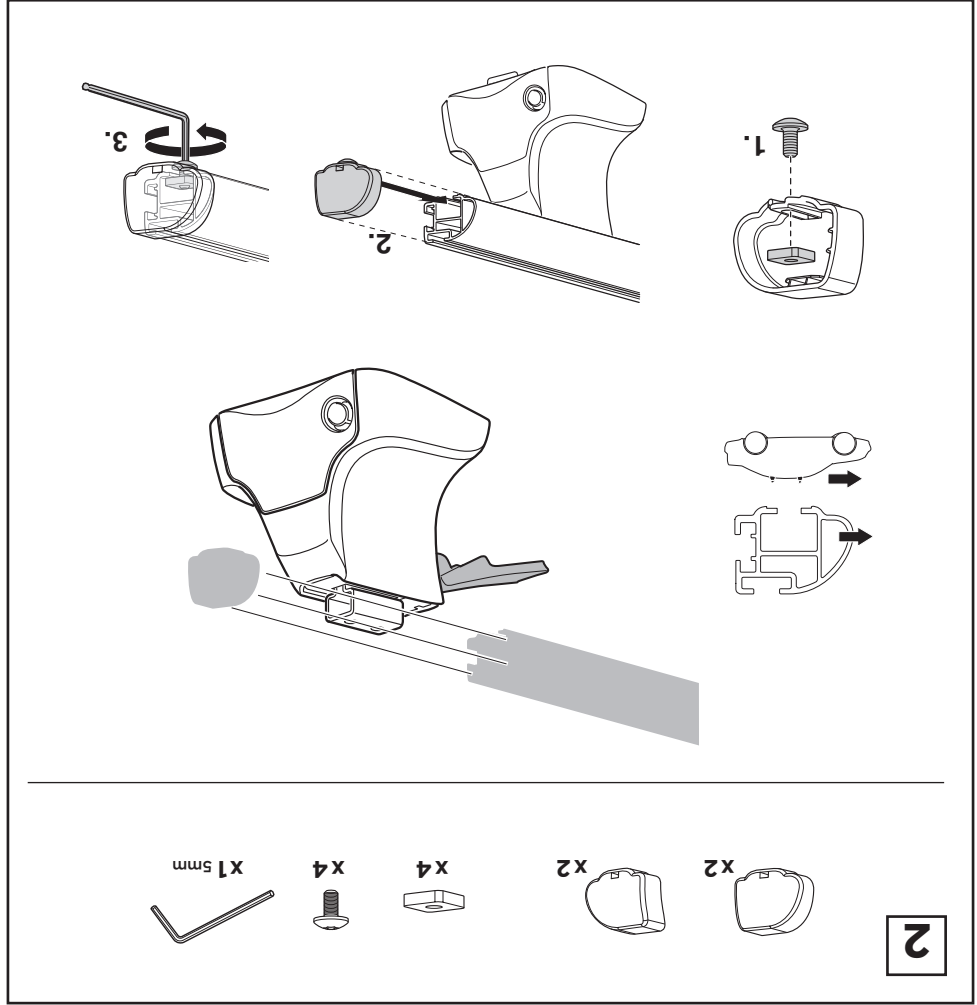  

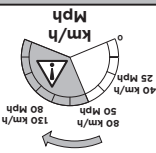    


Kit 1787

FORD F-150, 4-dr Double Cab, 15-
FORD Super Duty, 4-dr Crew Cab, 17-
FORD Super Duty, 4-dr Super Cab, 17-

instructions

 480R
754

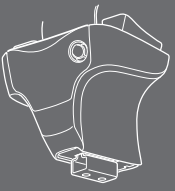

ISO 11154-E

THULE
SWEDEN
PROFESSIONAL

C.20160926 519-1787-02