







Thule Rapid System Kit 1106

> Instructions

FIAT Seicento, 3-dr Hatchback, 98-00, 01-04

FIAT 600, 3-dr Hatchback, 05-10

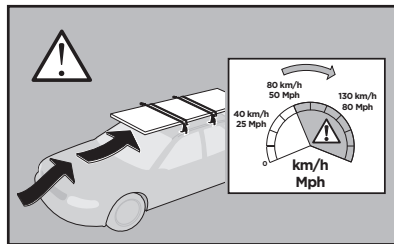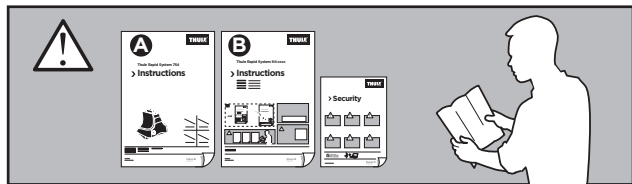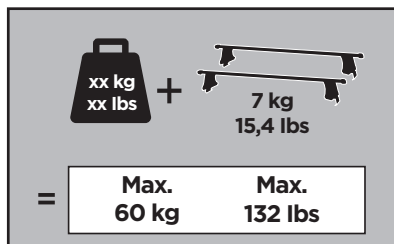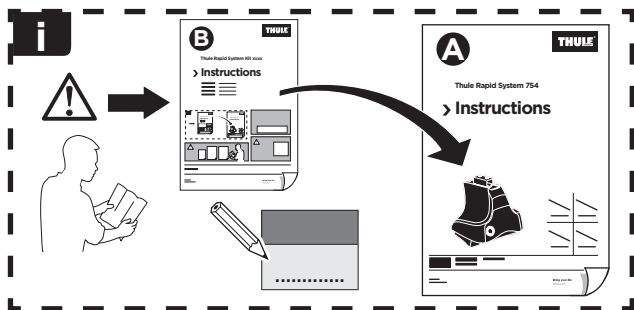


ISO 11154-E

141106

C.20150617
519-1106-04

Bring your life

thule.com


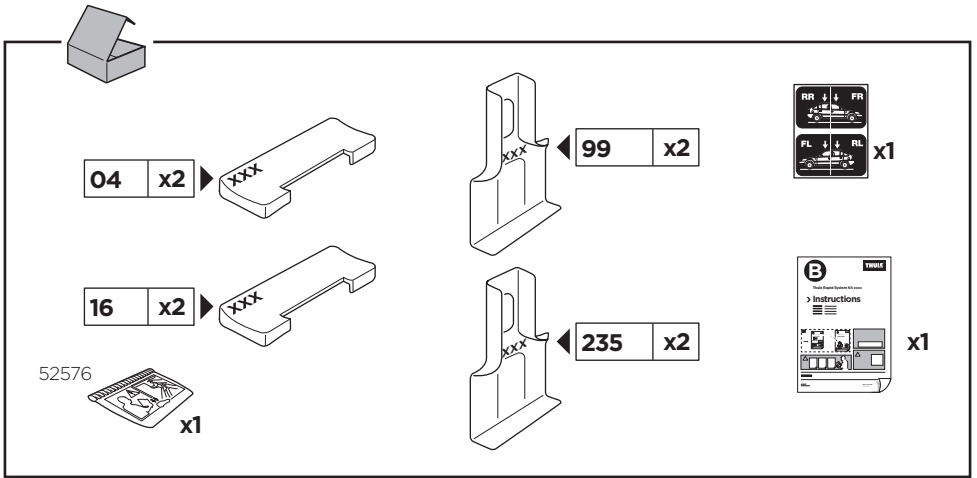


52576



1

	X (scale)	X (mm)	X (inch)
FIAT Seicento , 3-dr Hatchback, 98-00, 01-04	18,5	836	32 ⁷ / ₈
FIAT 600 , 3-dr Hatchback, 05-10	18,5	836	32 ⁷ / ₈

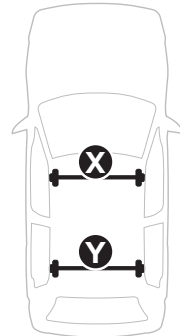
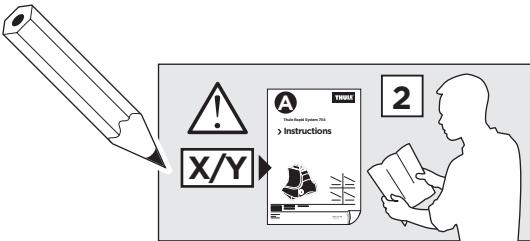


	Y (scale)	Y (mm)	Y (inch)
FIAT Seicento , 3-dr Hatchback, 98-00, 01-04	19	841	33 ¹ / ₈
FIAT 600 , 3-dr Hatchback, 05-10	19	841	33 ¹ / ₈



2

FIAT Seicento, 3-dr Hatchback, 98-00, 01-04

FIAT 600, 3-dr Hatchback, 05-10

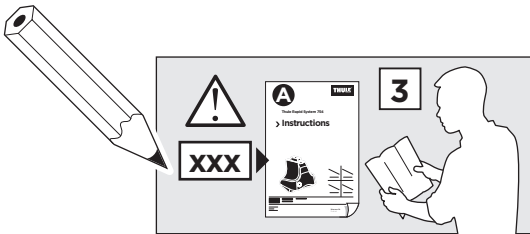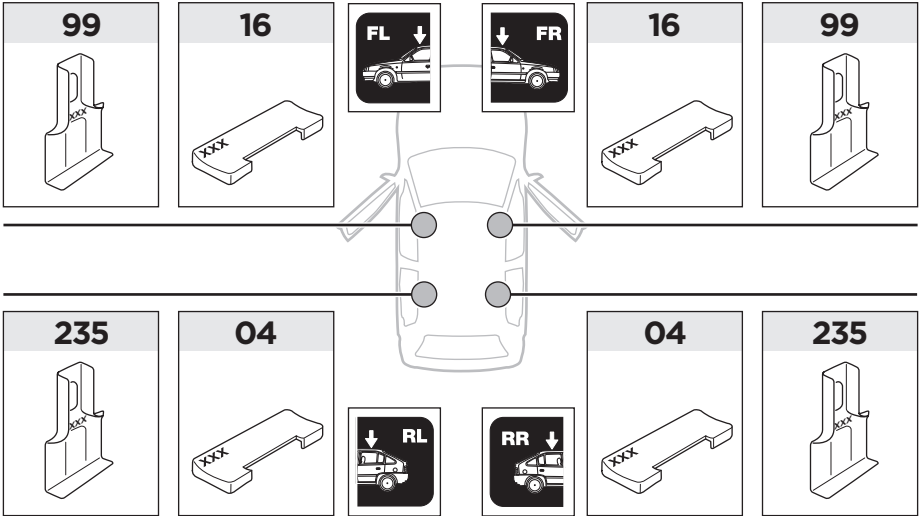

3

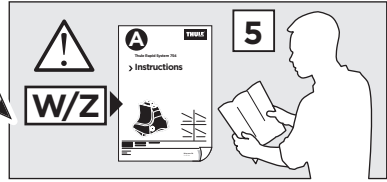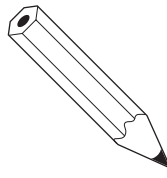

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Seicento , 3-dr Hatchback, 98-00, 01-04	215	700	8 1/2	27 1/2
FIAT 600 , 3-dr Hatchback, 05-10	215	700	8 1/2	27 1/2

