

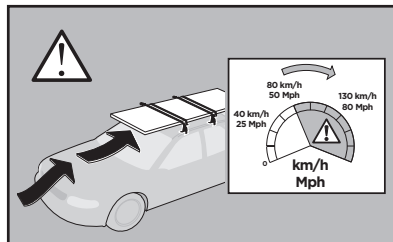


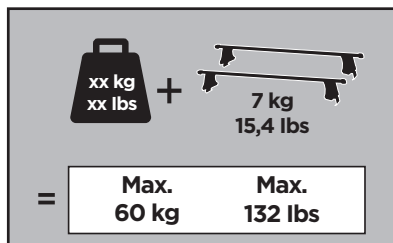

## Thule Rapid System Kit 1267

# > Instructions


TOYOTA Alphard, 5-dr MPV, 02-08

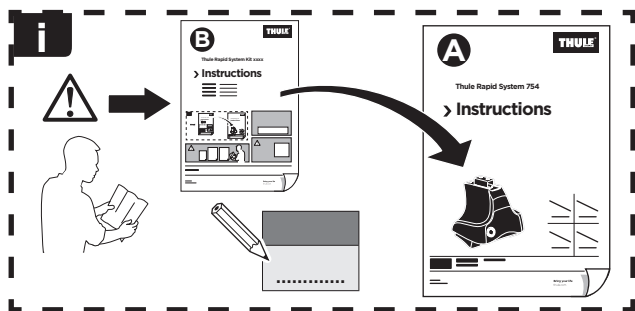

ISO 11154-E


141267  
C.20160303  
519-1267-02

Bring your life  
thule.com

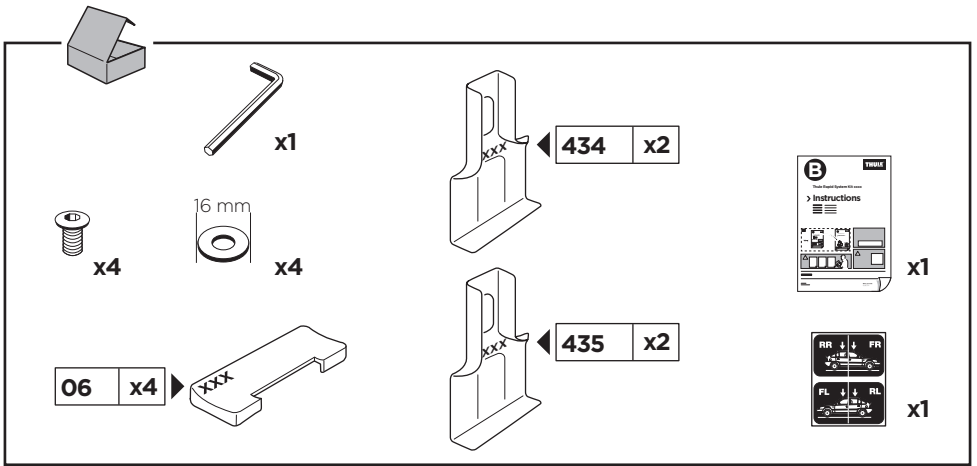

**1**


	X (scale)	X (mm)	X (inch)
<b>TOYOTA Alphard</b> , 5-dr MPV, 02-08	<b>46</b>	<b>1111</b>	<b>43 <sup>3</sup>/<sub>4</sub></b>

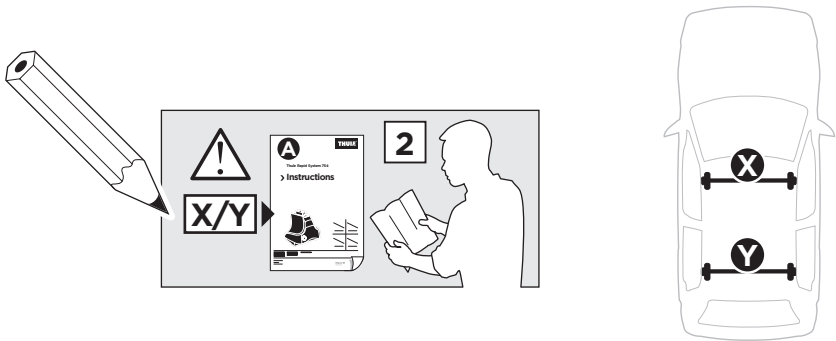


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Alphard</b> , 5-dr MPV, 02-08	<b>44</b>	<b>1091</b>	<b>43</b>

2


TOYOTA Alphard, 5-dr MPV, 02-08

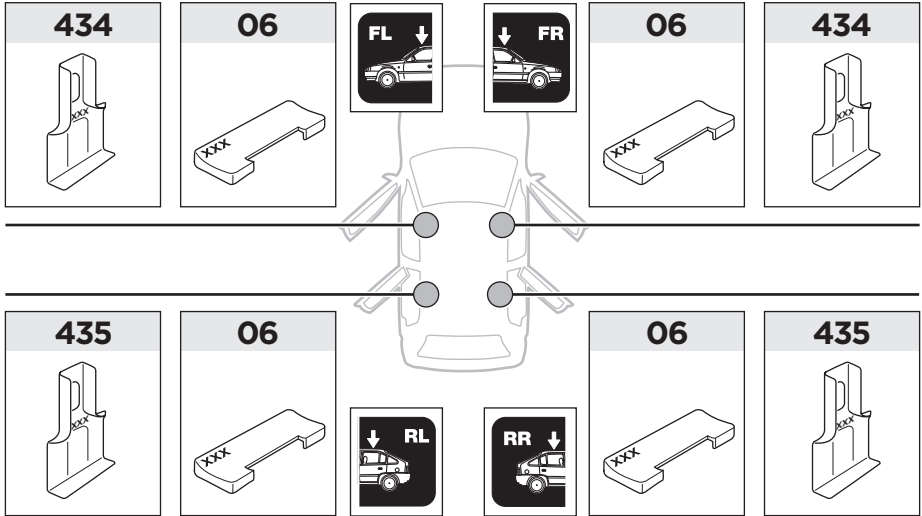

3

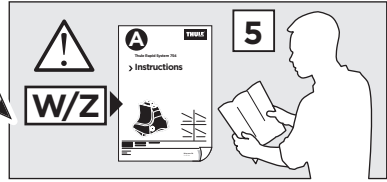

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Alphard</b> , 5-dr MPV, 02-08	<b>810</b>	<b>700</b>	<b>31 7/8</b>	<b>27 1/2</b>

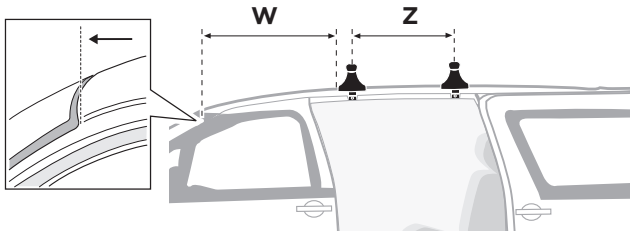

x1



x4



x4

