
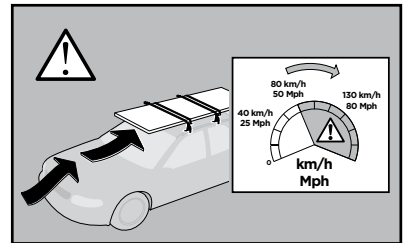
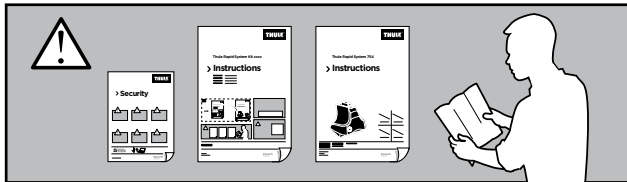
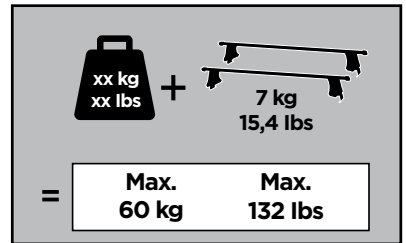


# Thule Rapid System Kit 1287

# > Instructions


**TOYOTA Landcruiser Prado**, 5-dr SUV, 02-  
**TOYOTA Landcruiser 90**, 5-dr SUV, 02-03  
**TOYOTA Landcruiser (120)**, 5-dr SUV, 04-

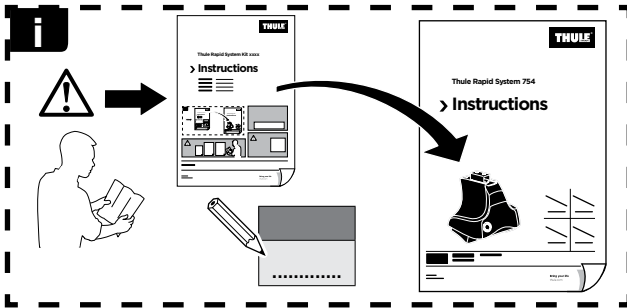


ISO 11154-E



111 x2



113 x2




477 x2



551 x2





x1



x1

# 1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-	48	1131	44 1/2
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	48	1131	44 1/2
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-	48	1131	44 1/2

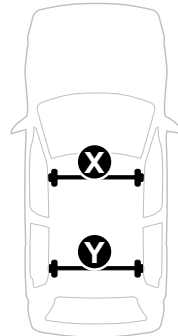
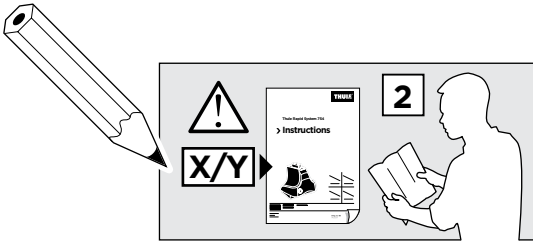


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-	44	1091	43
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	44	1091	43
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-	44	1091	43

**2**

**TOYOTA Landcruiser Prado**, 5-dr SUV, 02-  
**TOYOTA Landcruiser 90**, 5-dr SUV, 02-03  
**TOYOTA Landcruiser (120)**, 5-dr SUV, 04-

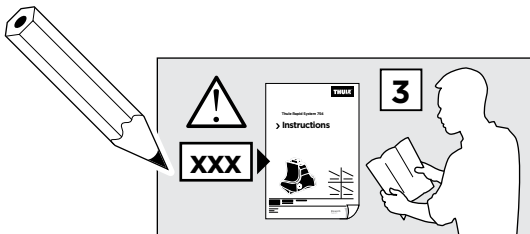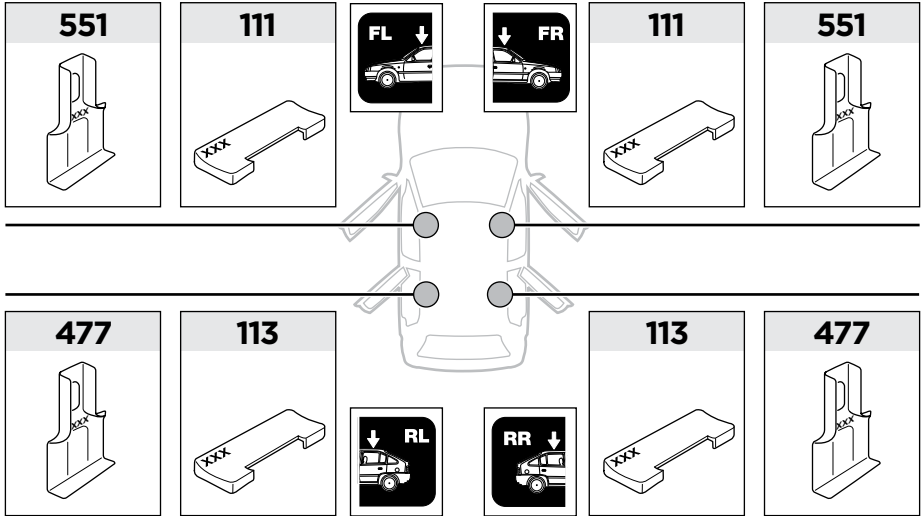

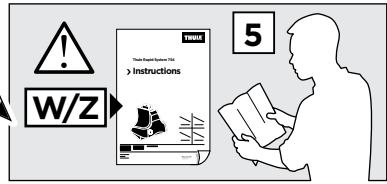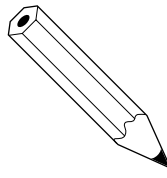**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Landcruiser Prado</b> , 5-dr SUV, 02-	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>
<b>TOYOTA Landcruiser 90</b> , 5-dr SUV, 02-03	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>
<b>TOYOTA Landcruiser (120)</b> , 5-dr SUV, 04-	<b>355</b>	<b>710</b>	<b>14</b>	<b>28</b>

