
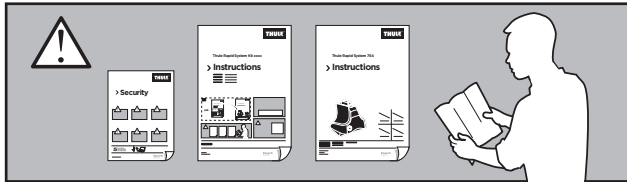
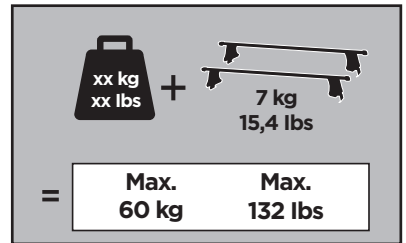


Thule Rapid System Kit 1288

> Instructions

TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07

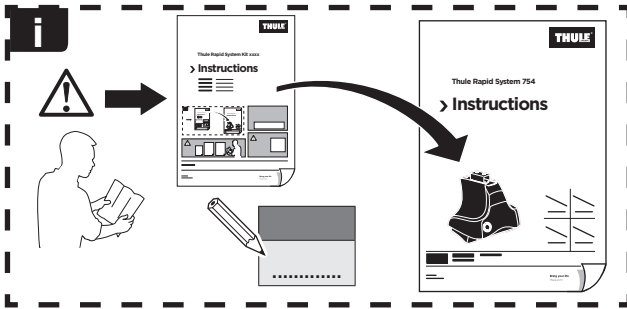

ISO 11154-E


141288

C.20130117
519-1288-01

Bring your life
thule.com



109 x4




552 x2



x1



553 x2



x1

1


| | X (scale) | X (mm) | X (inch) |
|---|-----------|--------|----------|
| TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07 | 58 | 1231 | 48 1/2 |

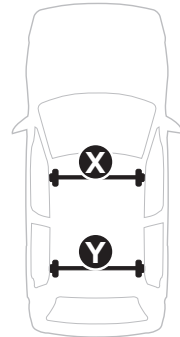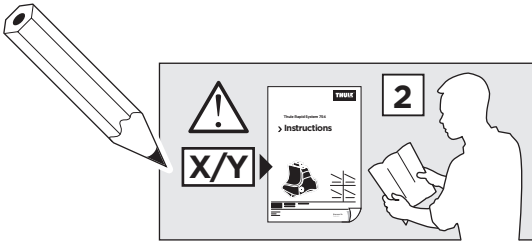


| | Y (scale) | Y (mm) | Y (inch) |
|---|-----------|--------|----------|
| TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07 | 56 | 1211 | 47 5/8 |

2

TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07

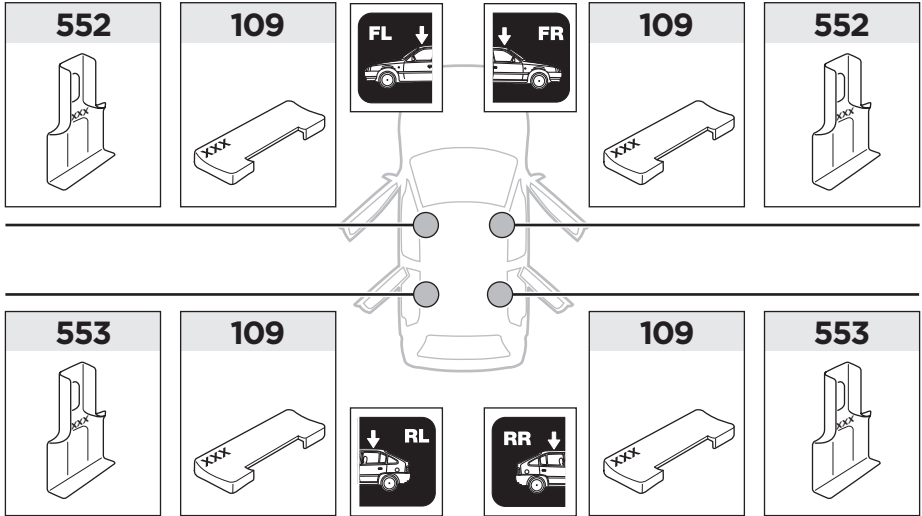

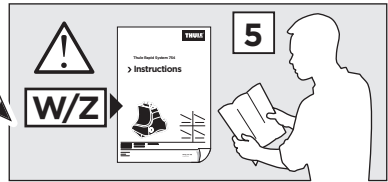3

| | W (mm) | Z (mm) | W (inch) | Z (inch) |
|--|------------|------------|---------------|-----------|
| TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07 | 385 | 710 | 15 1/8 | 28 |

