







## Thule Rapid System Kit 1316

# > Instructions

**TOYOTA Succeed**, 5-dr Estate, 02-

**TOYOTA Probox**, 5-dr Estate, 02-

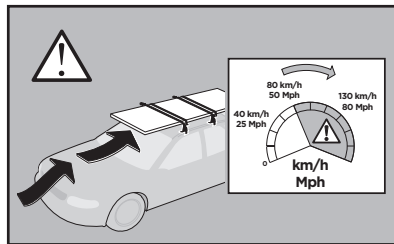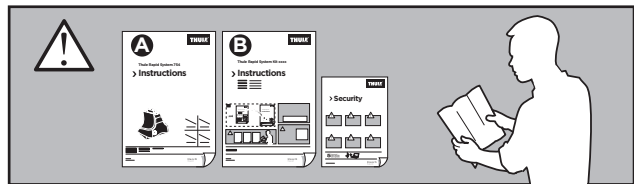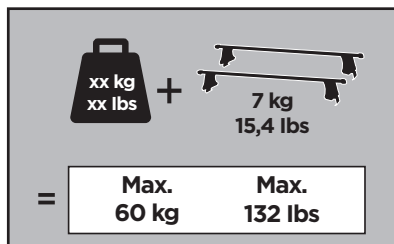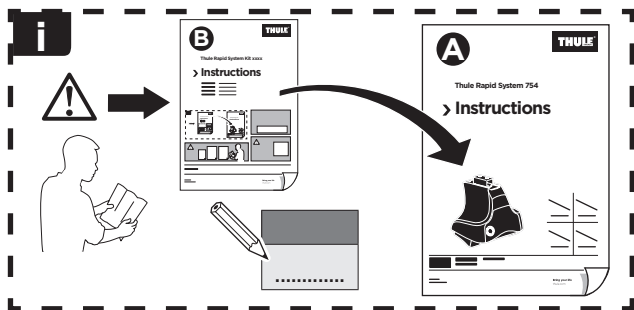

ISO 11154-E

141316

C.20130619  
519-1316-01


Bring your life

thule.com



x1

119 x4






505 x4



x1

1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Succeed</b> , 5-dr Estate, 02-	39	1041	41
<b>TOYOTA Probox</b> , 5-dr Estate, 02-	39	1041	41

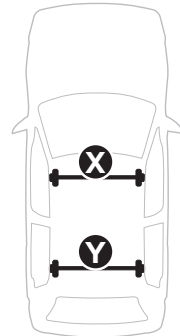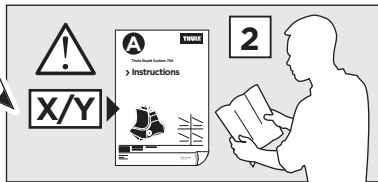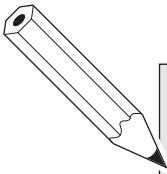


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Succeed</b> , 5-dr Estate, 02-	37	1021	40 1/4
<b>TOYOTA Probox</b> , 5-dr Estate, 02-	37	1021	40 1/4

2

TOYOTA Succeed, 5-dr Estate, 02-  
TOYOTA Probox, 5-dr Estate, 02-

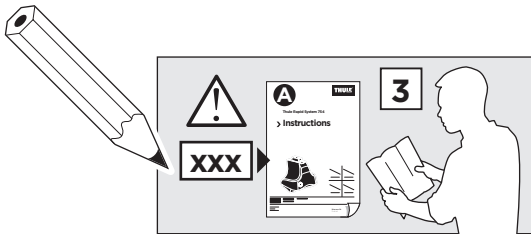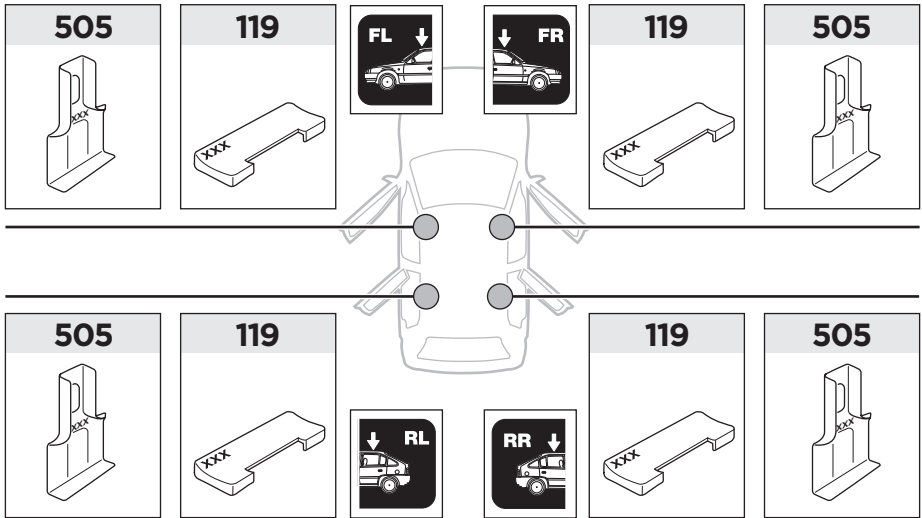

3

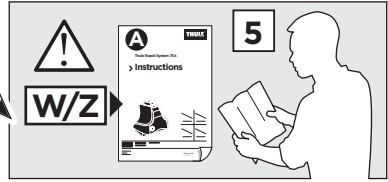

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Succeed</b> , 5-dr Estate, 02-	<b>430</b>	<b>705</b>	<b>16 7/8</b>	<b>27 3/4</b>
<b>TOYOTA Probox</b> , 5-dr Estate, 02-	<b>430</b>	<b>705</b>	<b>16 7/8</b>	<b>27 3/4</b>

