
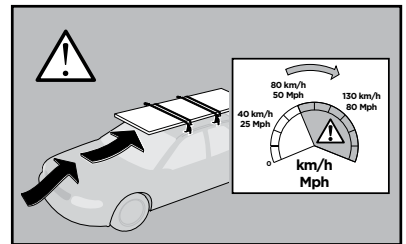
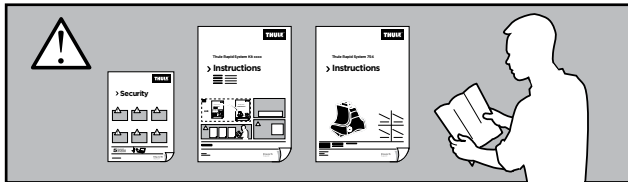
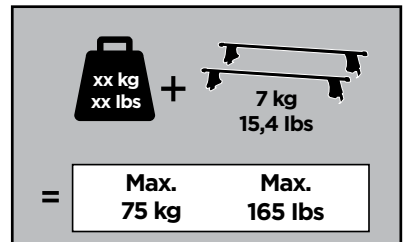


Thule Rapid System Kit 1384

> Instructions

TOYOTA Estima, 5-dr MPV, 06-

TOYOTA Tarago (MK.II), 5-dr MPV, 06- (AU)

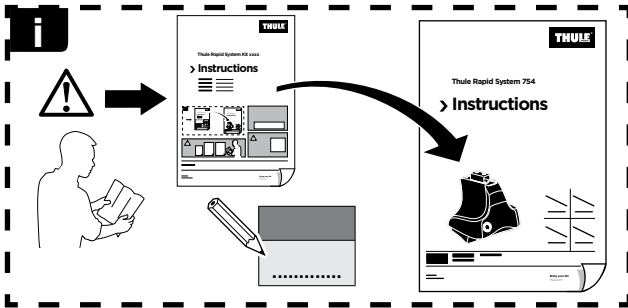

ISO 11154-E

141384


C.20121010
519-1384-01

Bring your life

thule.com



172 x4




769 x2



770 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Estima , 5-dr MPV, 06-	36,5	1016	40
TOYOTA Tarago (MK.II) , 5-dr MPV, 06- (AU)	36,5	1016	40

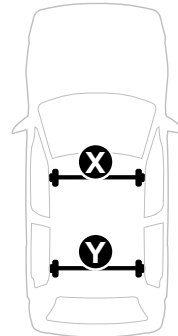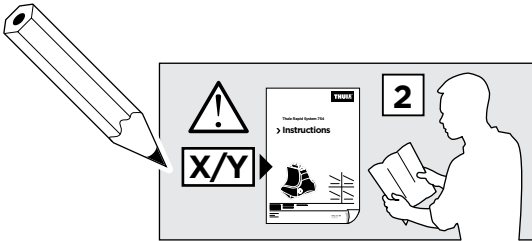


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Estima , 5-dr MPV, 06-	33,5	986	38 7/8
TOYOTA Tarago (MK.II) , 5-dr MPV, 06- (AU)	33,5	986	38 7/8

2

TOYOTA Estima, 5-dr MPV, 06-
TOYOTA Tarago (MK.II), 5-dr MPV, 06- (AU)

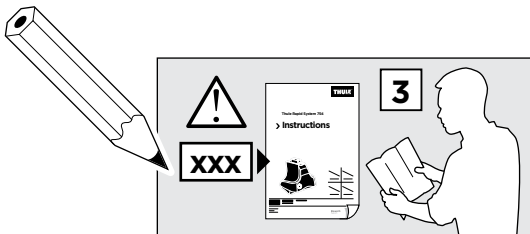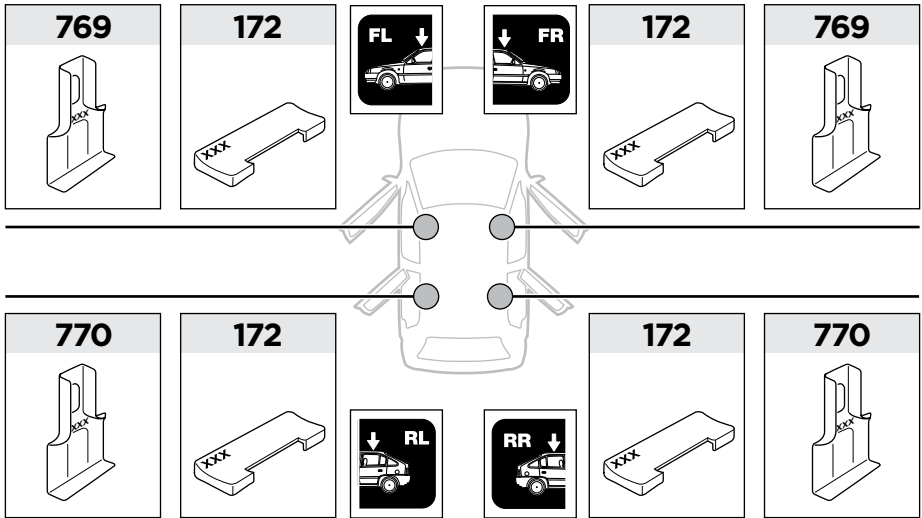

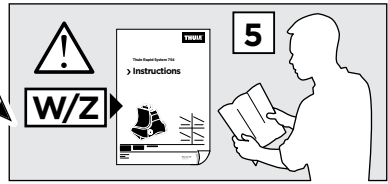3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Estima , 5-dr MPV, 06-	735	710	28 ⁷/₈	28
TOYOTA Tarago (MK.II) , 5-dr MPV, 06- (AU)	735	710	28 ⁷/₈	28

