
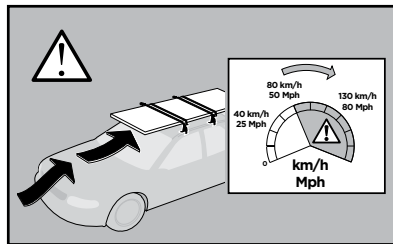
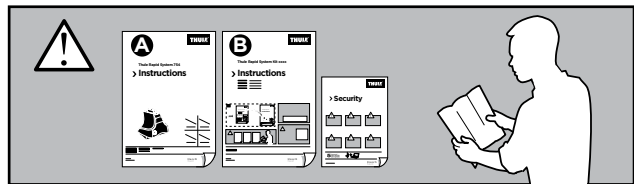
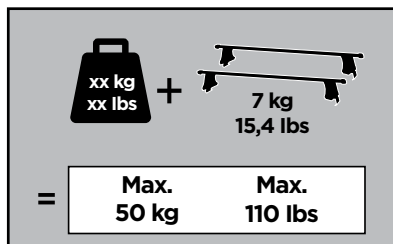


## Thule Rapid System Kit 1549

# > Instructions

ACURA MDX, 5-dr SUV, 07-13 (w/o factory rack)



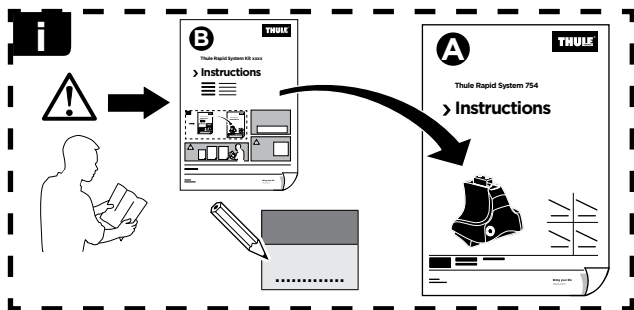


ISO 11154-E

141549



C.20151012  
519-1549-05

Bring your life  
thule.com

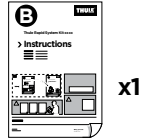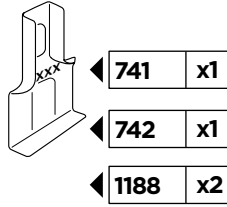

1



	X (scale)	X (mm)	X (inch)
<b>ACURA MDX, 5-dr SUV, 07-13 (w/o factory rack)</b>	<b>56</b>	<b>1213</b>	<b>47 3/4</b>

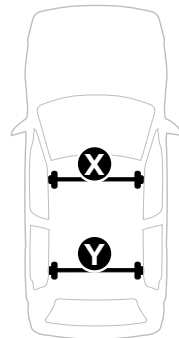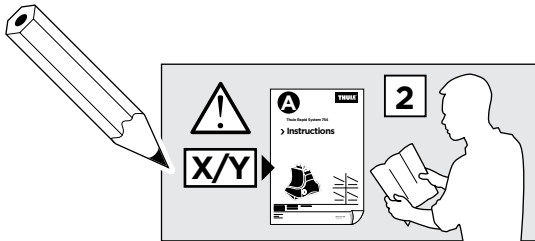


	Y (scale)	Y (mm)	Y (inch)
<b>ACURA MDX, 5-dr SUV, 07-13 (w/o factory rack)</b>	<b>49,5</b>	<b>1146</b>	<b>45 1/8</b>

**2**

**ACURA MDX, 5-dr SUV, 07-13 (w/o factory rack)**

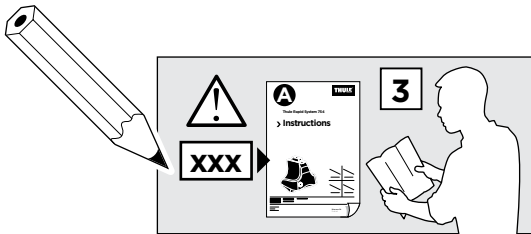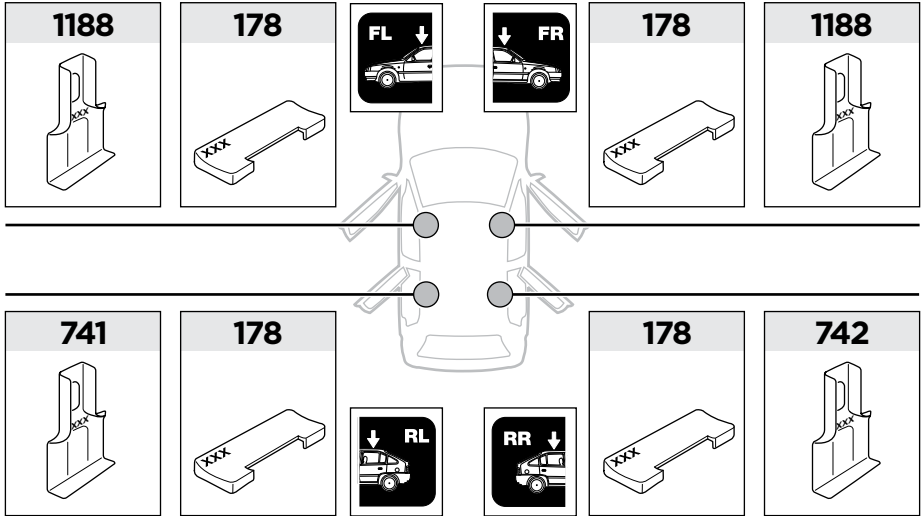

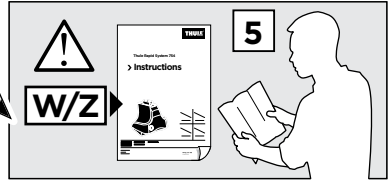**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>ACURA MDX, 5-dr SUV, 07-13 (w/o factory rack)</b>	<b>279</b>	<b>787</b>	<b>11</b>	<b>31</b>

