



## Thule Rapid System Kit 1556





# > Instructions

**FORD F-150**, 2-dr Standard Cab, 04-08

**FORD F-150**, 4-dr Super Cab, 04-08

**FORD F-150**, 4-dr Crew Cab, 04-08

**LINCOLN Mark LT**, 4-dr Crew Cab, 04-06

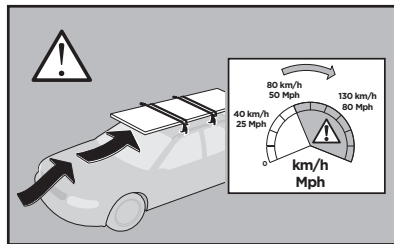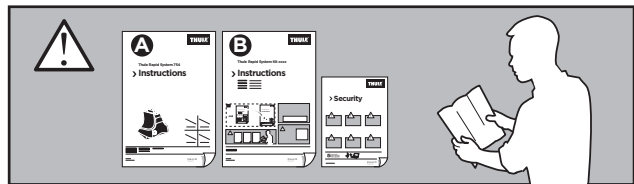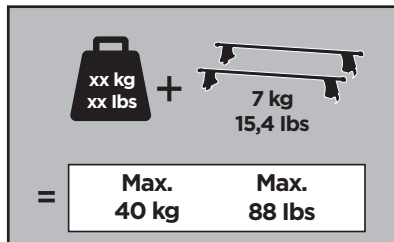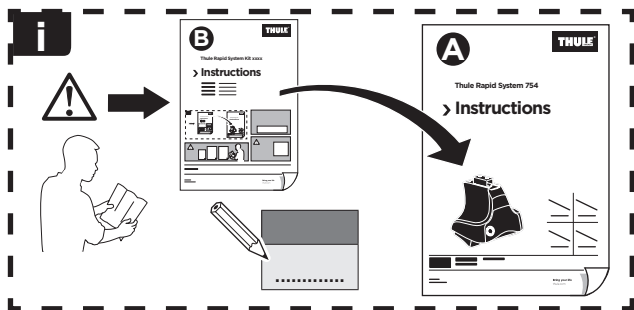


ISO 11154-E

141556


C.20130626  
519-1556-02

Bring your life  
thule.com

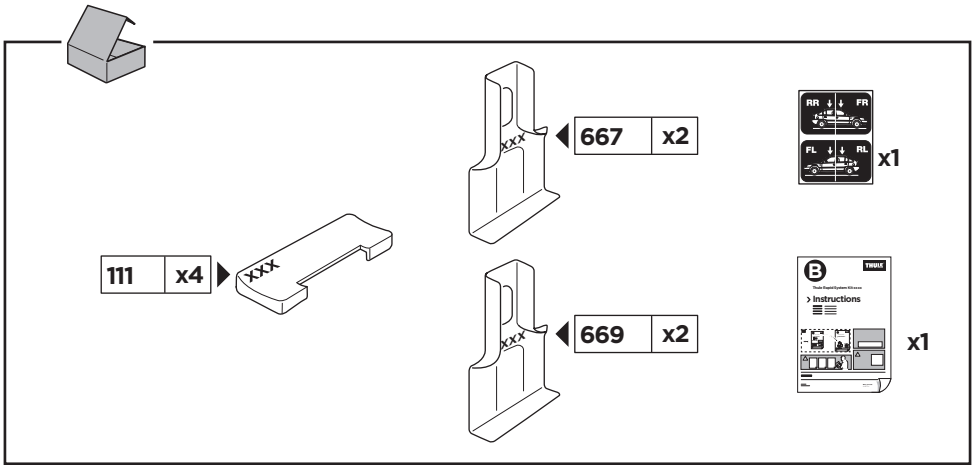



# 1

	X (scale)	X (mm)	X (inch)
<b>FORD F-150, 2-dr Standard Cab, 04-08</b>	<b>61</b>	<b>1261</b>	<b>49 3/4</b>
<b>FORD F-150, 4-dr Super Cab, 04-08</b>	<b>61</b>	<b>1261</b>	<b>49 3/4</b>
<b>FORD F-150, 4-dr Crew Cab, 04-08</b>	<b>61</b>	<b>1261</b>	<b>49 3/4</b>
<b>LINCOLN Mark LT, 4-dr Crew Cab, 04-06</b>	<b>61</b>	<b>1261</b>	<b>49 3/4</b>

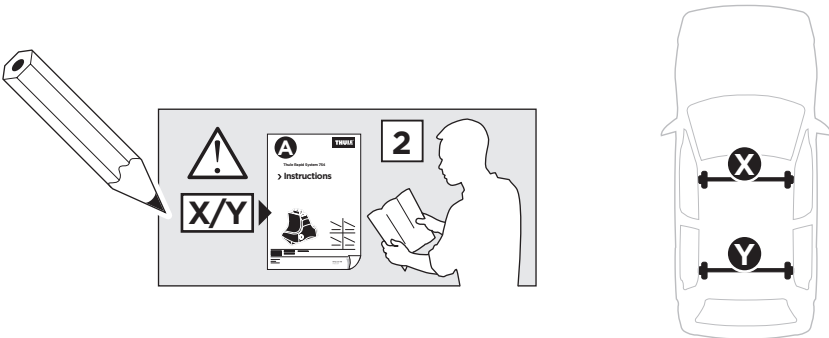


	Y (scale)	Y (mm)	Y (inch)
<b>FORD F-150, 2-dr Standard Cab, 04-08</b>	<b>60,5</b>	<b>1256</b>	<b>49 1/8</b>
<b>FORD F-150, 4-dr Super Cab, 04-08</b>	<b>59,5</b>	<b>1246</b>	<b>49</b>
<b>FORD F-150, 4-dr Crew Cab, 04-08</b>	<b>59,5</b>	<b>1246</b>	<b>49</b>
<b>LINCOLN Mark LT, 4-dr Crew Cab, 04-06</b>	<b>59,5</b>	<b>1246</b>	<b>49</b>

2

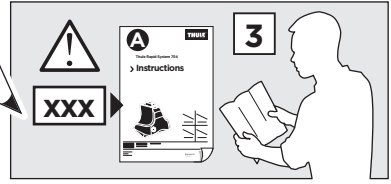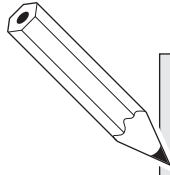


**FORD F-150, 2-dr Standard Cab, 04-08**

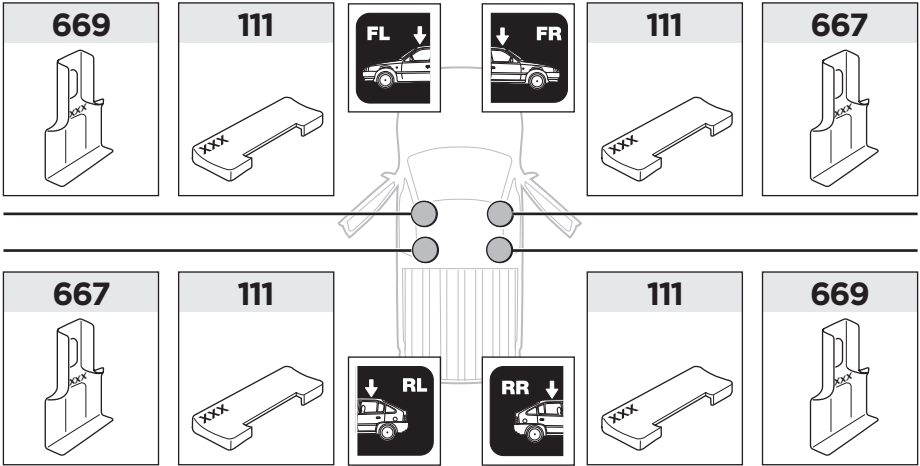


**FORD F-150, 4-dr Super Cab, 04-08**

**FORD F-150, 4-dr Crew Cab, 04-08**

**LINCOLN Mark LT, 4-dr Crew Cab, 04-06**


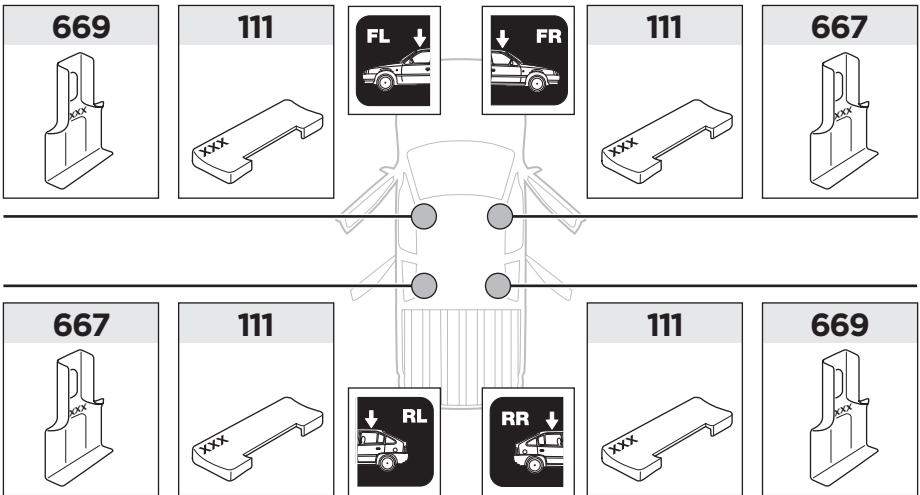


**3**

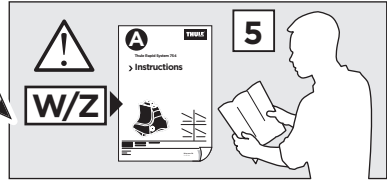

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD F-150</b> , 2-dr Standard Cab, 04-08	<b>280</b>	<b>350</b>	<b>11</b>	<b>13 3/4</b>
<b>FORD F-150</b> , 4-dr Super Cab, 04-08	<b>280</b>	<b>700</b>	<b>11</b>	<b>27 1/2</b>
<b>FORD F-150</b> , 4-dr Crew Cab, 04-08	<b>280</b>	<b>700</b>	<b>11</b>	<b>27 1/2</b>
<b>LINCOLN Mark LT</b> , 4-dr Crew Cab, 04-06	<b>280</b>	<b>700</b>	<b>11</b>	<b>27 1/2</b>

**FORD F-150**, 2-dr Standard Cab, 04-08

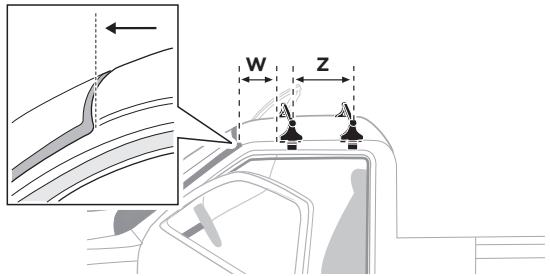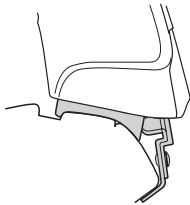

**FORD F-150**, 4-dr Super Cab, 04-08

**FORD F-150**, 4-dr Crew Cab, 04-08

**LINCOLN Mark LT**, 4-dr Crew Cab, 04-06

