
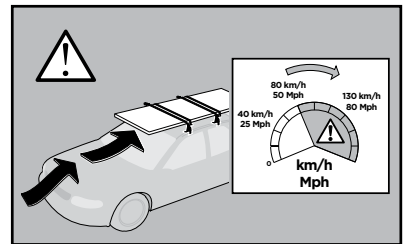
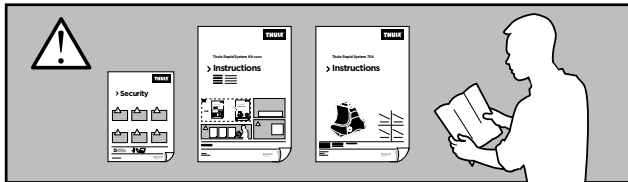
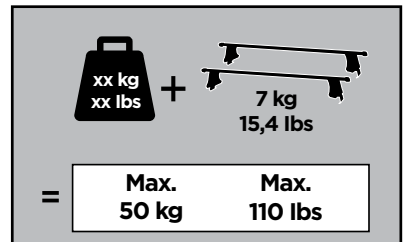


Thule Rapid System Kit 1609

> Instructions

PERODUA Alza, 5-dr MPV, 09-

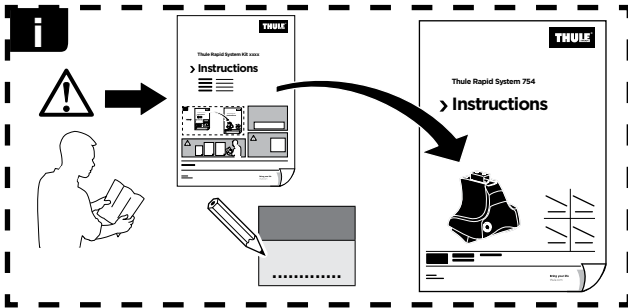

ISO 11154-E


141609

C.20120920
519-1609-01


Bring your life
thule.com




120 x1



121 x1



162 x2




1109 x2



1110 x2





x1



x1

1


	X (scale)	X (mm)	X (inch)
PERODUA Alza, 5-dr MPV, 09-	37	1022	40 1/4

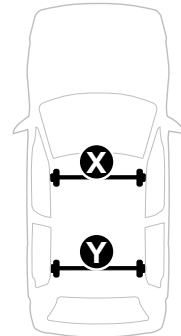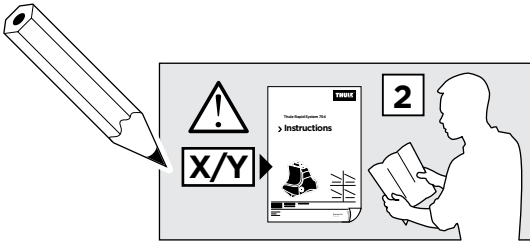


	Y (scale)	Y (mm)	Y (inch)
PERODUA Alza, 5-dr MPV, 09-	36	1012	39 3/4

2

PERODUA Alza, 5-dr MPV, 09-

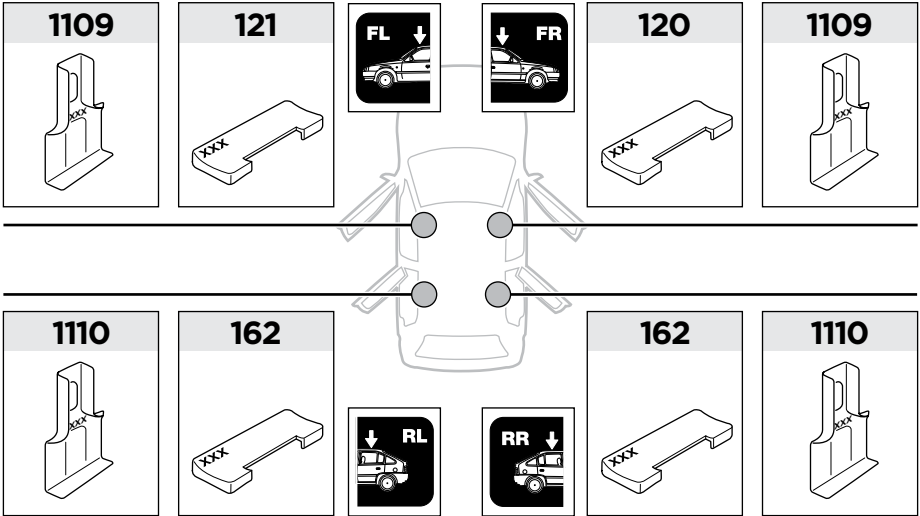

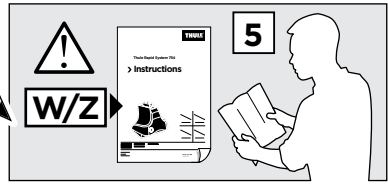3

	W (mm)	Z (mm)	W (inch)	Z (inch)
PERODUA Alza, 5-dr MPV, 09-	470	700	18 1/2	27 1/2

