

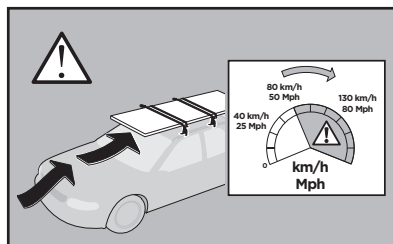
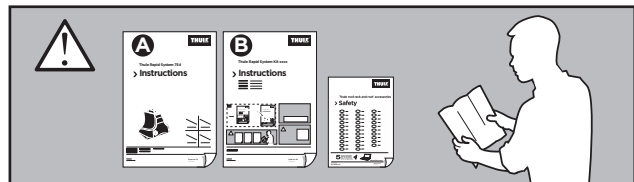


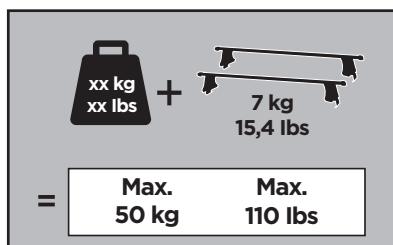

# Thule Rapid System Kit 1811

# > Instructions

HONDA Pilot, 5-dr SUV, 16-

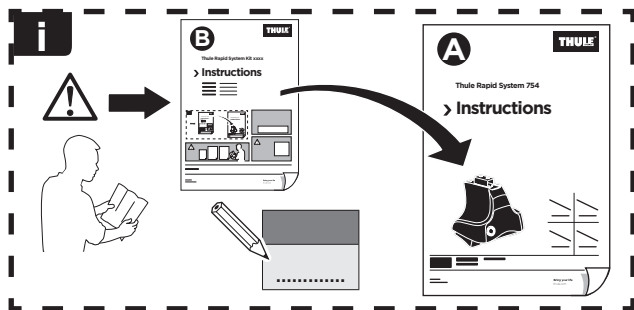


ISO 11154-E

141811  
C.20160205  
519-1811-01


Bring your life  
thule.com



265 x2



170 x2



271 x2



660 x2






x1



x1



1

	X (scale)	X (mm)	X (inch)
HONDA Pilot, 5-dr SUV, 16-	56	1211	47 <sup>5</sup> / <sub>8</sub>

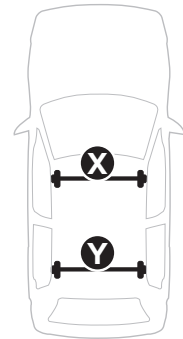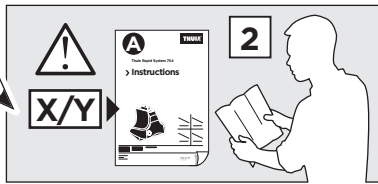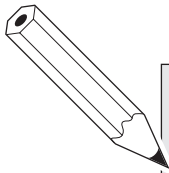


	Y (scale)	Y (mm)	Y (inch)
HONDA Pilot, 5-dr SUV, 16-	52	1171	46 <sup>1</sup> / <sub>8</sub>

2

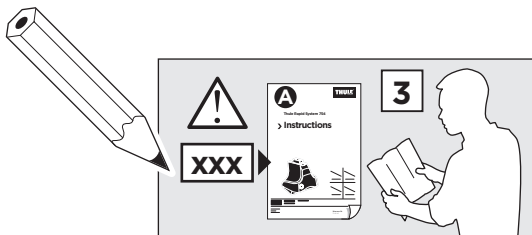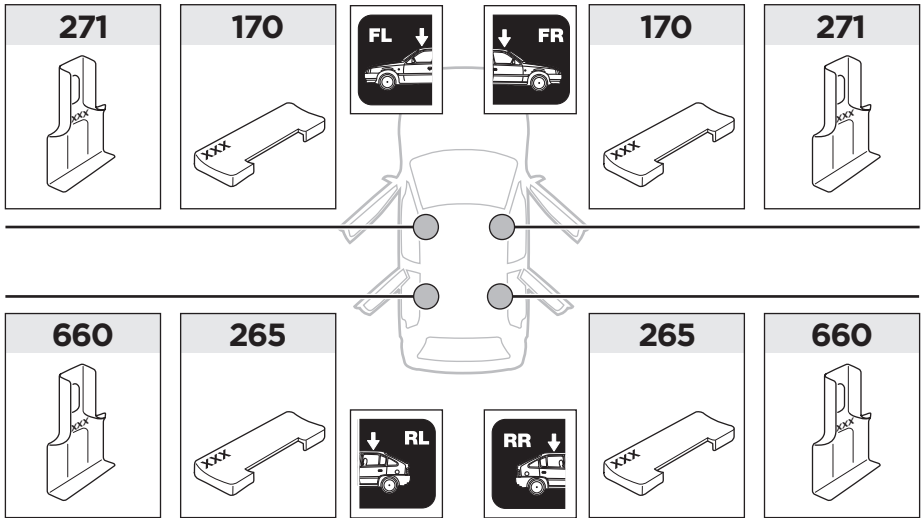

3

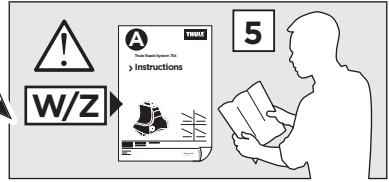

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HONDA Pilot, 5-dr SUV, 16-</b>	<b>490</b>	<b>790</b>	<b>19 1/4</b>	<b>31 1/8</b>

