
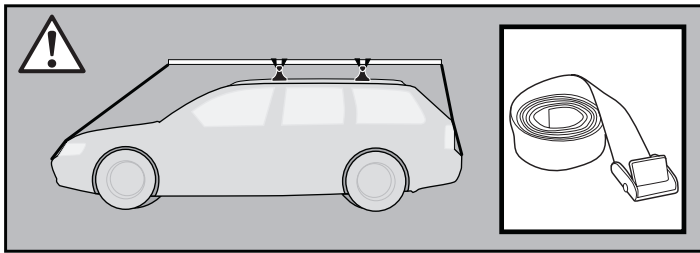
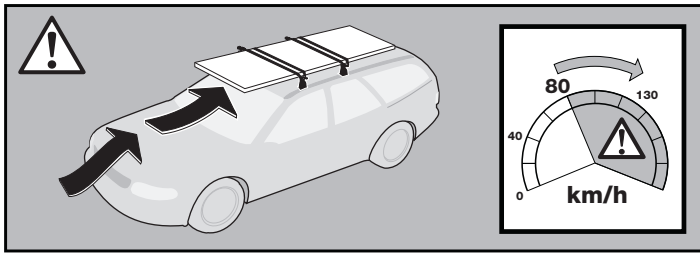



THULE®

SWEDEN

- S** Monteringsanvisning
- GB** Fitting instructions
- D** Montageanleitung
- F** Instructions de montage
- NL** Montage-instructies
- FIN** Asennusohje
- E** Instrucciones de montaje
- I** Istruzioni per il montaggio
- CZ** Návod na montáž
- PL** Instrukcja montażu
- HU** Szerelési utasítások
- RU** Инструкции по установке
- EST** Paigalduseeskirjad
- SLO** Navodila za pritrdjevanje
- 한국어 장착 지침
- 日本語 取扱(取付)説明書
- 中文 安装说明

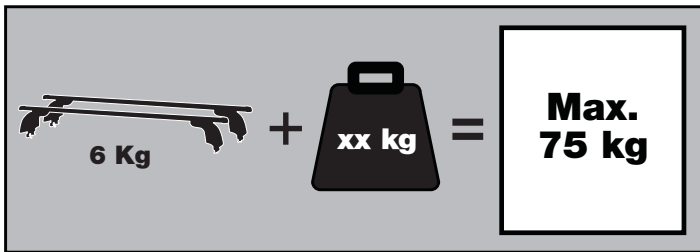

Citroën C5, 4-dr Sedan, 01-
Citroën C5, 5-dr Estate, 01- (Without roof railing)

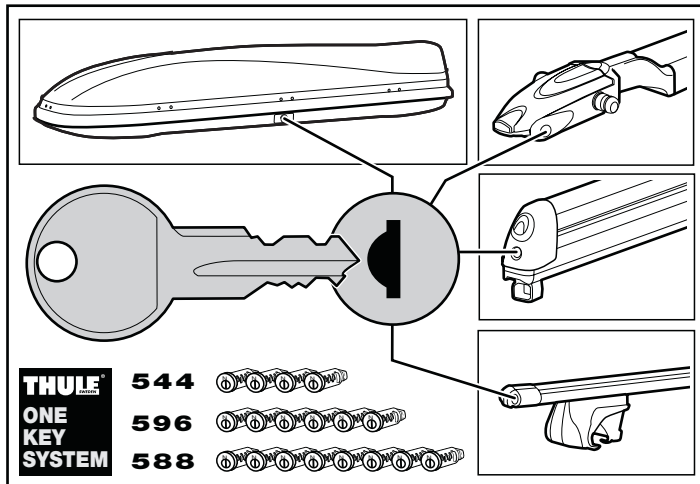

Se não houver instruções no seu idioma, entre em contato com os funcionários do estabelecimento para obter informações

Αν οι οδηγίες δεν εκτυπώνονται στη γλώσσα σας, παρακαλούμε ζητήστε πληροφορίες από το προσωπικό του καταστήματος.

Eğer talimatlar dilinizde basılı değilse, lütfen atölye personelinden bilgi isteyiniz.

ถ้าไม่มีคำแนะนำในภาษาของคุณ โปรดติดต่อพนักงานในร้านเพื่อขอข้อมูล

RAPID FIXPOINT XT

3008
1270-1-3008



Follow me...

THULE®


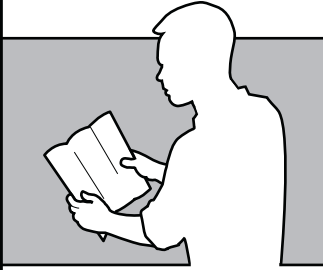
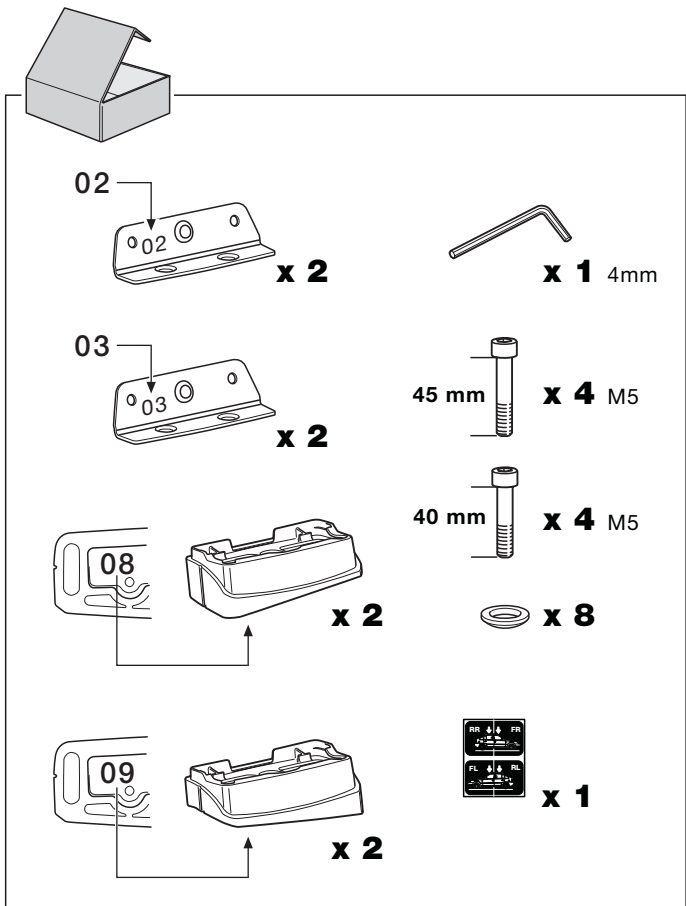
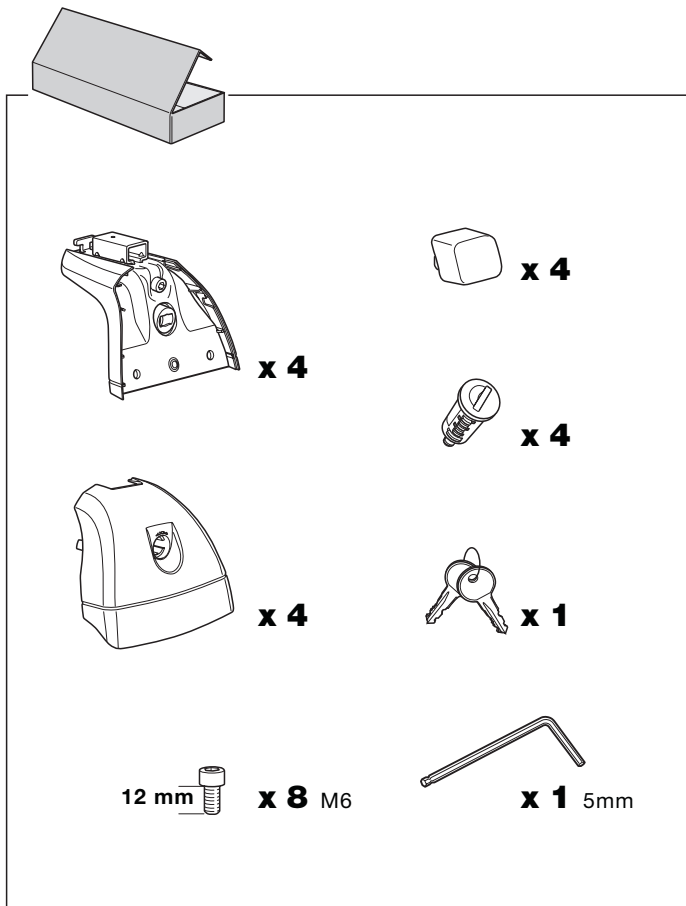
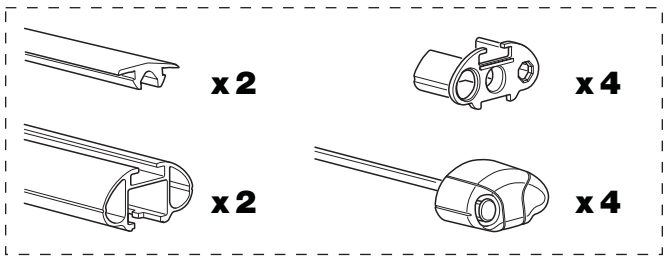
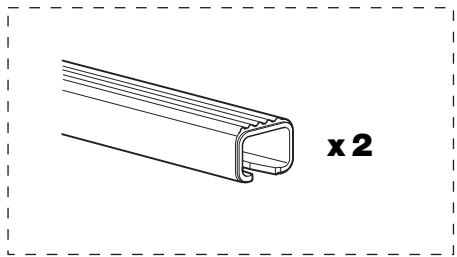
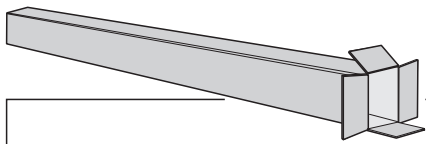
SWEDEN

Box 69, 330 33 Hillerstorp, SWEDEN
www.thule.com



548•3DFBF/501-3008-03

THULE
SWEDESK











S Säkerhetsföreskrifter
 GB Safety regulations
 D Sicherheits-Vorschriften
 F Instructions importantes
 NL Veiligheidsvoorschriften
 FIN Turvallisuusohjeet
 E Reglas de seguridad
 I Norme di sicurezza
 CZ Návod na montáž
 PL Wykaz ważnych przepisów
 PT Normas de segurança
 GR Αποφασισμοί ασφαλείας
 TR Güvenlik Kuralları
 HU Biztonsági előírások
 RU Инструкция по безопасности
 HR Pravila sigurnosti
 EST Ohutusjuhised
 LTJ Saugumo taisyklės
 LAT Drošības noteikumi
 SLG Varnostna predpisa
 KOR 안전 주의
 THAI มาตรการความปลอดภัย
 日本語 下記の事に注意してください



















1


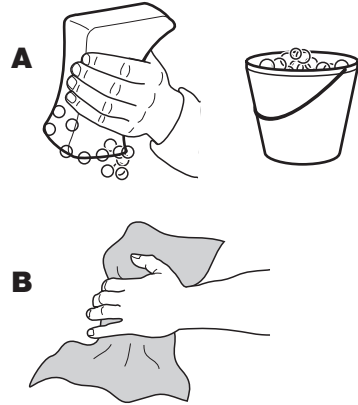
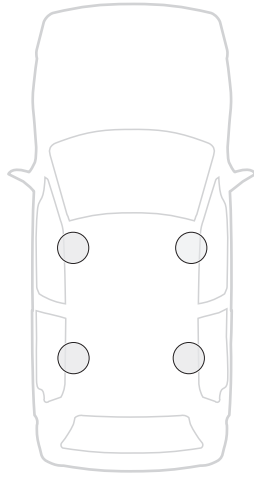


2

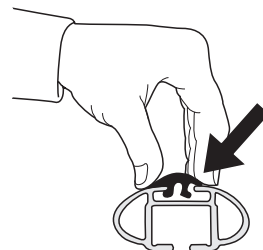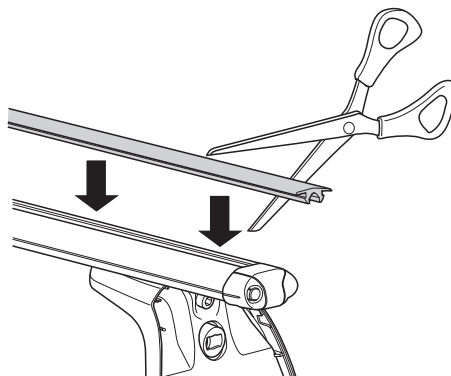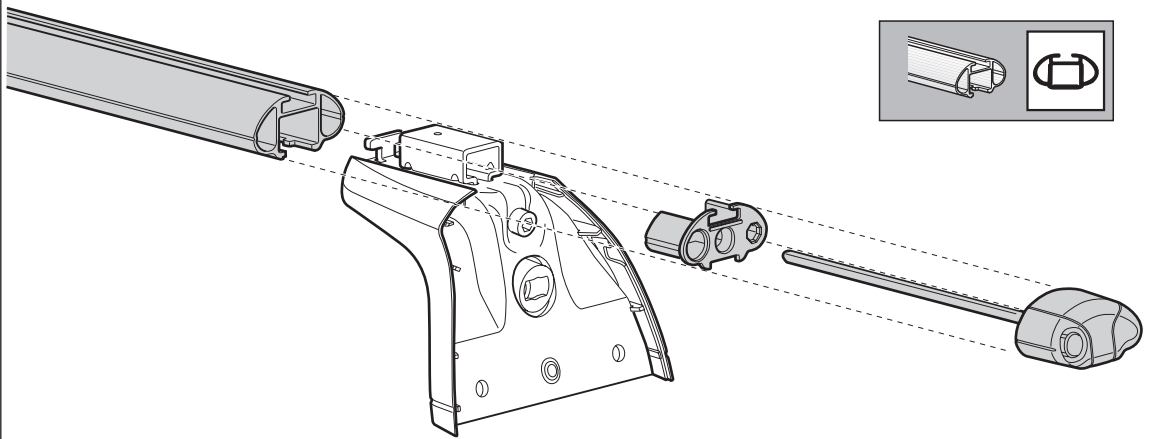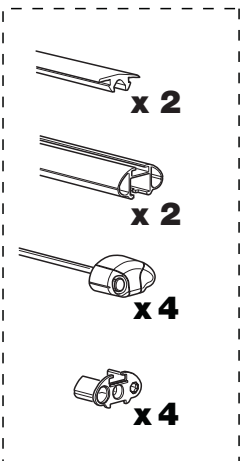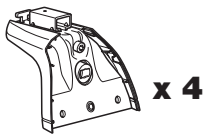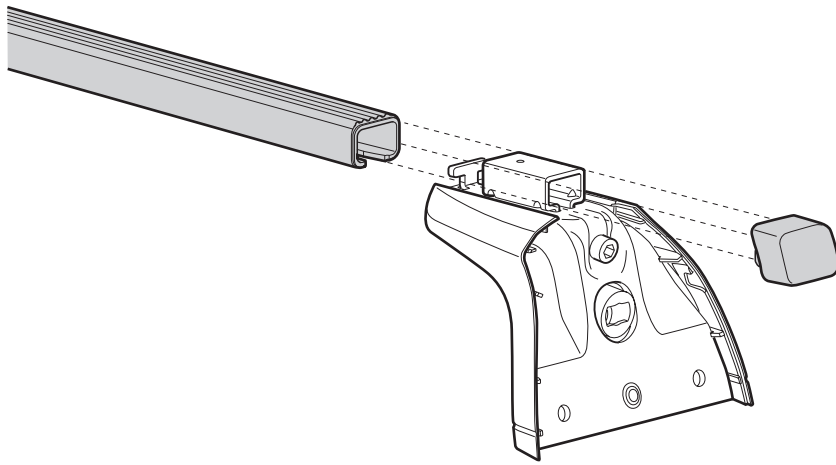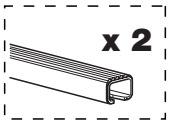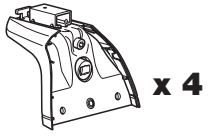


3

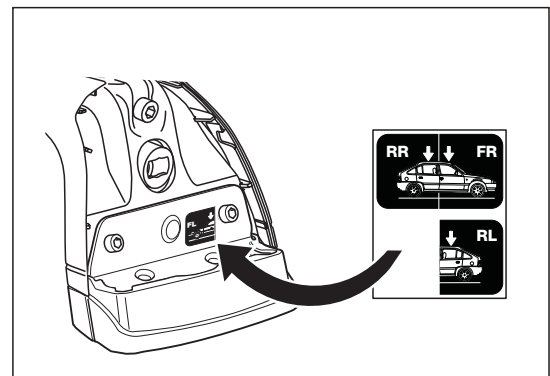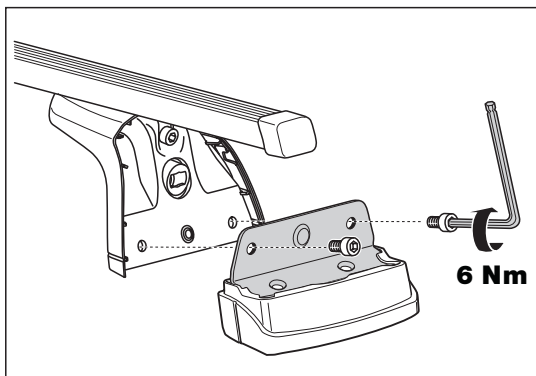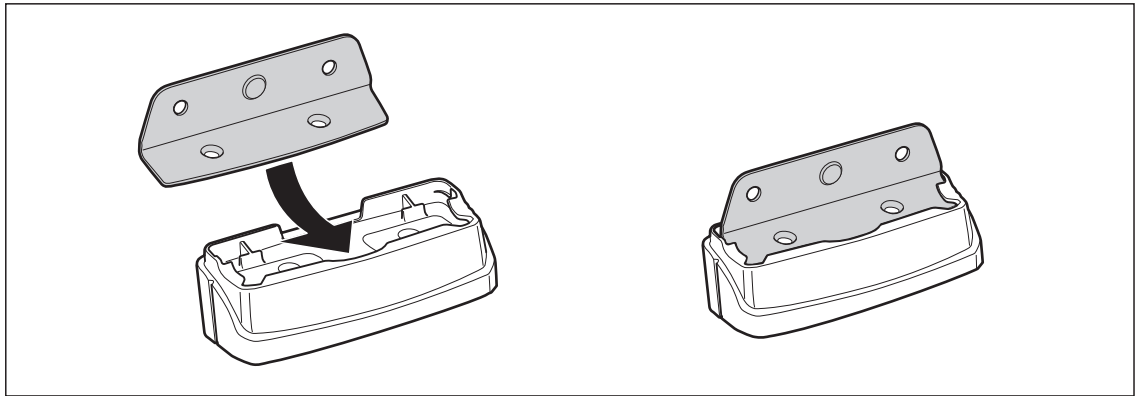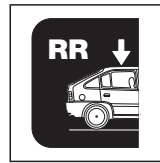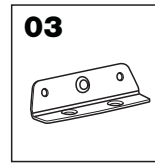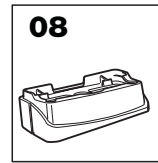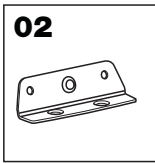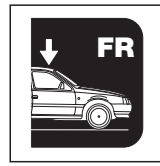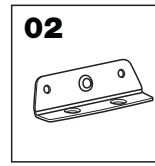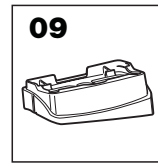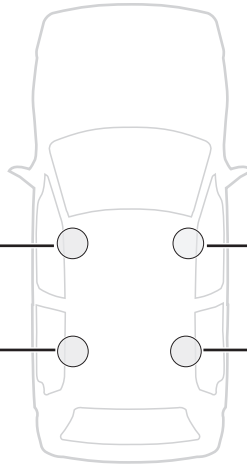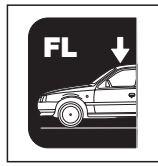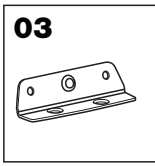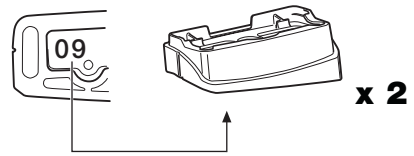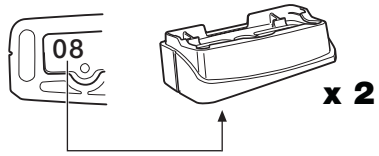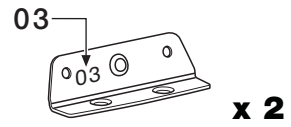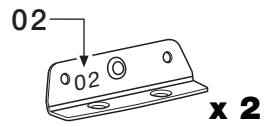

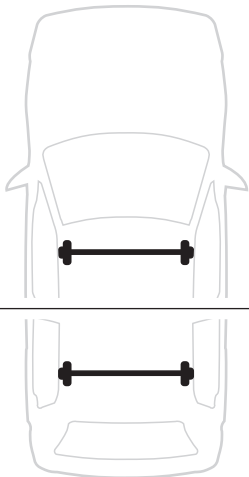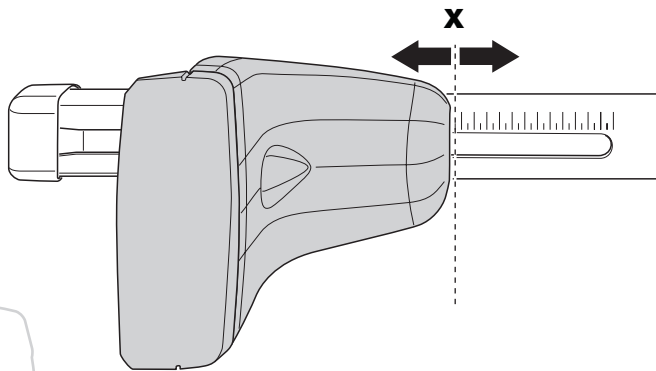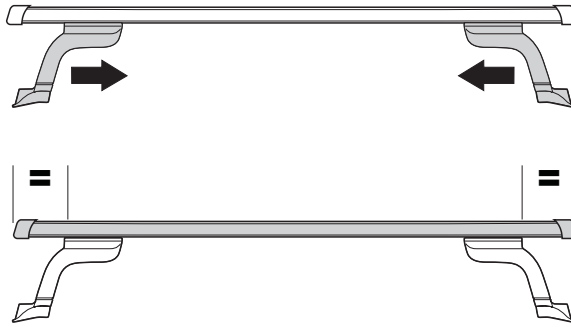

	X
Citroën	10,5

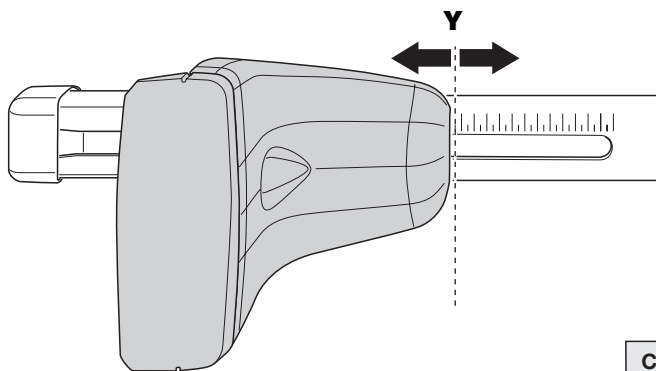

	Y
Citroën	4,5

5






45 mm **x 4** M5

40 mm **x 4** M5

x 8

x 1 5mm

x 1 4mm

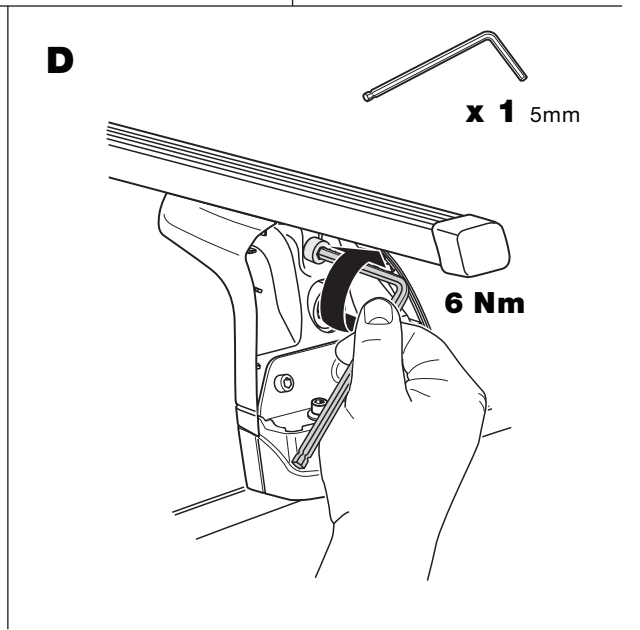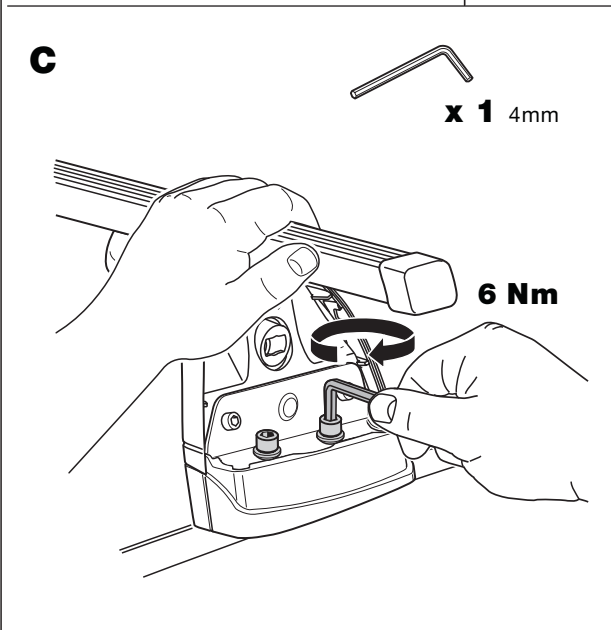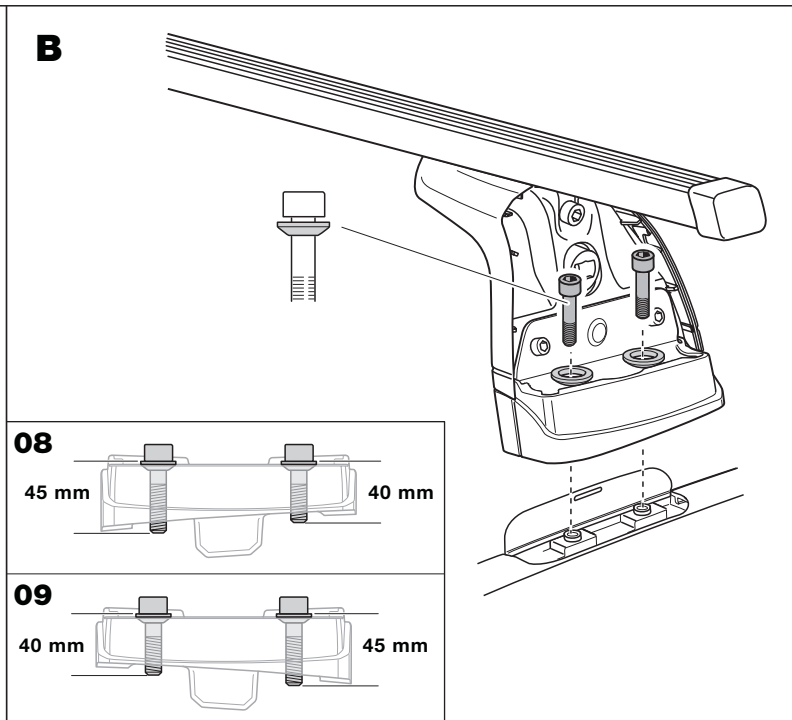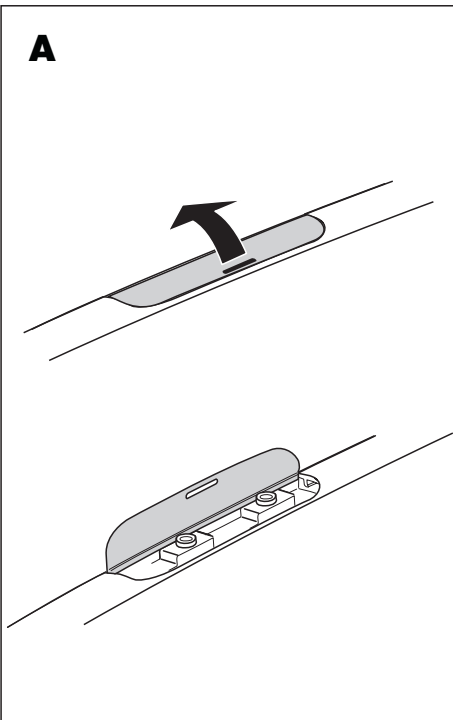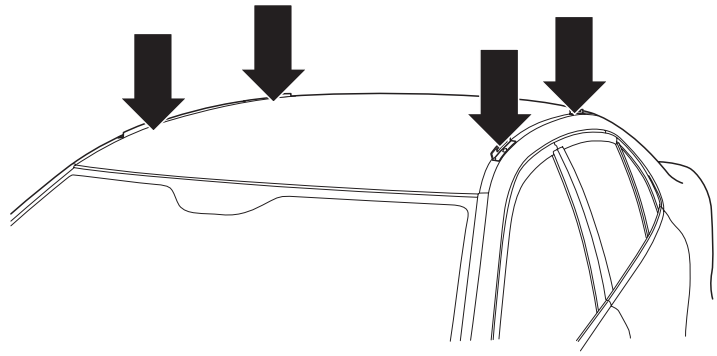

6




x 4



x 4




x 1

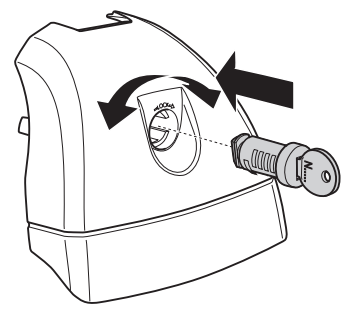

7






x 1 5mm




x 1 4mm



x 4

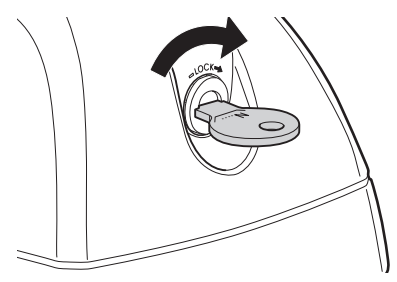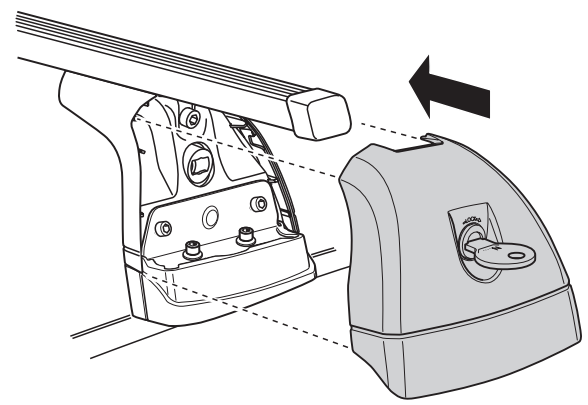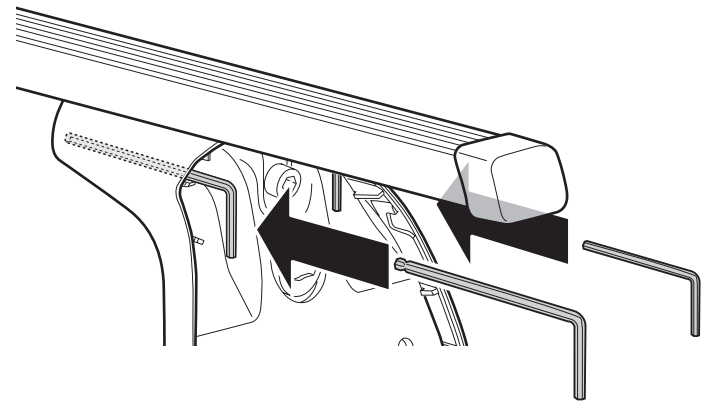

8

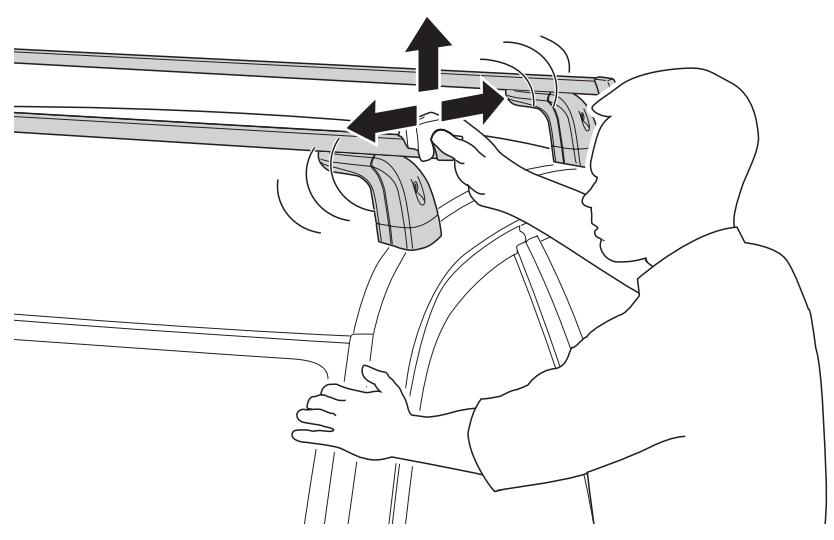

Fit Tips!

