







Thule XT Kit 3150

> Instructions

- VW California, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Van, (T5) 03-15, (T6) 15-

This kit is only for vehicles with fixpoint mounting.

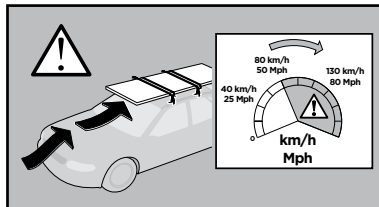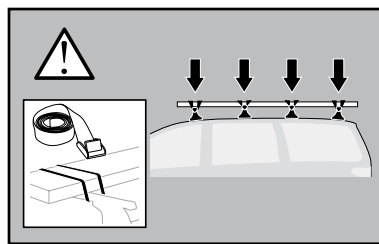
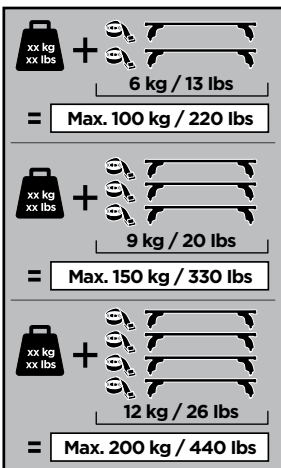
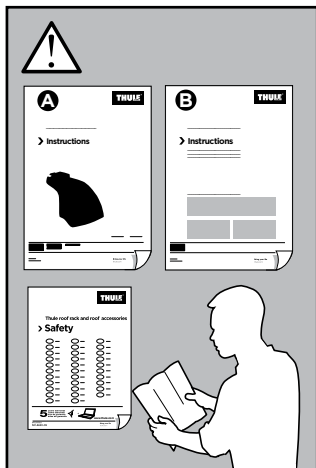


ISO 11154-E

183150

C.20150914
509-3150-01


Bring your life
thule.com

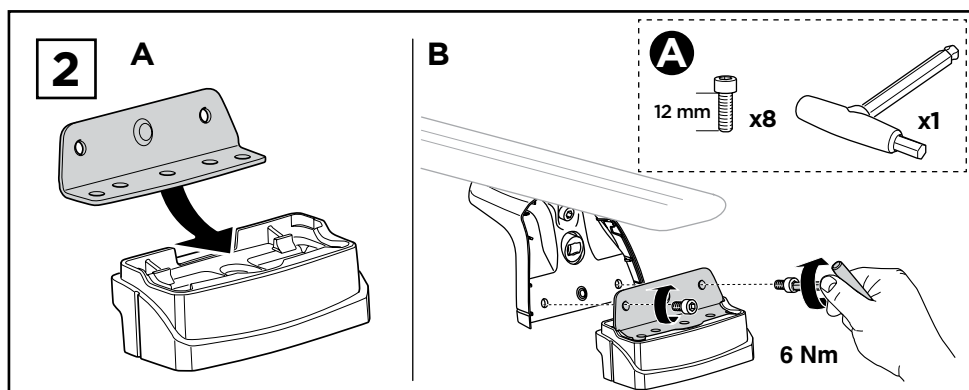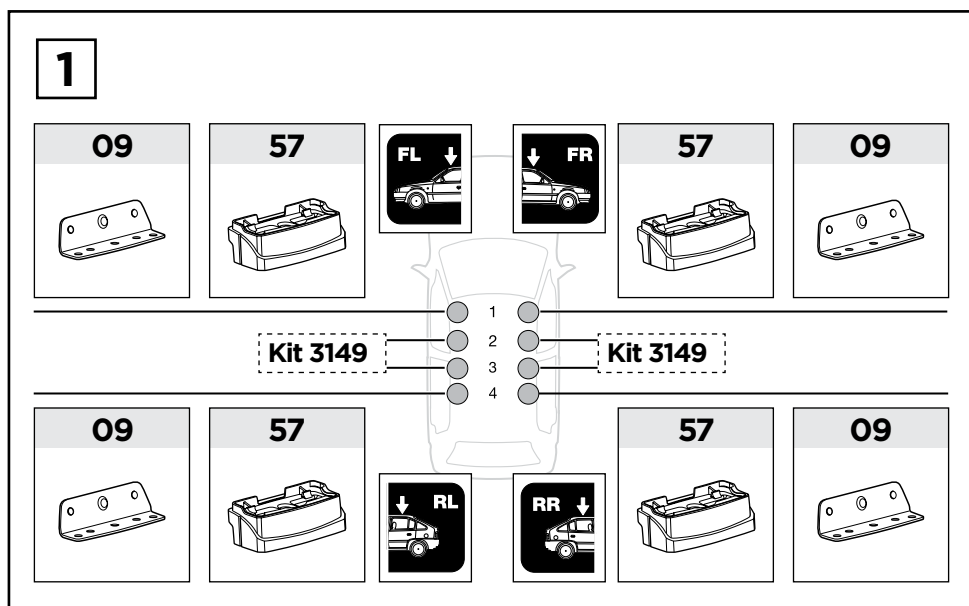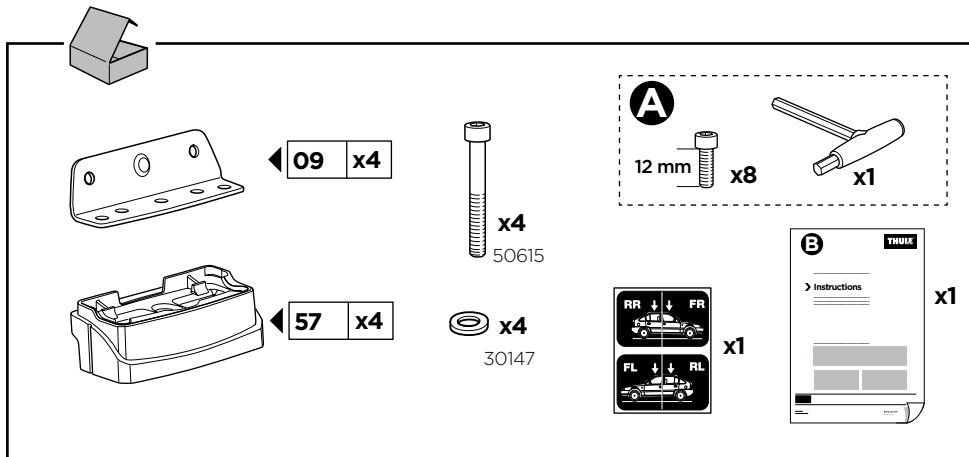


3



x1

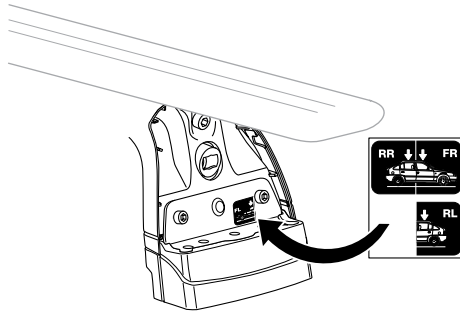

4




x4




x4


A




x1

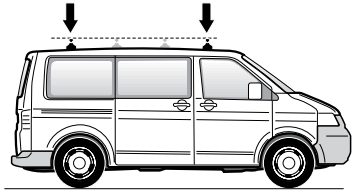

A

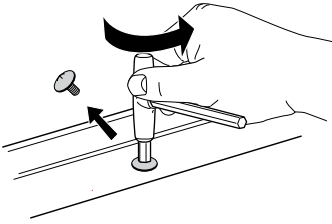

B

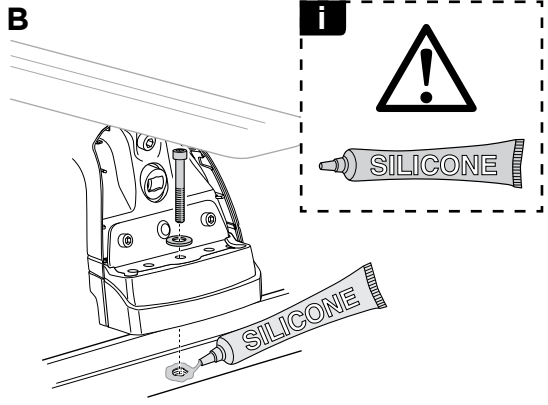


i



SILICONE


SILICONE

C

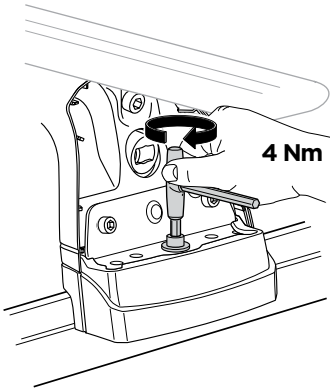

4 Nm

D

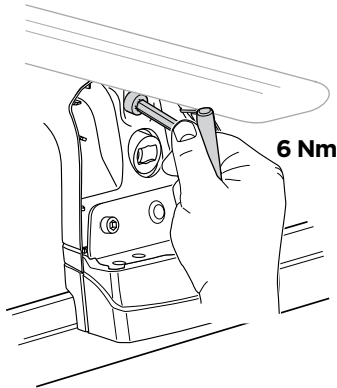

6 Nm

