




MS201 x 8



MS168 x 4




MS199 x 4

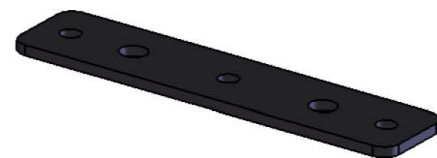


PS082 x 8

(1:1)

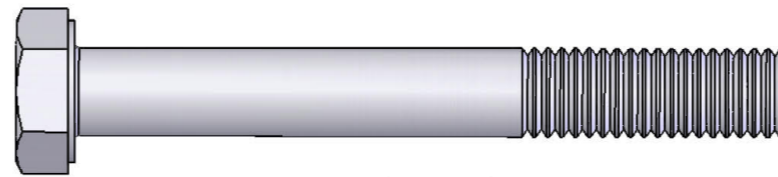


FB003 (M8 x 65) x 16

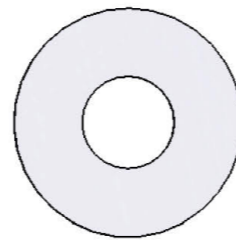


FW002 (M8) x 32




FN006 (M8) x 16

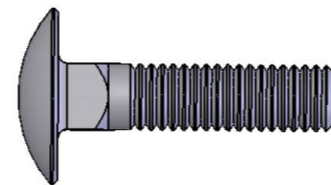

FS007 (M6 x 25) x 16

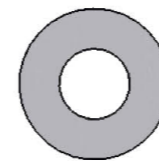


FW001 (M6) x 16





PS009 (M6) x 16



FN001 (M6) x 16

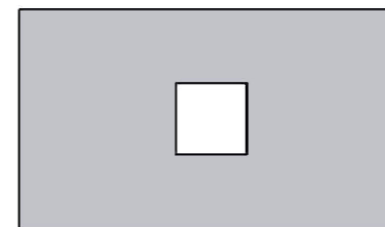


MS098 x 16

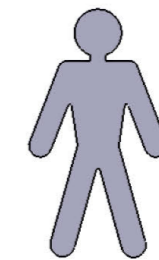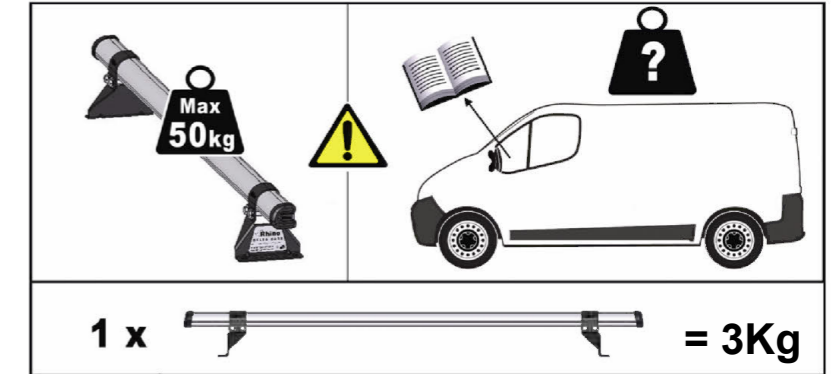


10mm x 1




13mm x 2

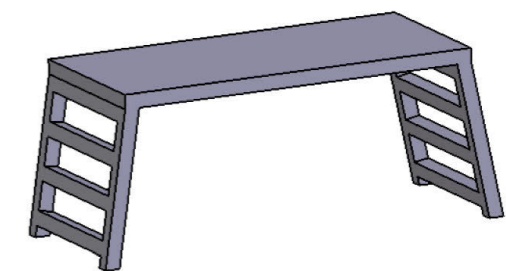

Used on Vans With Threaded Holes Only

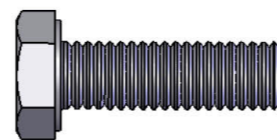

FS001 (M6 x 20) x 8

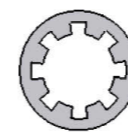

FW008 (M6) x 8

