

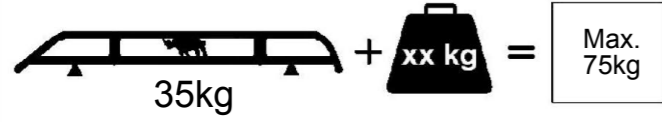



EU/R 600

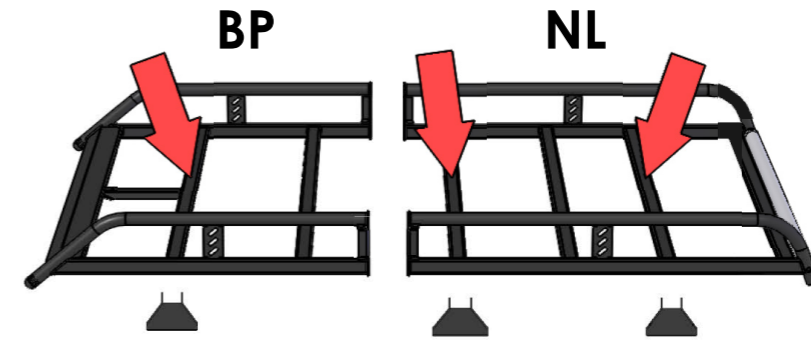



LAND ROVER 90 (SWB) 1985- HARD TOP / STATION WAGON

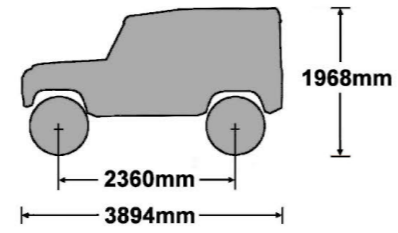

EU/R 601

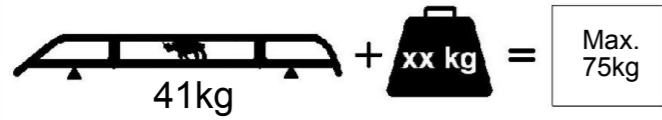


LAND ROVER 110 (LWB) 1983- HARD TOP / STATION WAGON

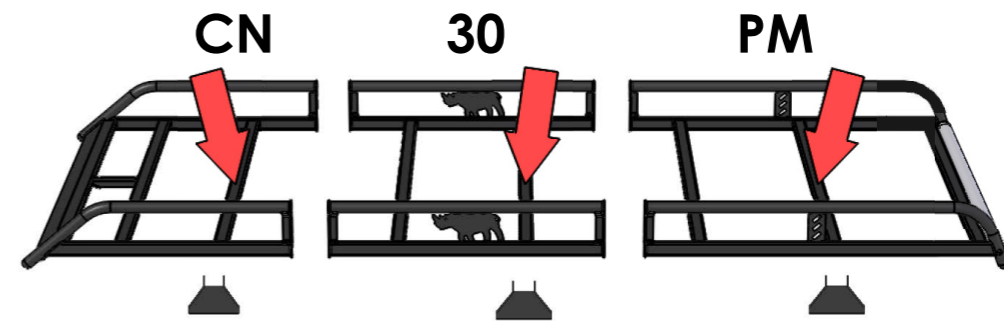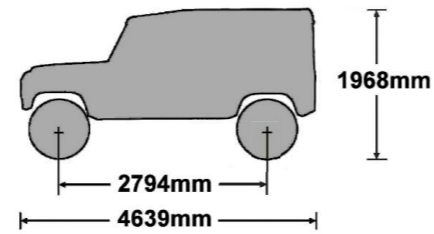




MS010 x 6

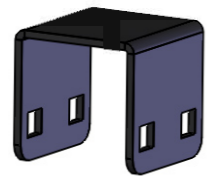

MS161 x 6

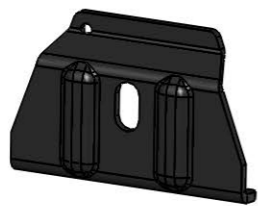


MS006 x 6




PS001-130 x 6

(1:1)

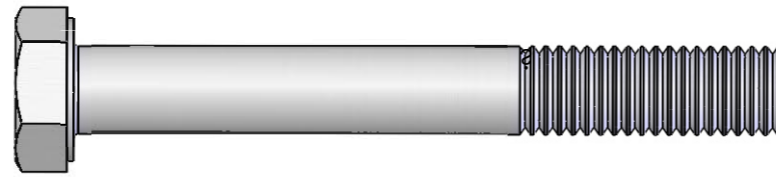

FB003 (M8 x 65) x 12

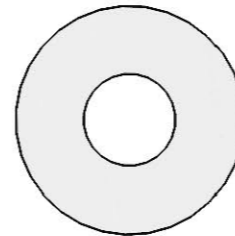

FW002 (M8) x 46




FN006 (M8) x 26




FS030 (M8 x 35) x 6



PS045 (M8) x 6

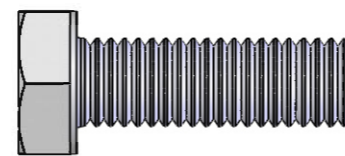

FS015 (M8 x 25) x 8

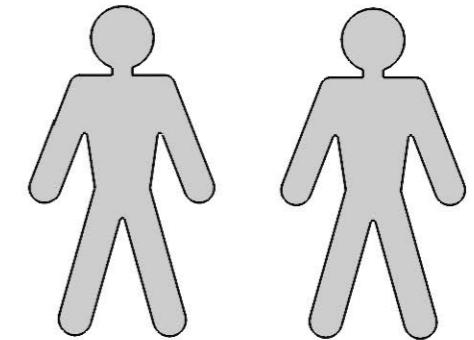

13mm x 2

