
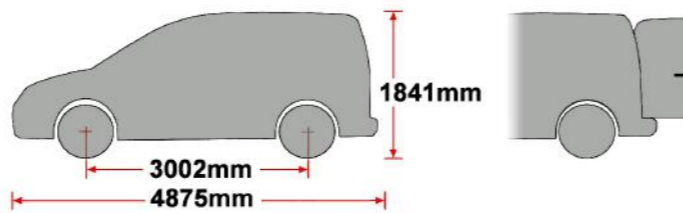
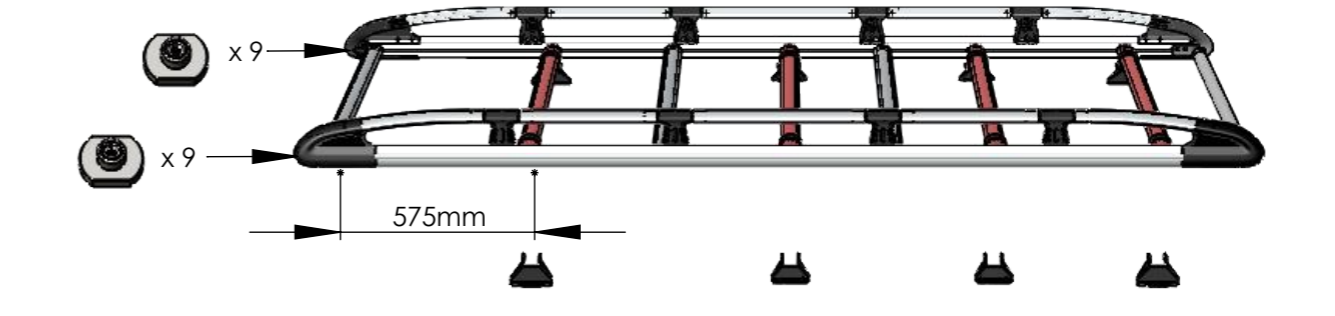

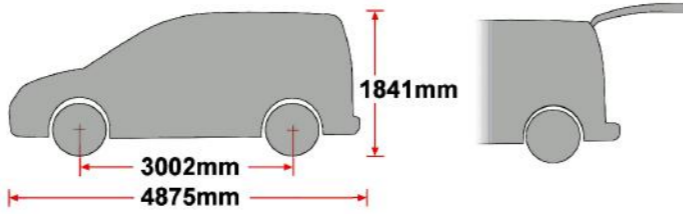
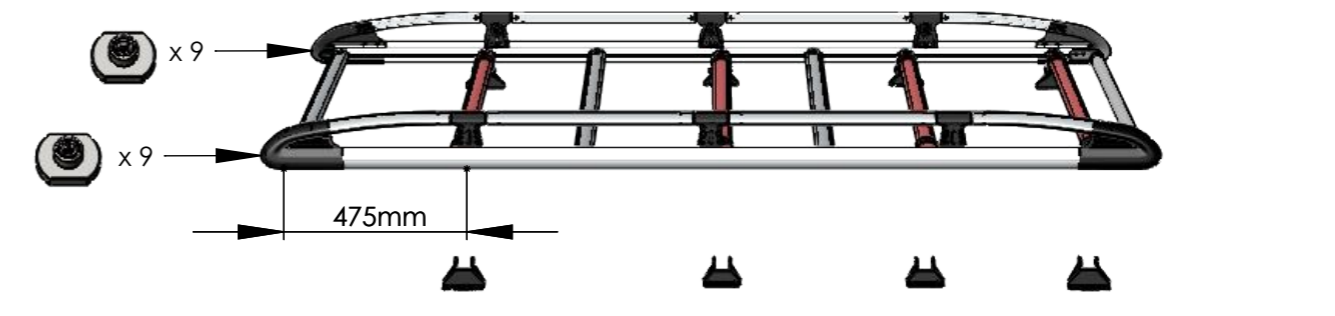

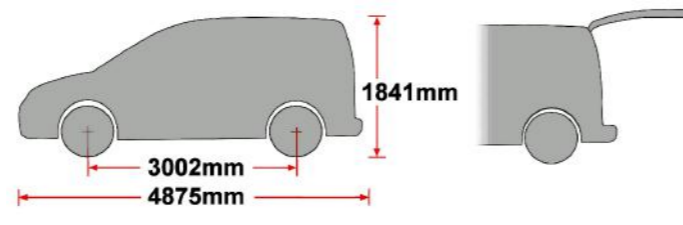
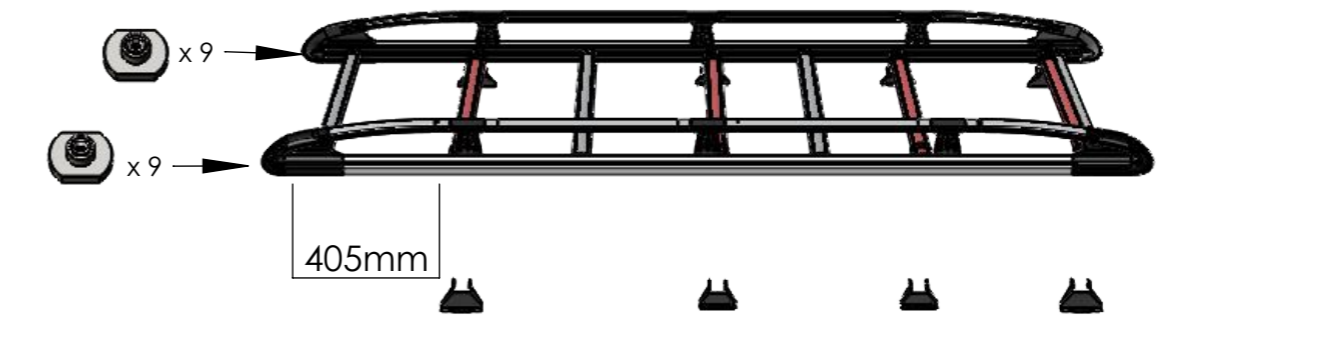

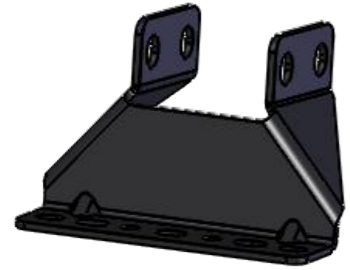


<h1>A610</h1>  <p>31kg + xx kg = Max. 100kg</p>	<h2>VW CADDY MAXI 2010- L2, H1, TWIN DOORS</h2>  <p>3002mm 4875mm 1841mm</p>	 <p>x 9 x 9 575mm</p>
--	--	--

<h1>A611</h1>  <p>30kg + xx kg = Max. 100kg</p>	<h2>VW CADDY MAXI 2010-2015 L2, H1, TAILGATE</h2>  <p>3002mm 4875mm 1841mm</p>	 <p>x 9 x 9 475mm</p>
---	---	--

<h1>A611</h1>  <p>30kg + xx kg = Max. 100kg</p>	<h2>VW CADDY MAXI 2015- L2, H1, TAILGATE</h2>  <p>3002mm 4875mm 1841mm</p>	 <p>x 9 x 9 405mm</p>
--	--	--






MS176 x 4



EXT09-004 x 8

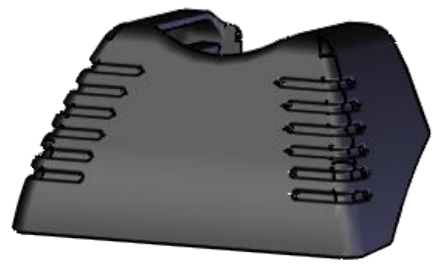


PS096 x 4



PS089 x 1



PS090 x 1

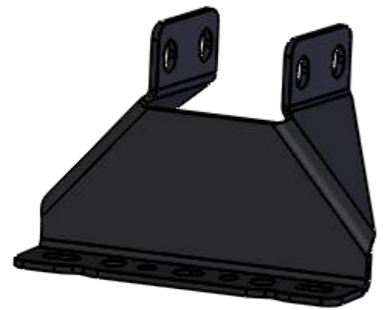

MS199 x 4



PS023 x 8



PS095 x 4




29201112 x 4



FB012 (M8 x 65) x 16

(1:1)

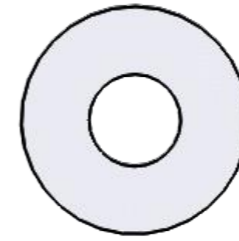

FW002 (M8) x 40




FN006 (M8) x 16




FS074 (M8 x 20) x 4




FS061 (M8 x 35) x 4

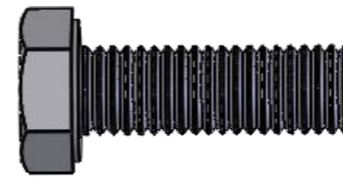

FS062 (M8 x 25) x 2

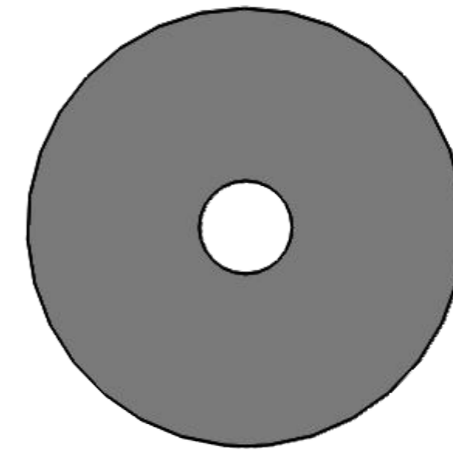


PS260 (M8) x 8

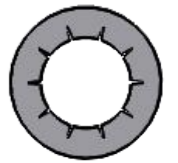


FW009 (M8) x 8




FS059 (M8 x 25) x 18

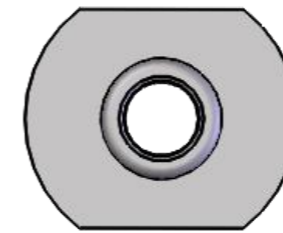

FN023 (M8) x 18

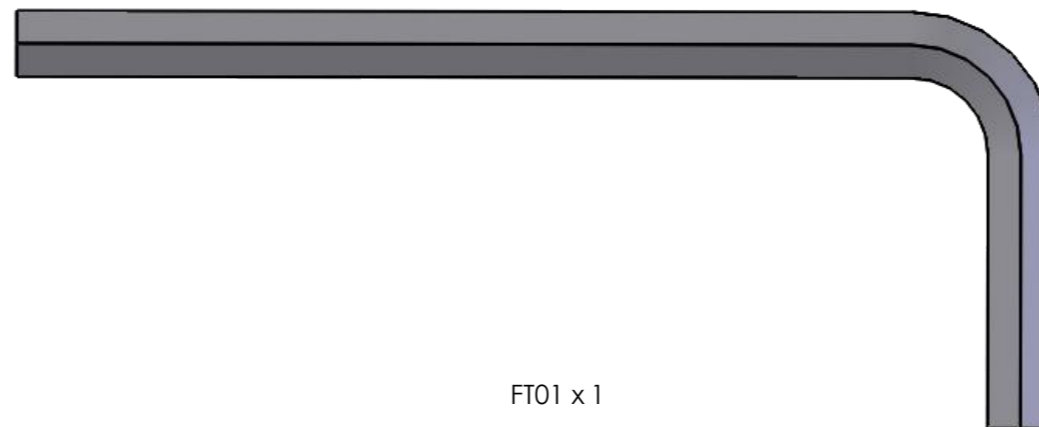

FT01 x 1

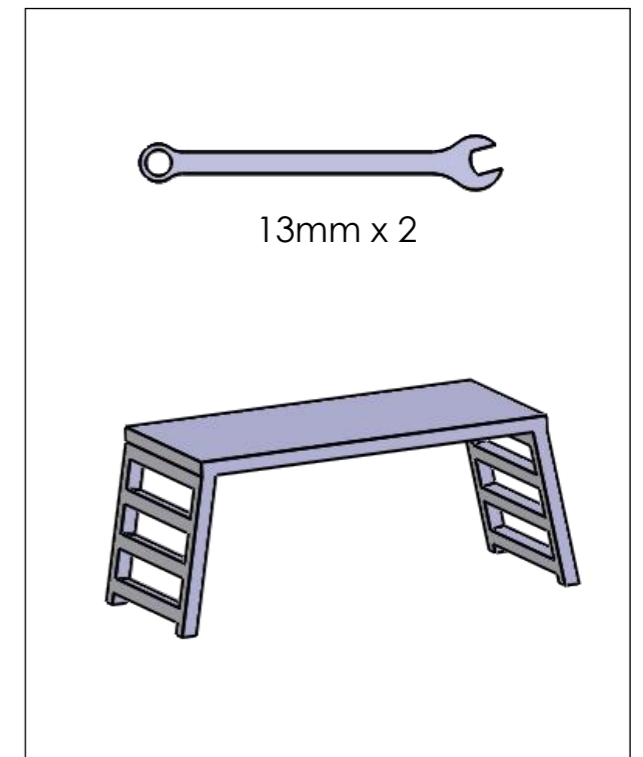

13mm x 2

