


# TB3KR

# KammRack

## Instructions


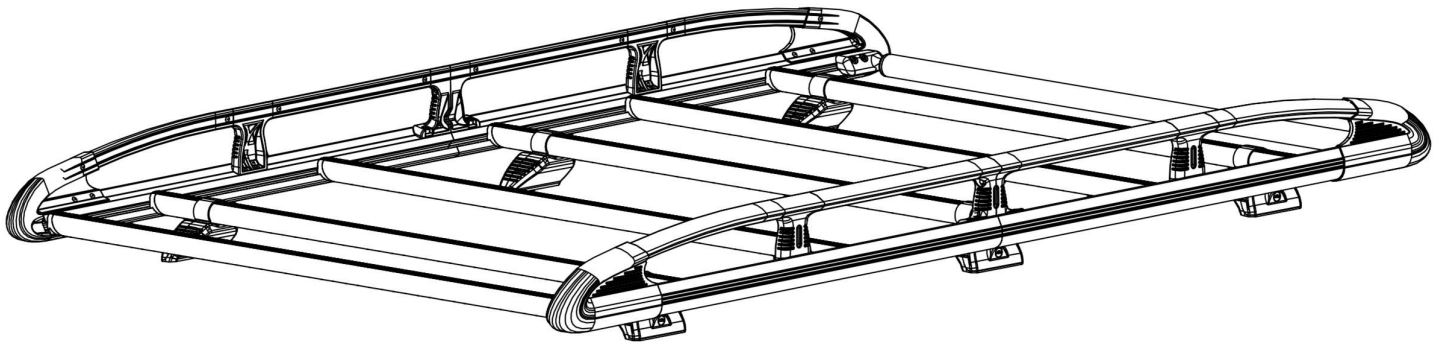


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

**TB3KR:**


**Ford** Transit Custom, 2013–

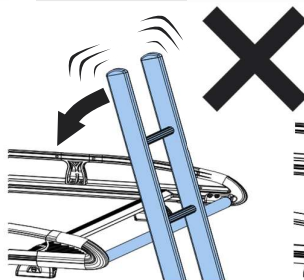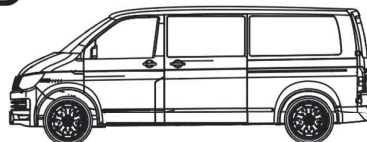


**Max**  
50kg/110lbs

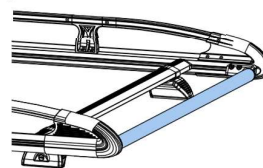


## KammRack

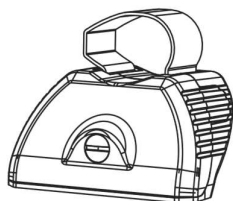


**SA397U x 3** ☐

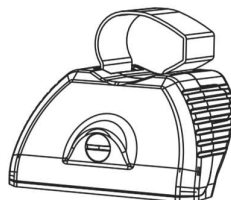


**SA398U x 3** ☐

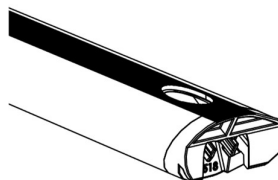


**SA429** ☐




**C04 x 6**  
\*optional upgrade\*




**PS519 x 1** ☐

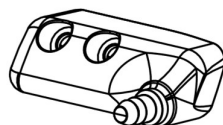

**PS520 x 1** ☐

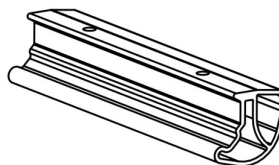

**EXT15-02** ☐



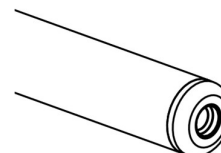


**SA437 x 1** ☐

**LHS x 2**


**RHS x 2**

**Centre x 2**

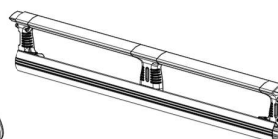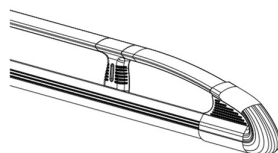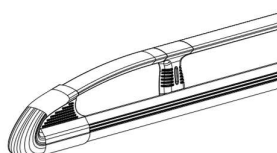


**ASF x 1** ☐

## Fitting Kit




**PS178 x 4**




**PS404 x 6**




**PS492 x 6**



**PS491 x 6**

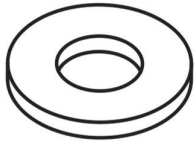

**FW002 (M8) x 12**

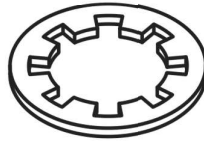

**FW009 (M8) x 12**




**FS061  
(M6 x 35) x 8**




**FS062  
(M6 x 25) x 4**



**FS059  
(M8 x 25) x 18**

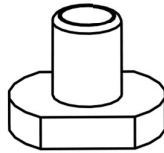

**FN085 x 18**

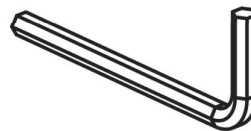


**FT01 x 1**




**FT05 x 1**



1.

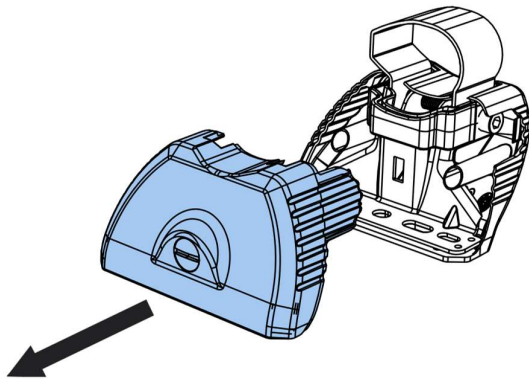

2.

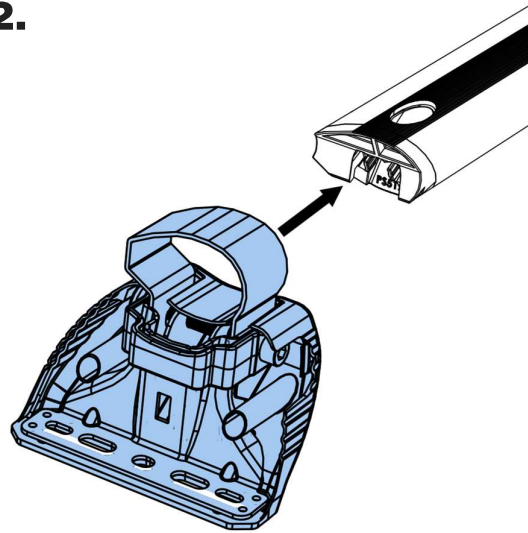


3



**SA397U**  
**PS178**




**SA397U**  
**PS404**

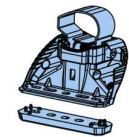

**SA397U**  
**PS178**

**R**

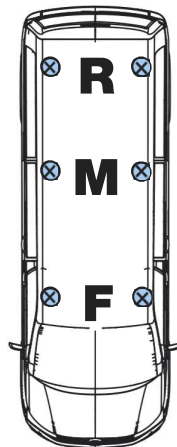

**F**

**SA398U**  
**PS178**




**SA398U**  
**PS404**



**SA398U**  
**PS178**




4.

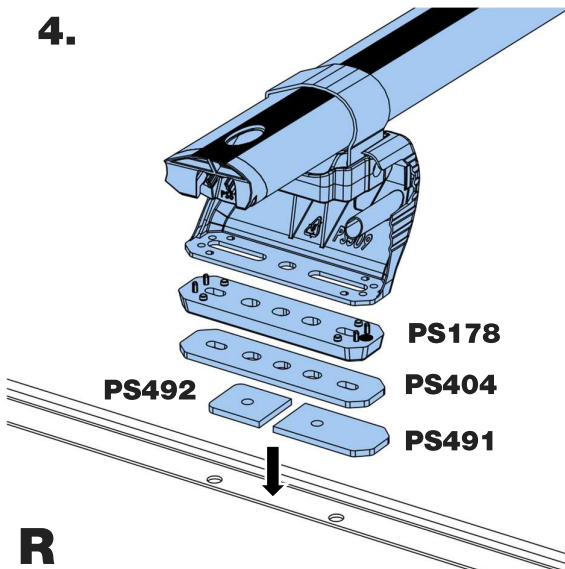


**R**

5.


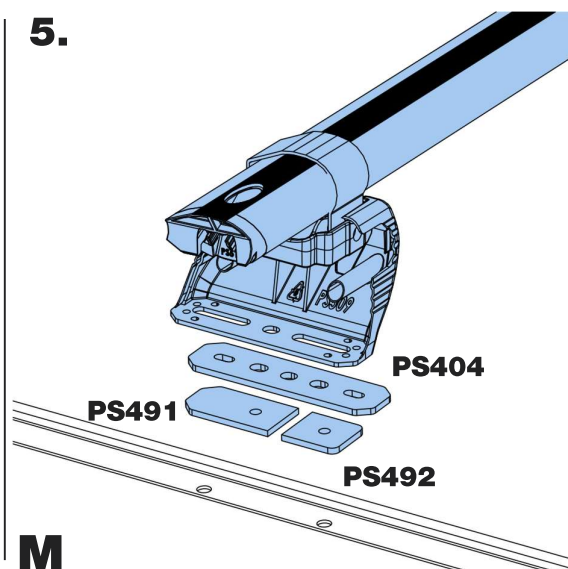


**M**

6.

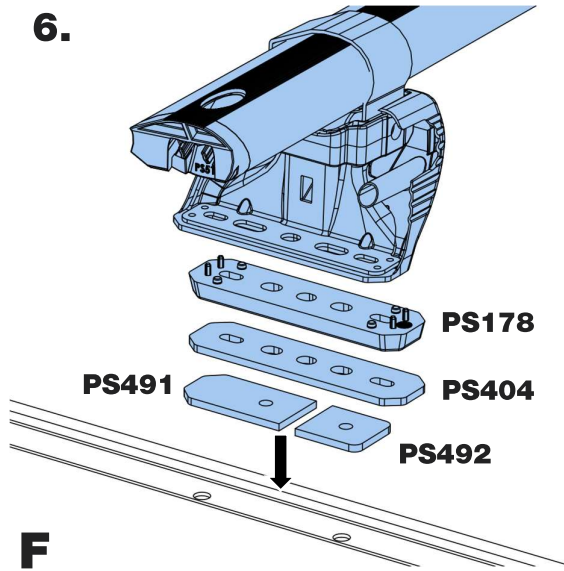


7.

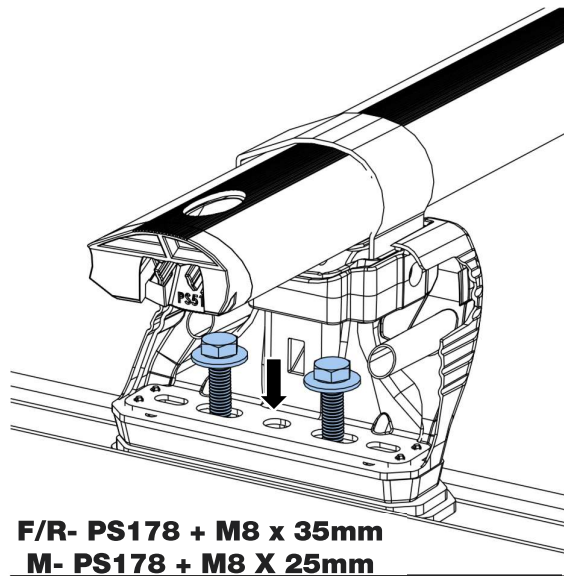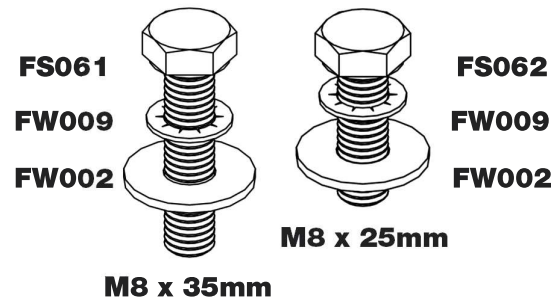


F/R- PS178 + M8 x 35mm  
M- PS178 + M8 X 25mm


9.

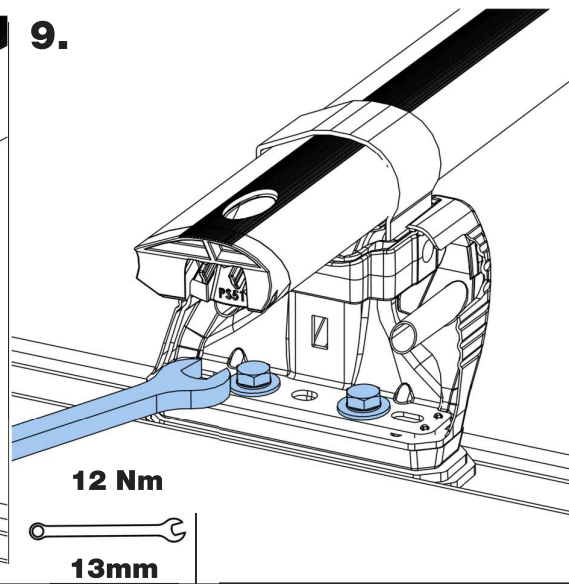


10.

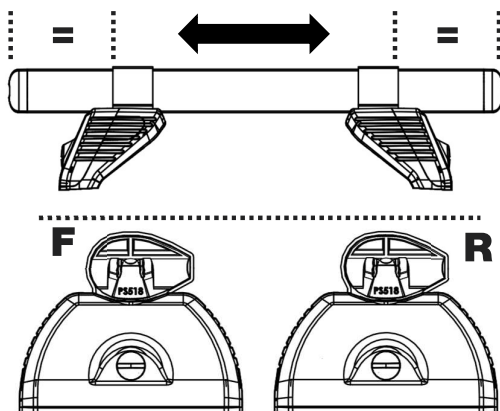


11.

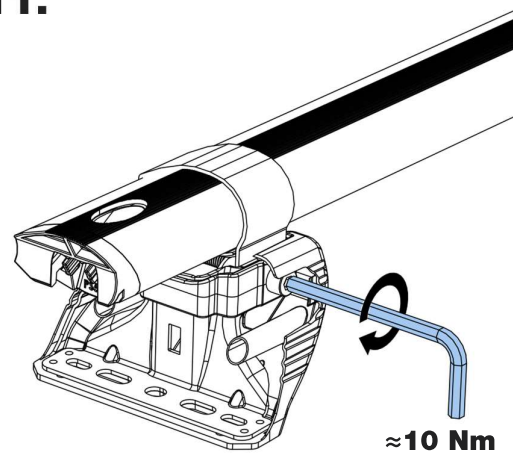


**12.**

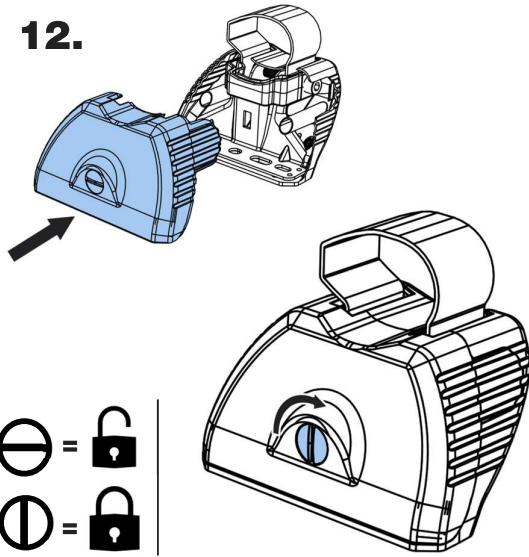



**13.**

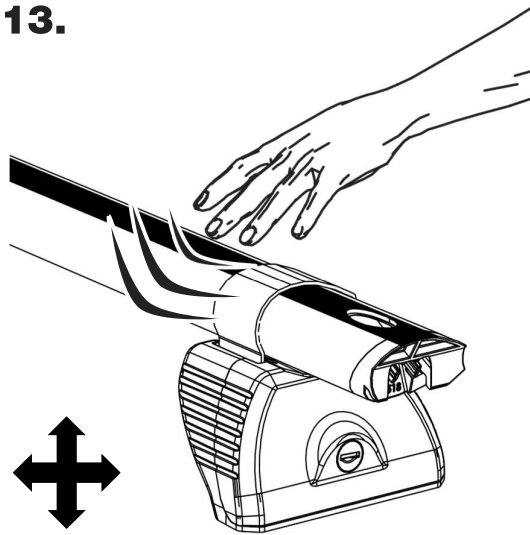

## K615- Ford Transit Custom 2012- L1 Twin Doors.

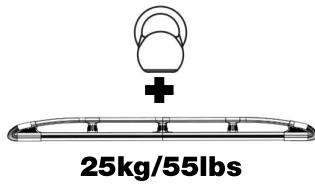


**= 150kg  
Max**

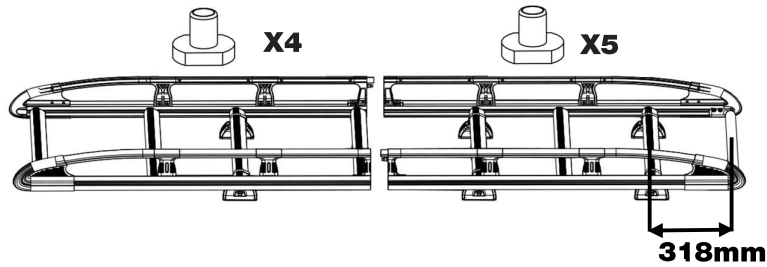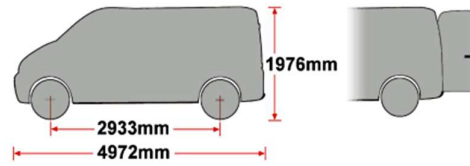


**Steps 14-30, 53-62**



**A**

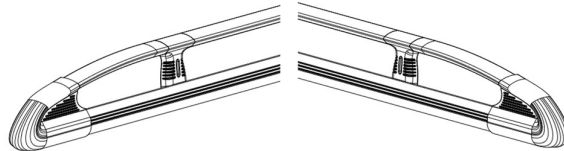

## K650- Ford Transit Custom 2012- L1, Tailgate.

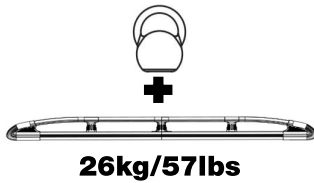


**= 150kg  
Max**

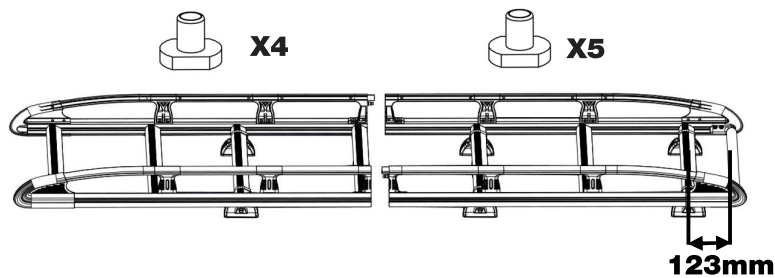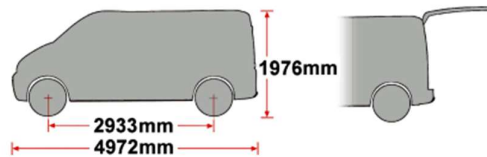


**Steps 14-30, 53-62**



**A**

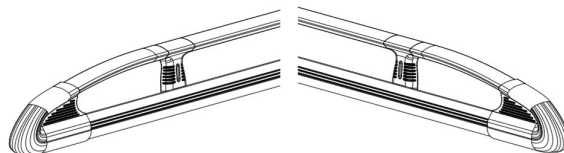

## K651- Ford Transit Custom 2012- L2, Tailgate.

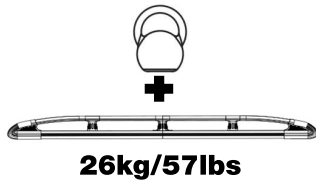


**150kg  
Max**

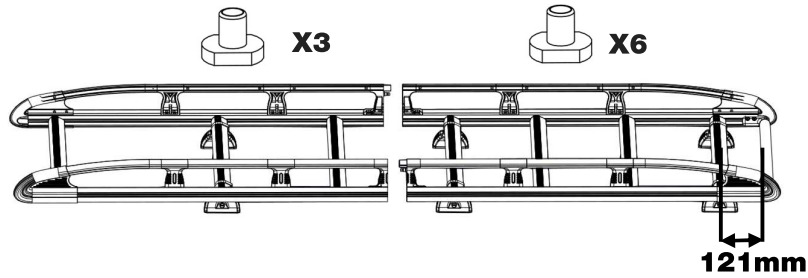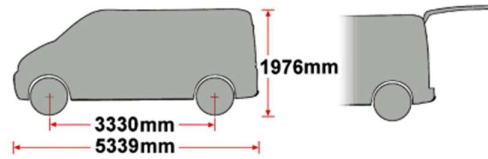


**Steps 14-30, 53-62**



**A**

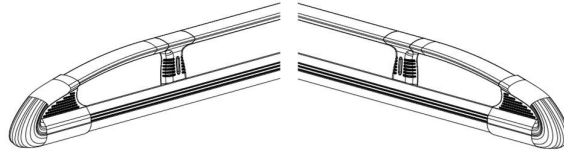

## K616- Ford Transit Custom 2012- L2, Twin Doors.

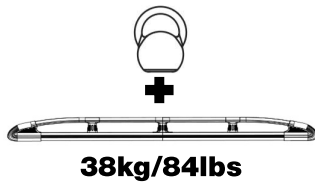


**150kg  
Max**

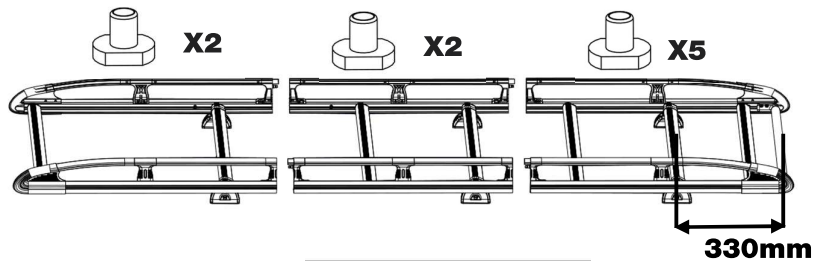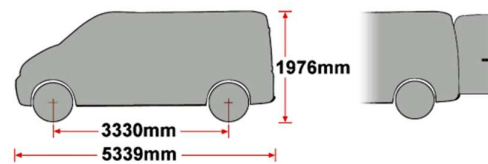


**Steps 31-62**


**B**

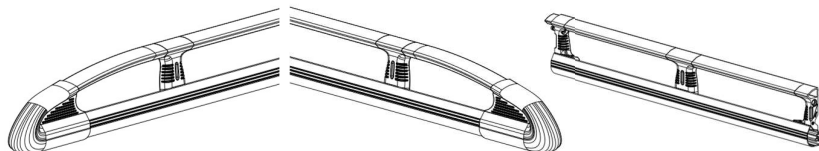


14.

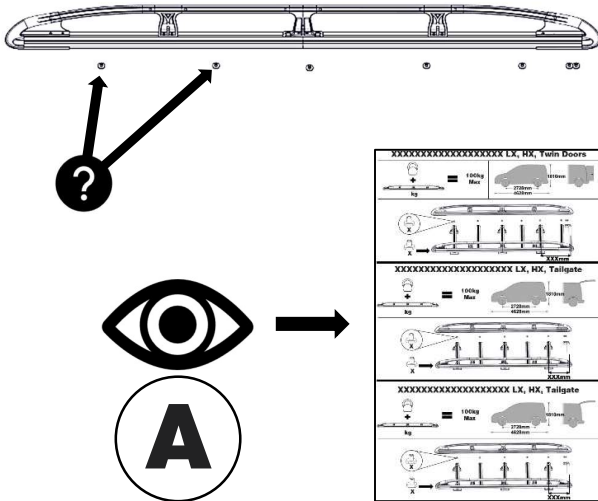


15.

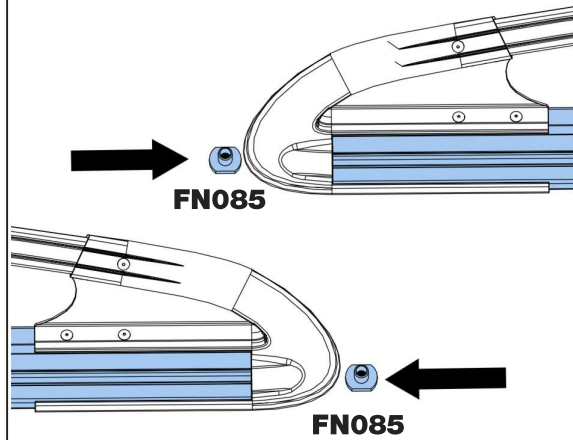


16.

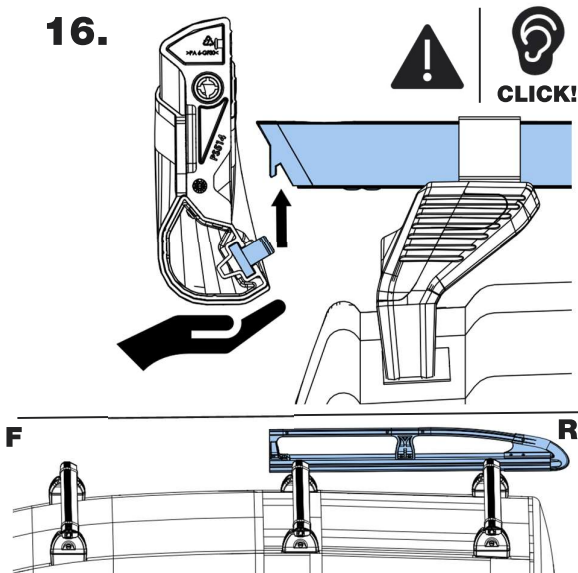


17.






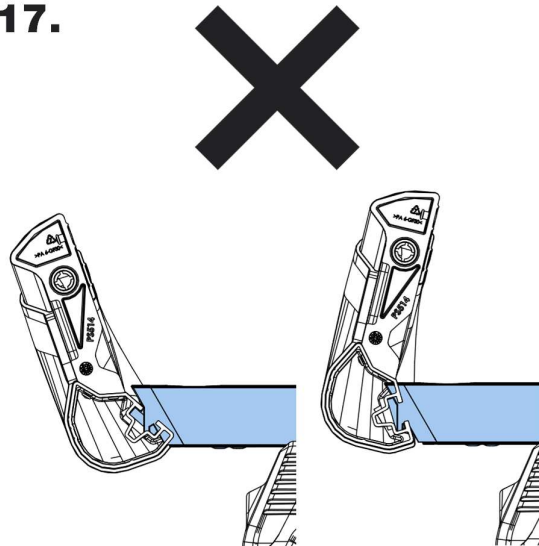


18.

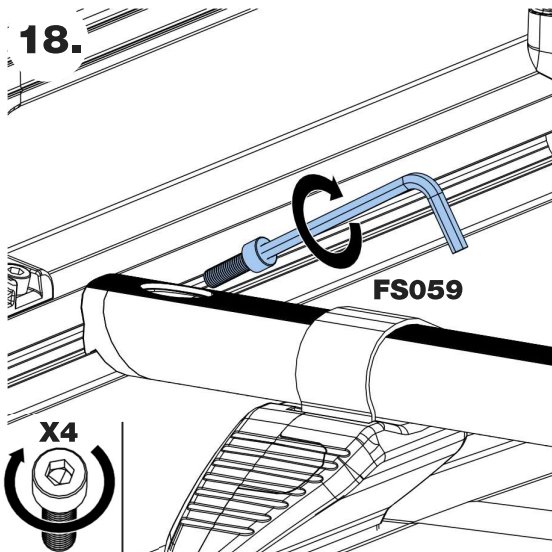


19.

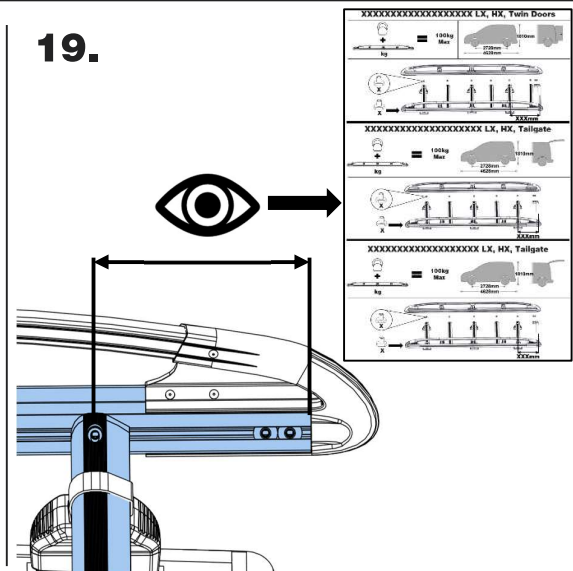


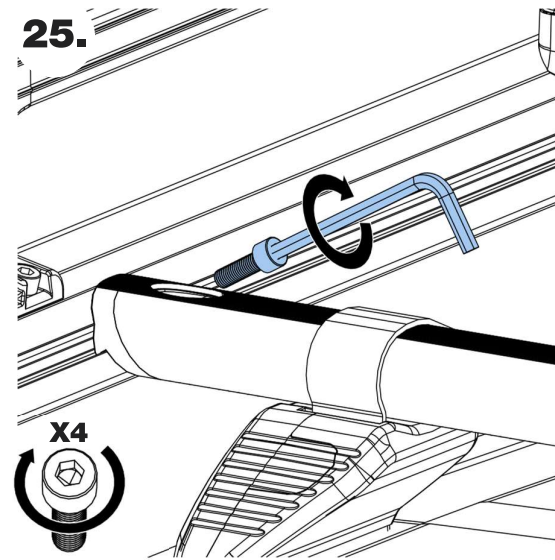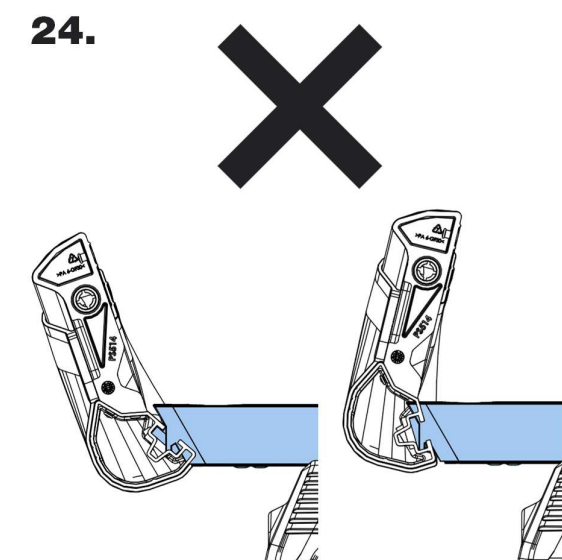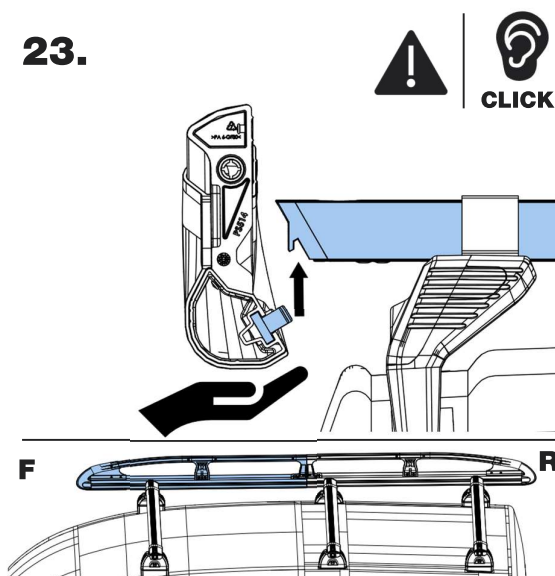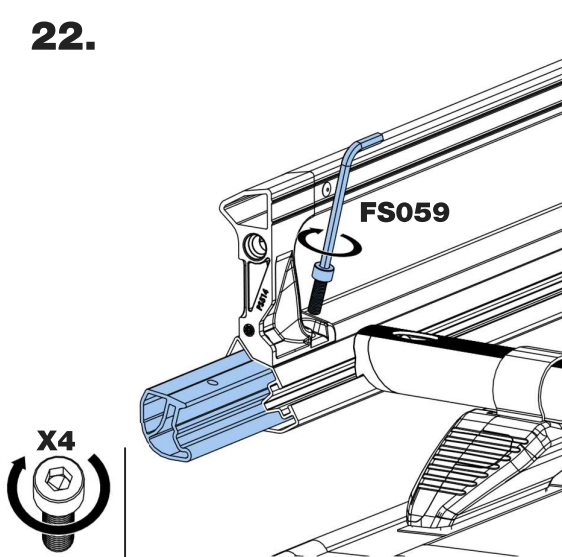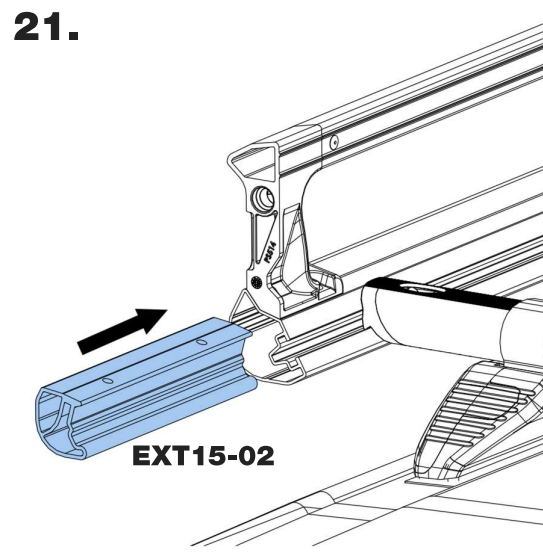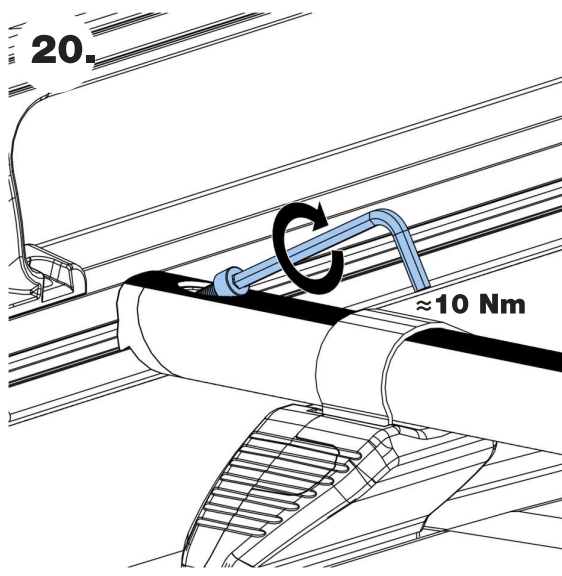


26.

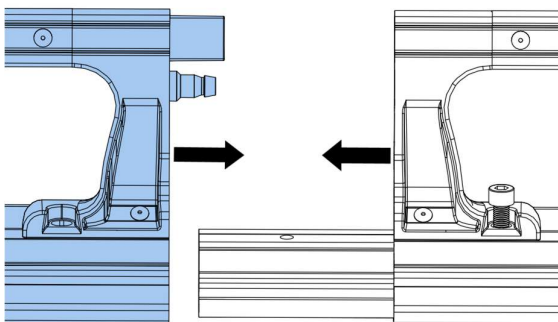


27.

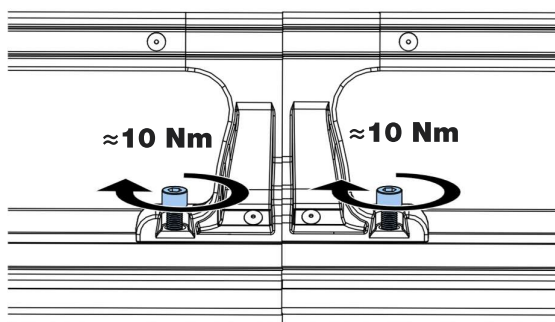



28.

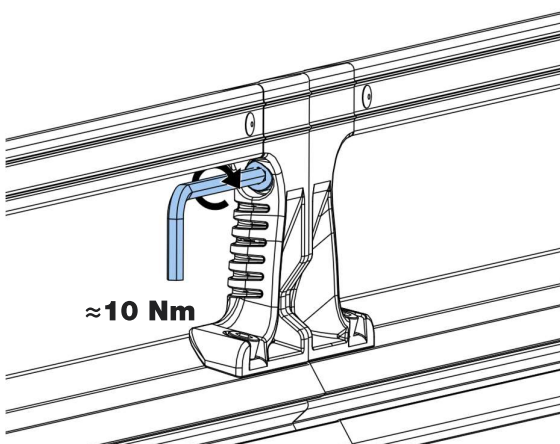


29.

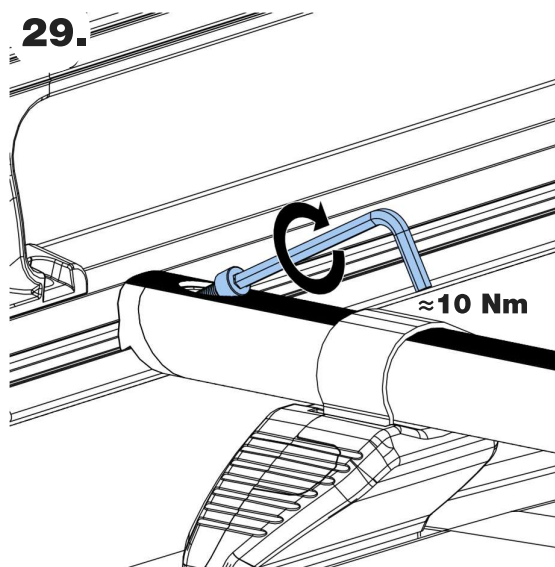


30.

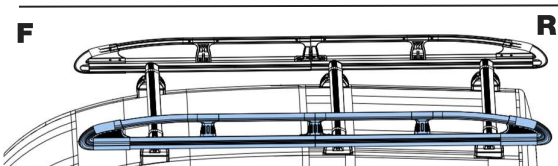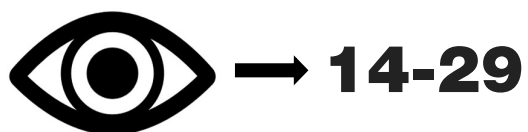


31.

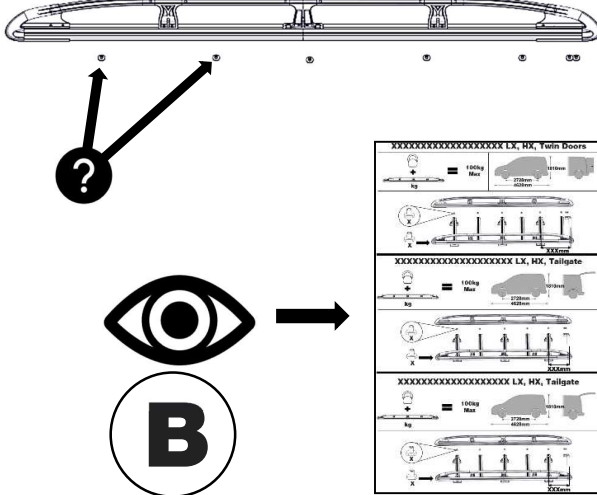


32.

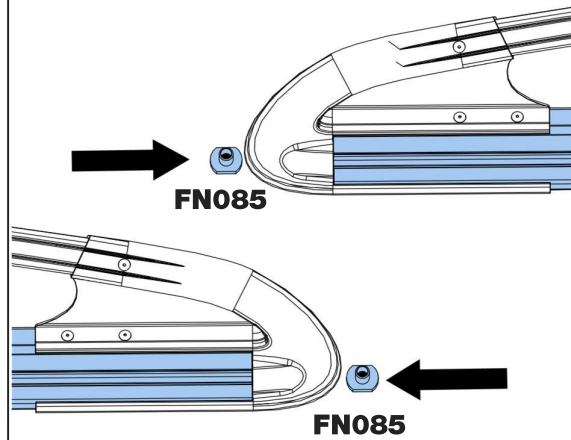


33.

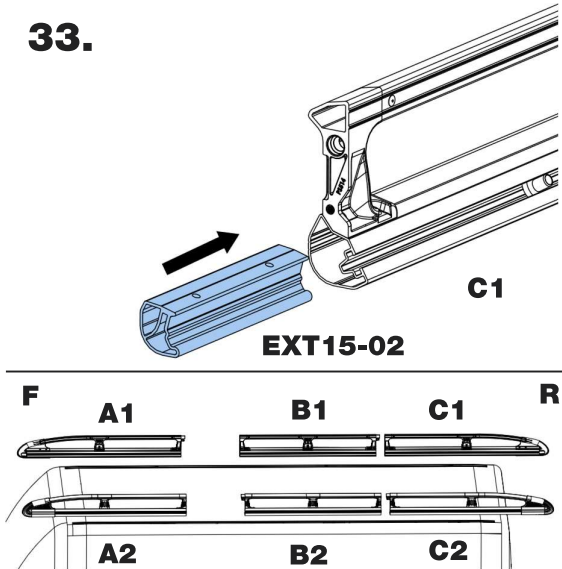


34.

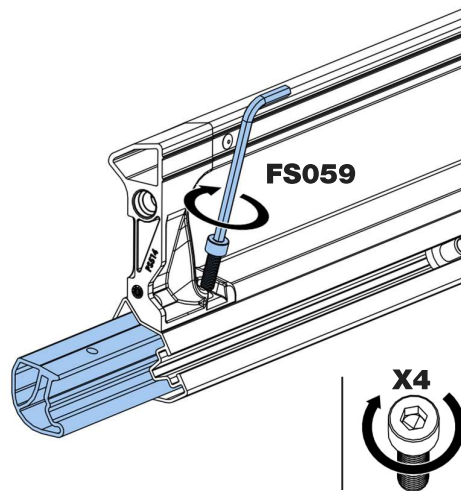


35.

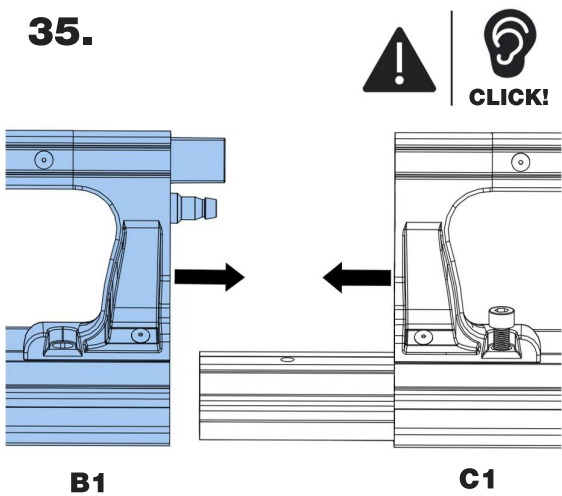


36.

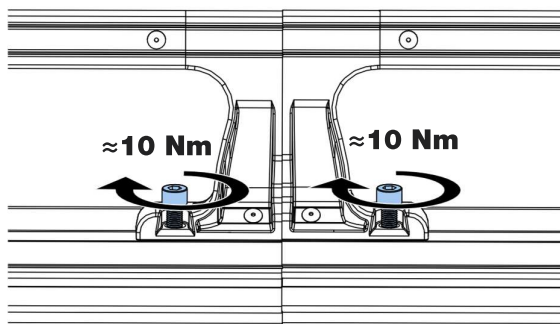


37.

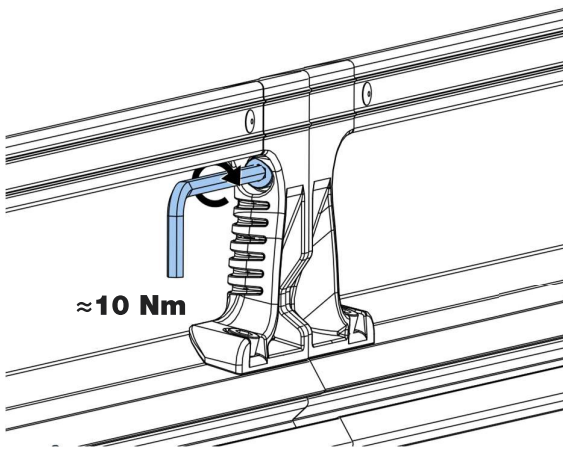


38.

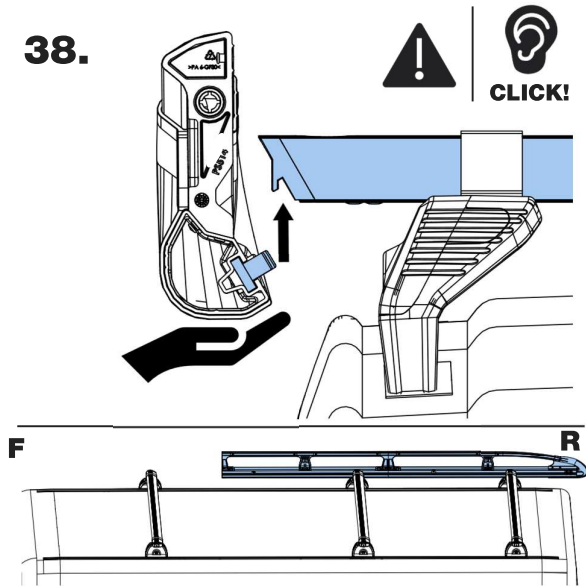


39.

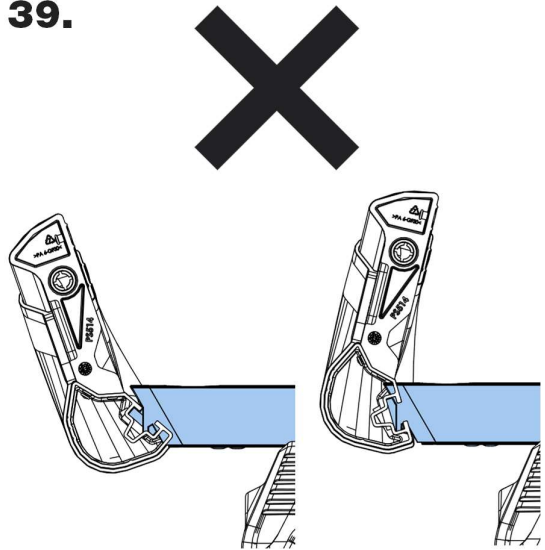


40.

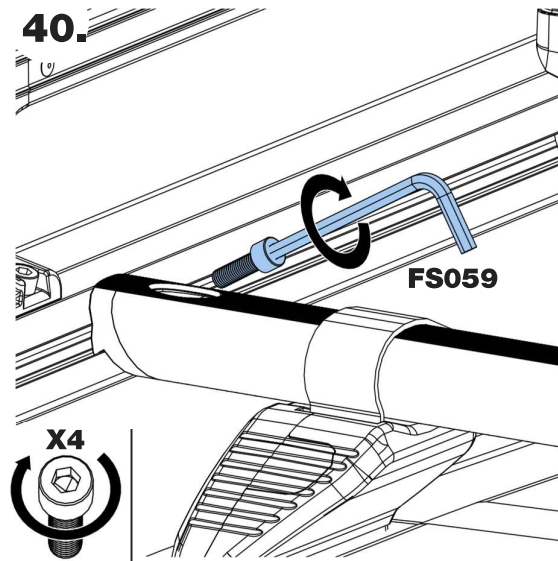


41.

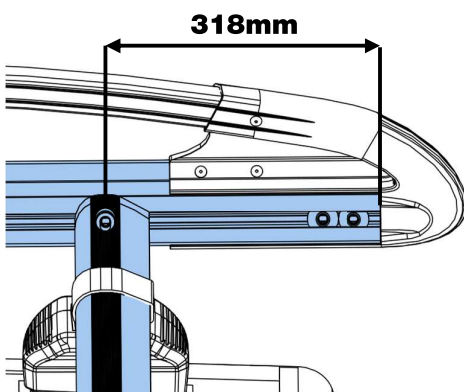


42.

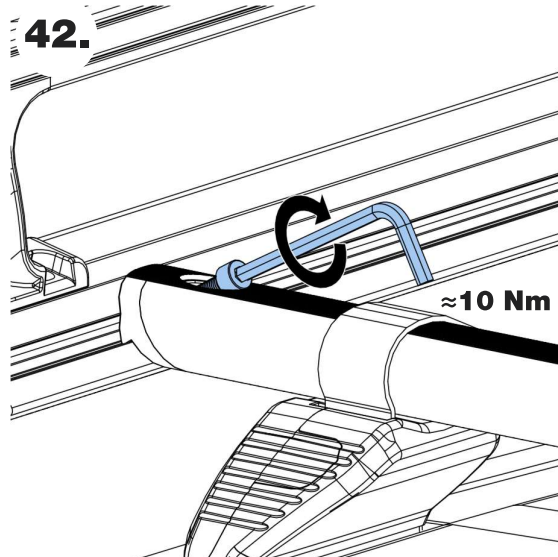


43.

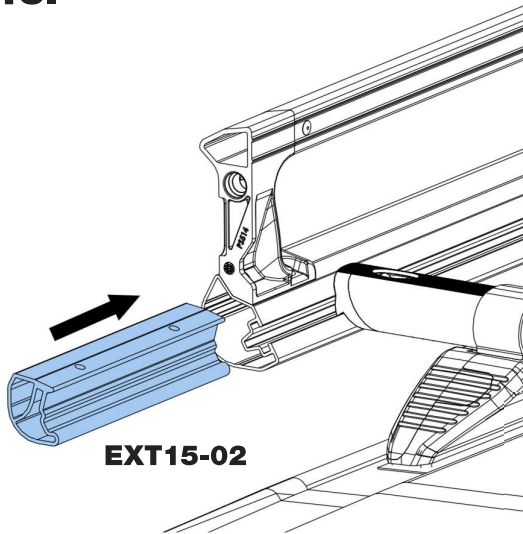


44.

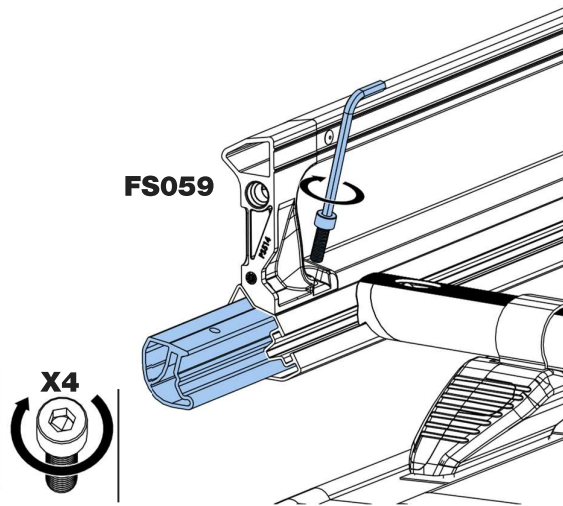


45.

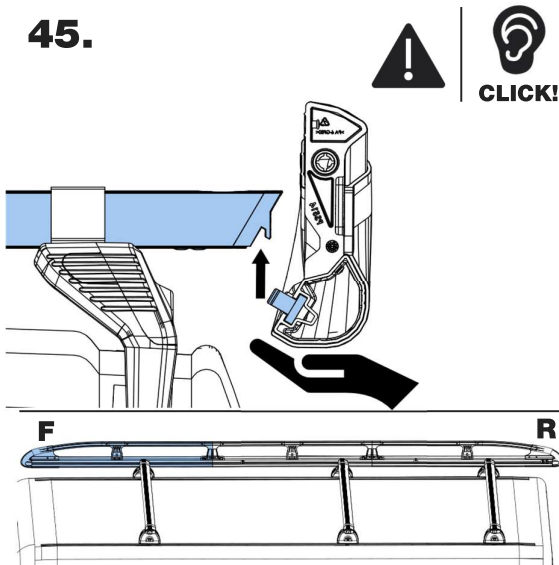


46.

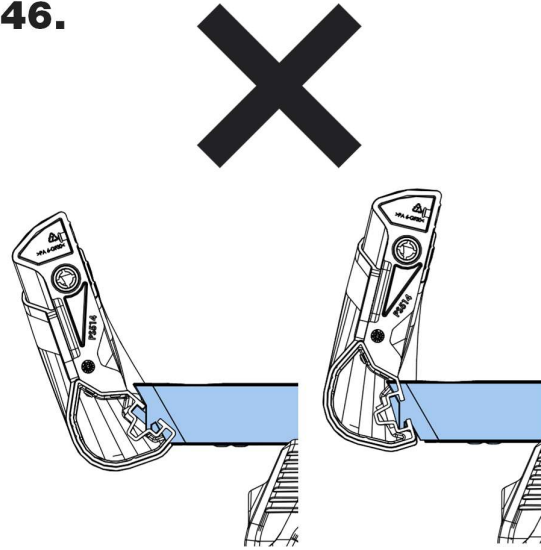


47.

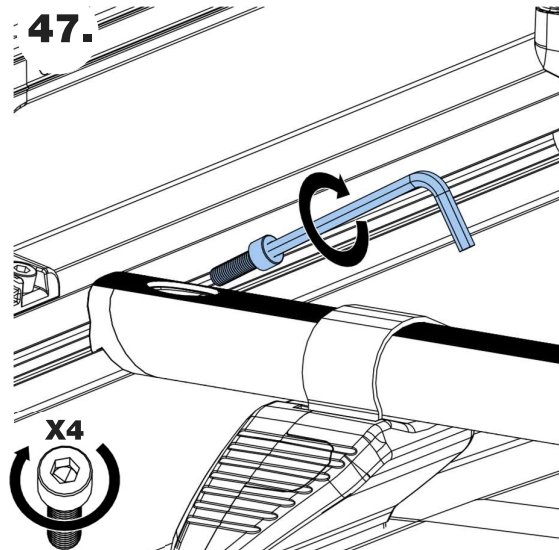


48.

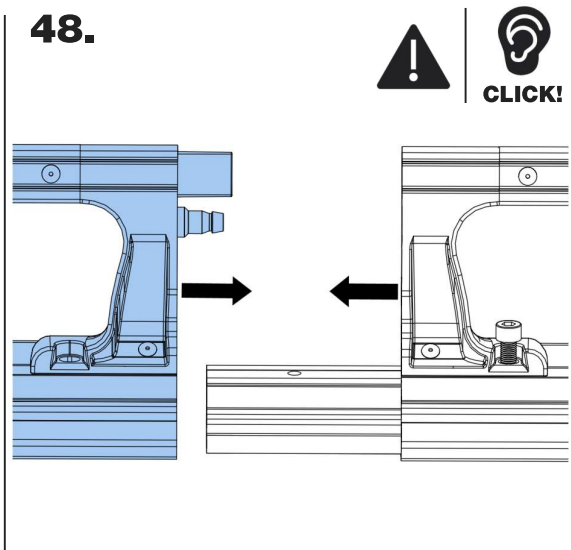


49.

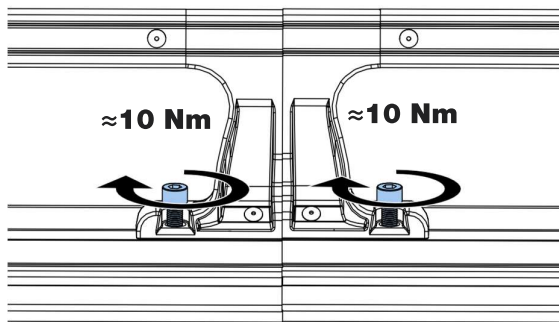



50.

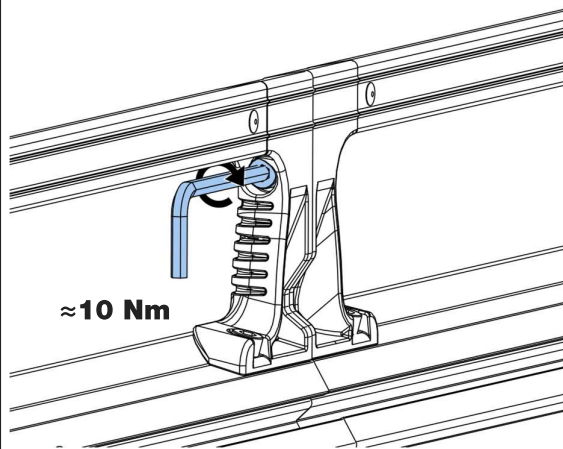


51.

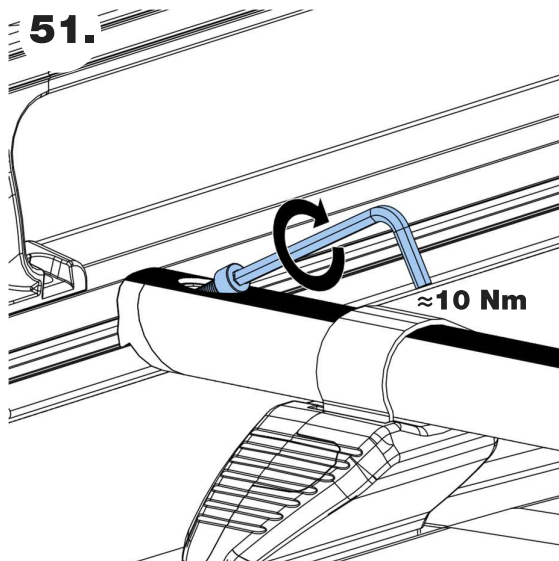


52.

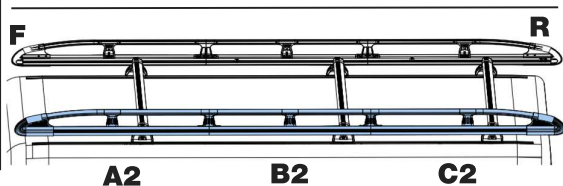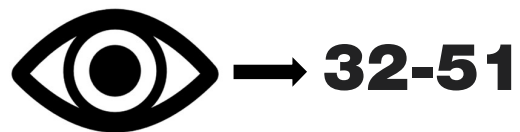


53.

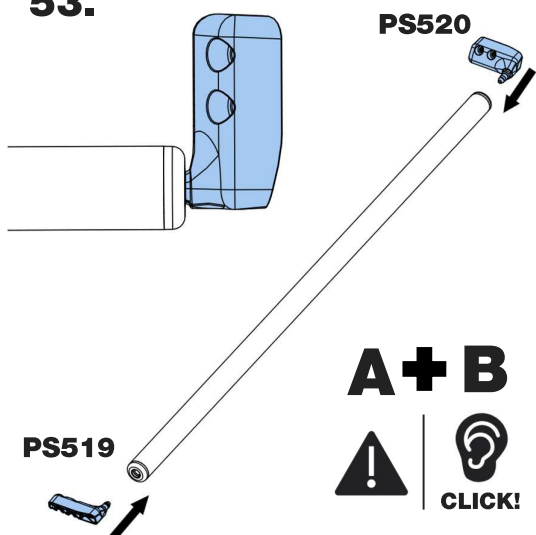


54.

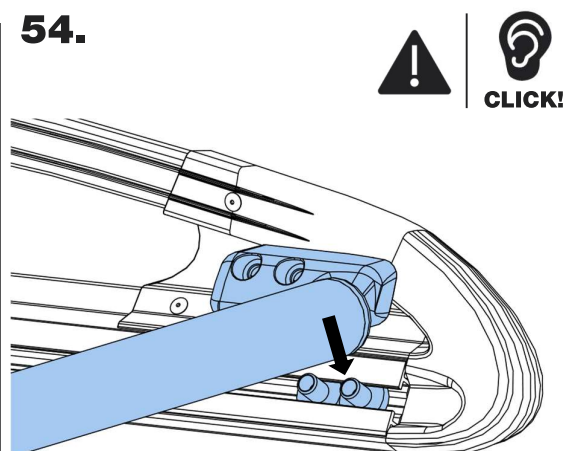


**55.**

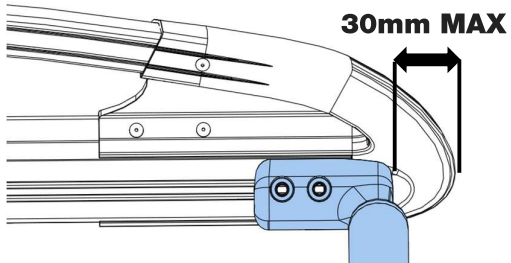


**56.**

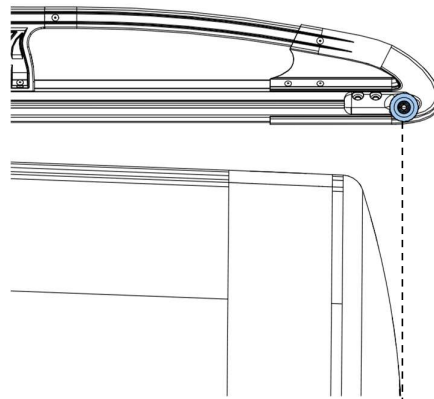


**57.**

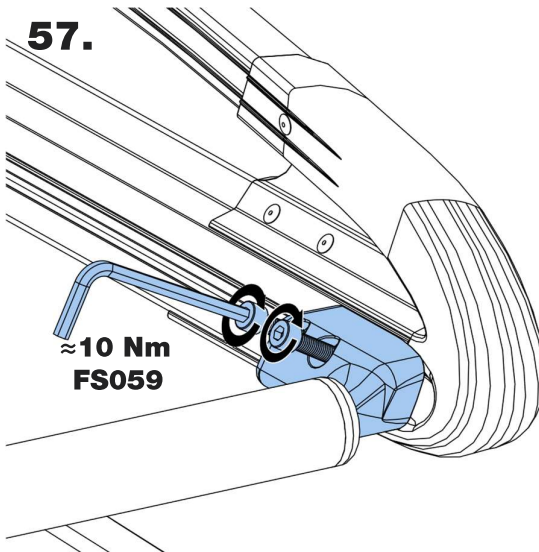


**58.**

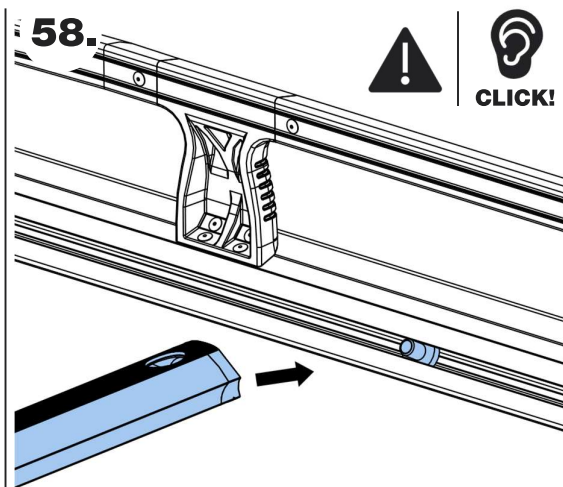


**59.**

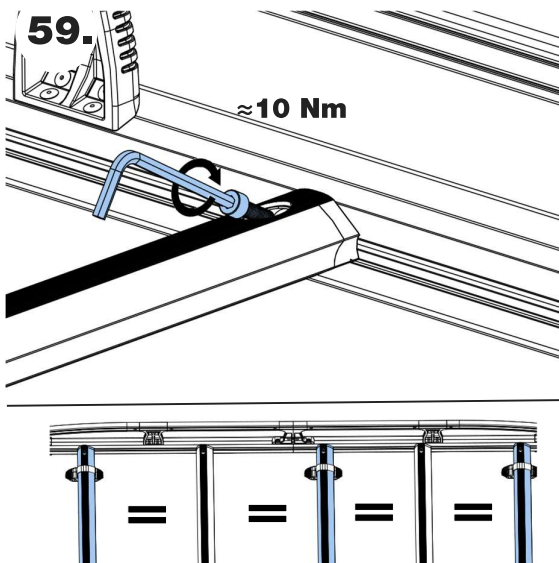

**60.**

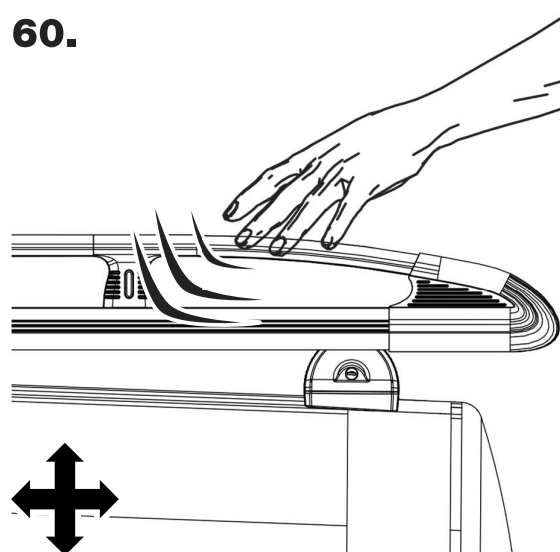

61.

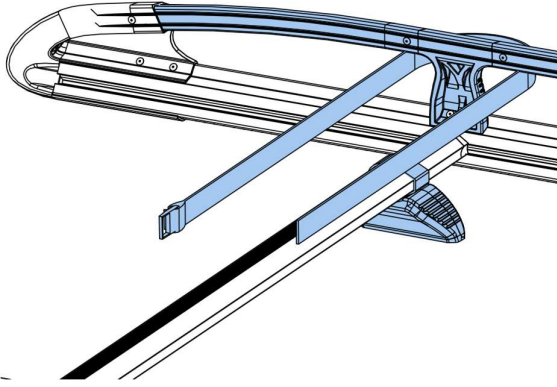

62.

