






TB2PR/FL KammBar

Instructions

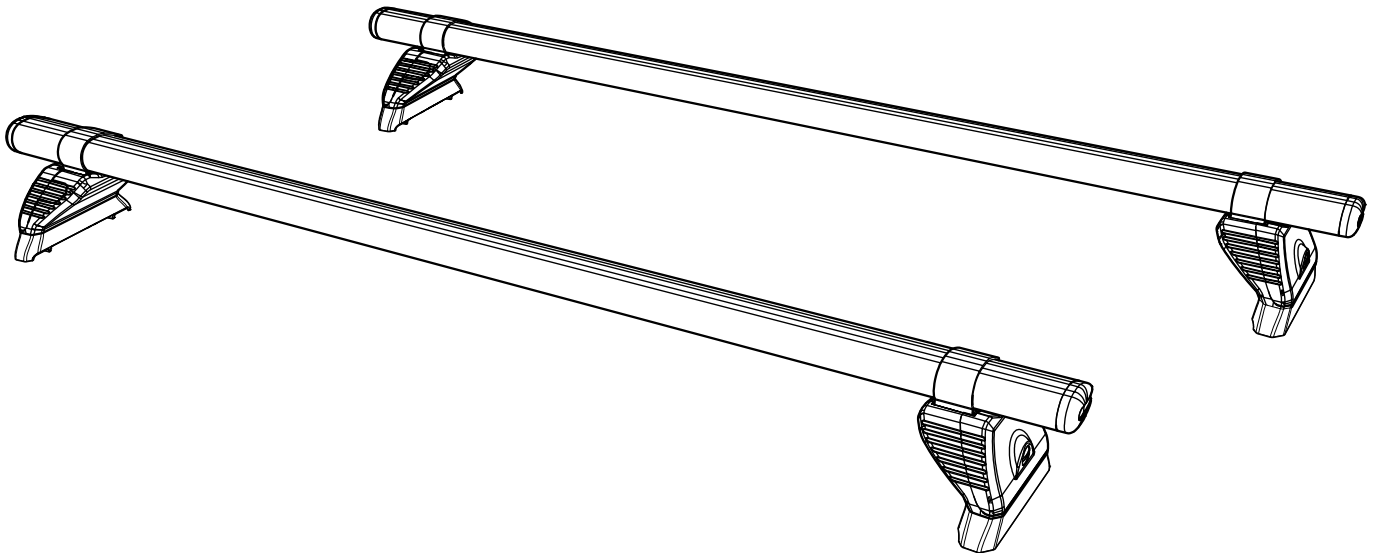


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

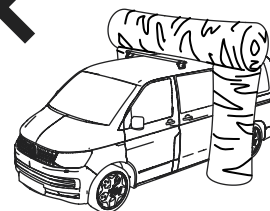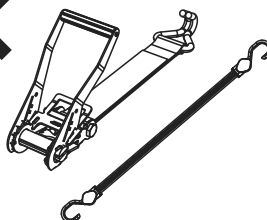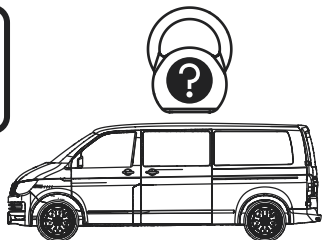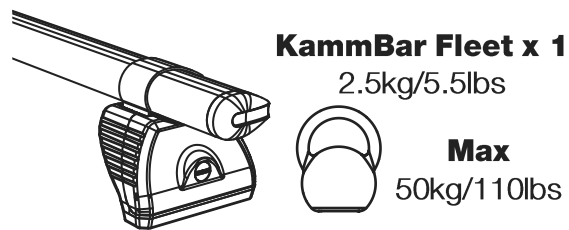


KammBar Pro

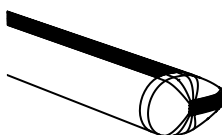


SA420 x 2 ☐



SA070 x 4 ☐

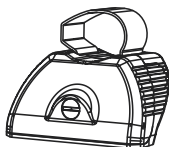


SA397 x 2 ☐

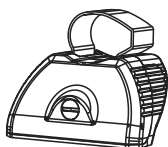


SA398 x 2 ☐


KammBar Fleet

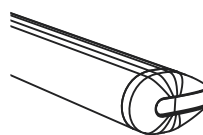


SA394 x 2 ☐



C04 x 2
optional upgrade

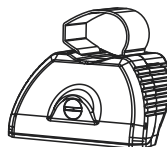


SA397 x 2 ☐

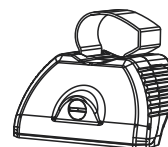


SA398 x 2 ☐

Fitting Kit




PS178 x 4 ☐




PS404 x 4 ☐




PS492 x 4 ☐




PS491 x 4 ☐

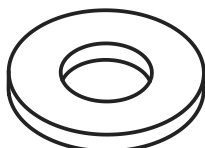


FW002 (M8) x 8 ☐

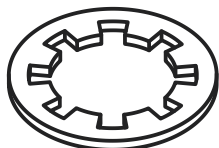

FW009 (M8) x 8 ☐




FS061
(M8 x 35) x 8 ☐

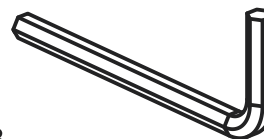


FT01 x 1 ☐


1.

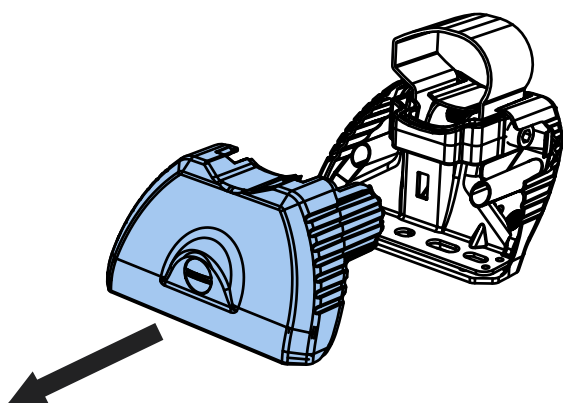

2.


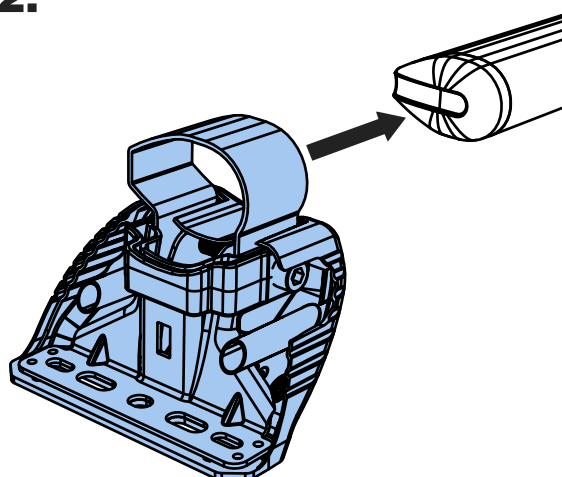


3.

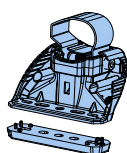



SA397
PS178

SA398
PS178

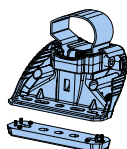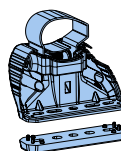


SA397
PS178


SA398
PS178

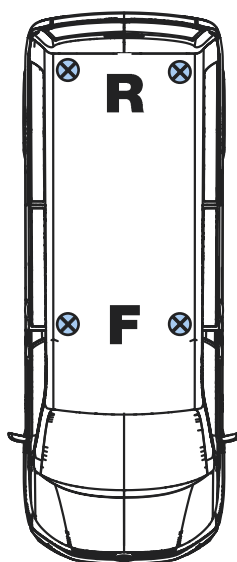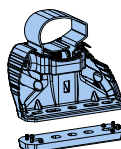


4.

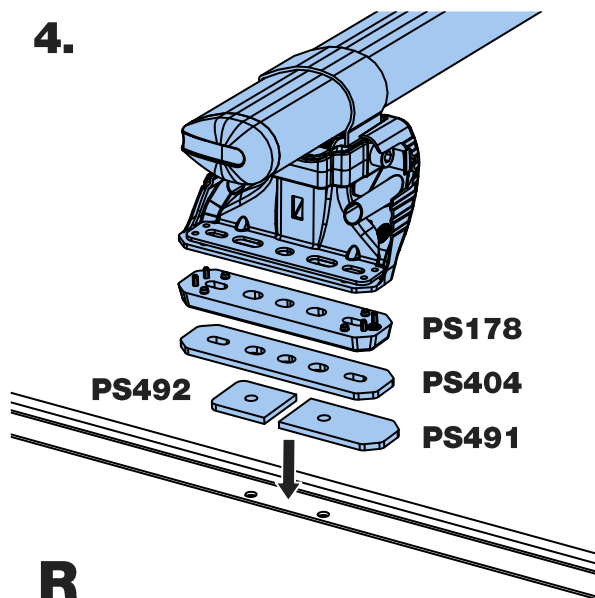


5.

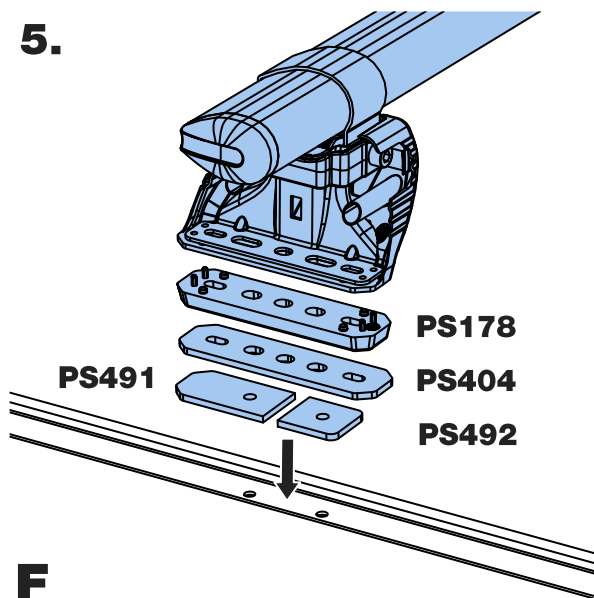


6.

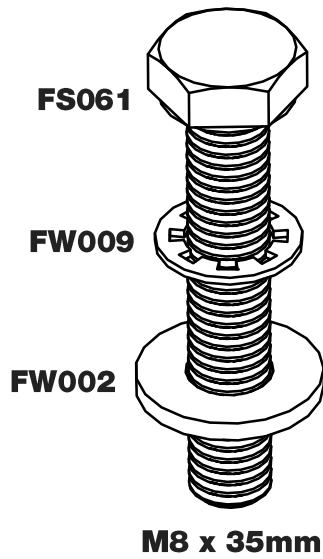


7.

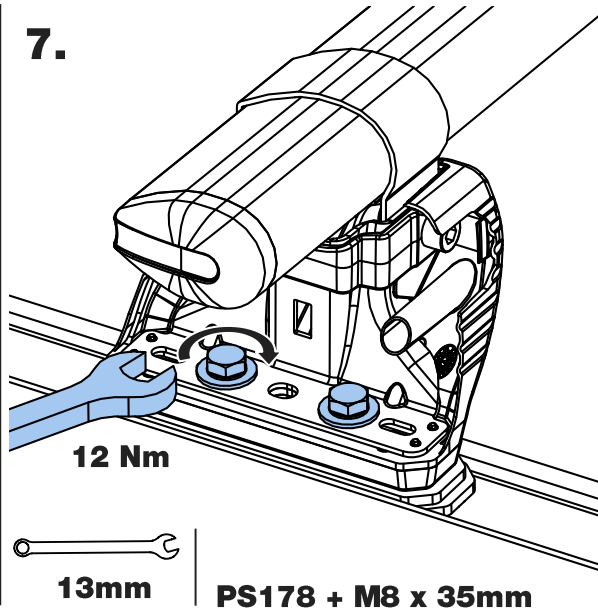


8.

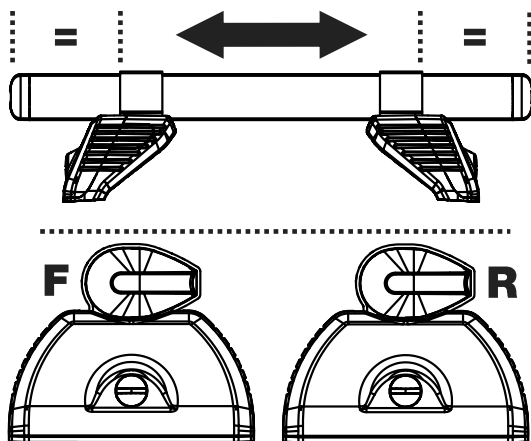

9.

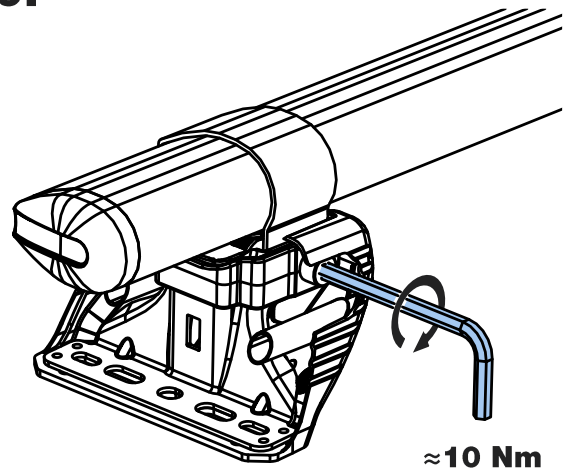

10.

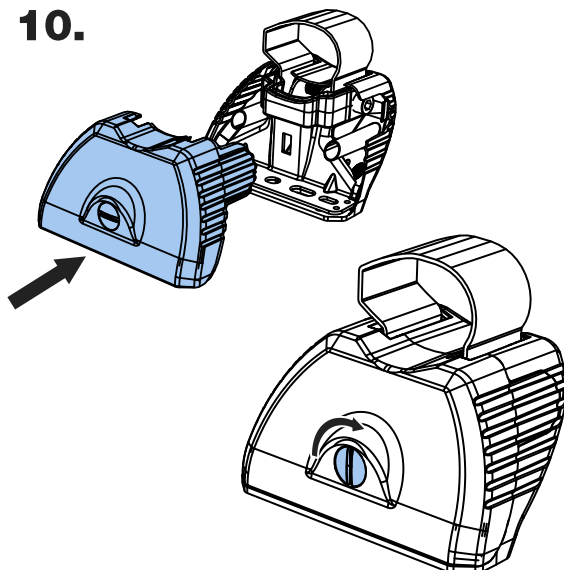

11.

