


TD2PR/FL





KammBar

Instructions

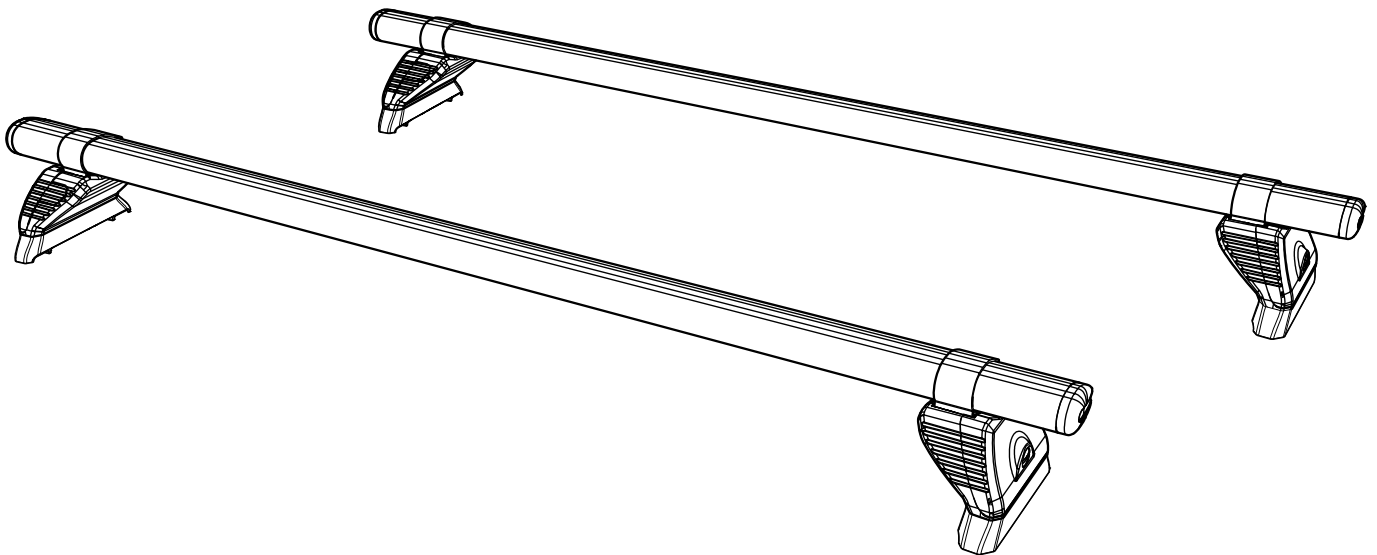


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

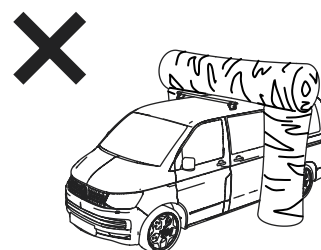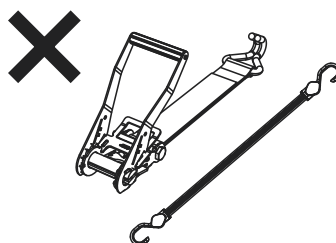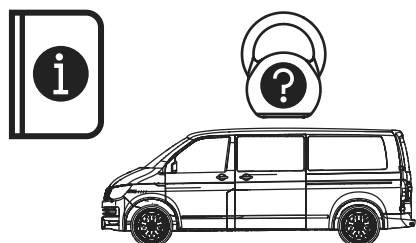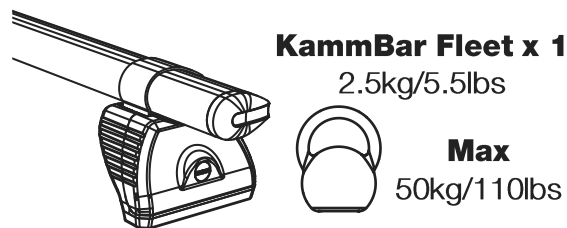


KammBar Pro

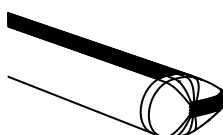


SA419 x 2 ☐



SA070 x 4 ☐

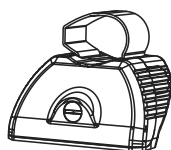


SA397 x 2 ☐

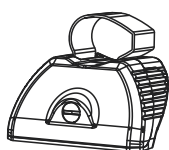


SA398 x 2 ☐


KammBar Fleet

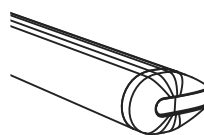


SA393 x 2 ☐



C04 x 2
optional upgrade

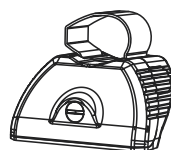


SA397 x 2 ☐

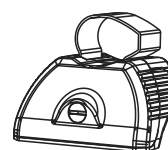


SA398 x 2 ☐


Fitting Kit

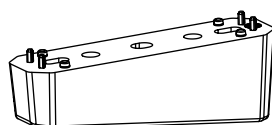


PS175 x 2 ☐

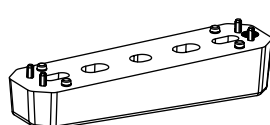


PS176 x 2 ☐




PS030 x 4 ☐

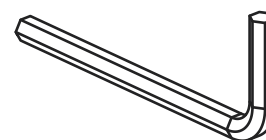

FT01 x 1 ☐

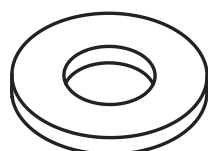


FW001 (M6) x 6

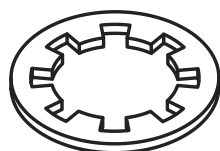

FW008 (M6) x 6




FB005
(M6 x 60) x 2




FB001
(M6 x 55) x 4




1.

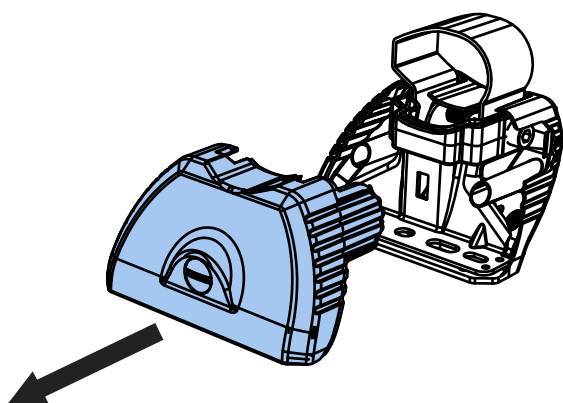


2.

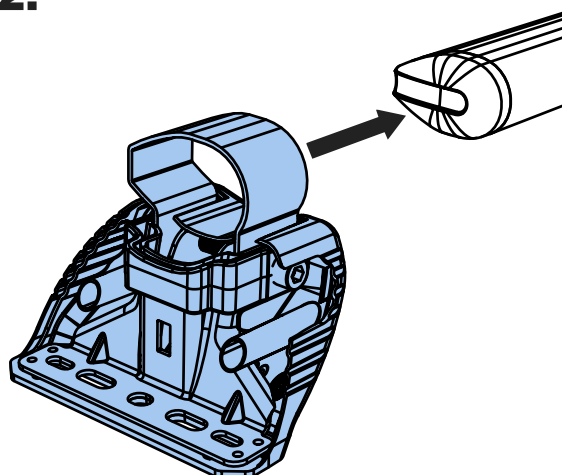



3.



SA397
PS176

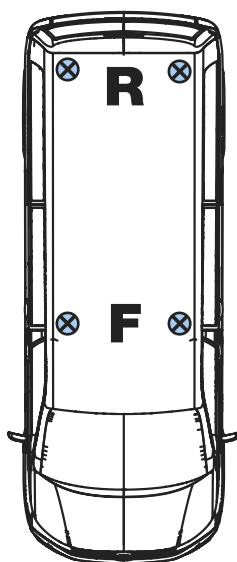


SA398
PS176




SA397
PS175


SA398
PS175




4.

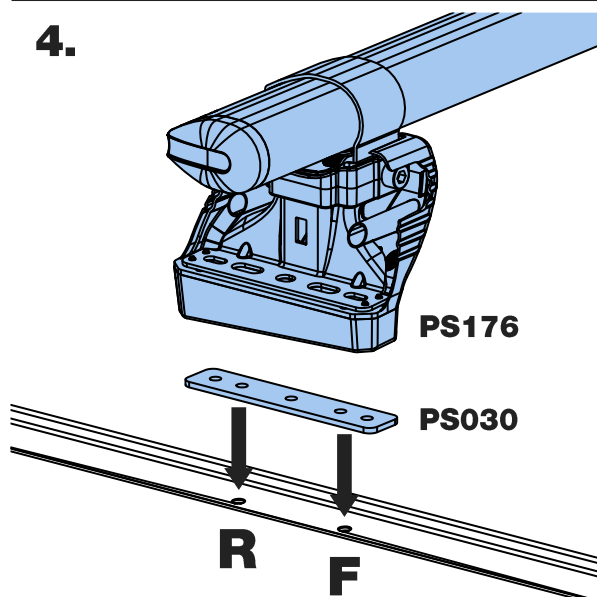


5.

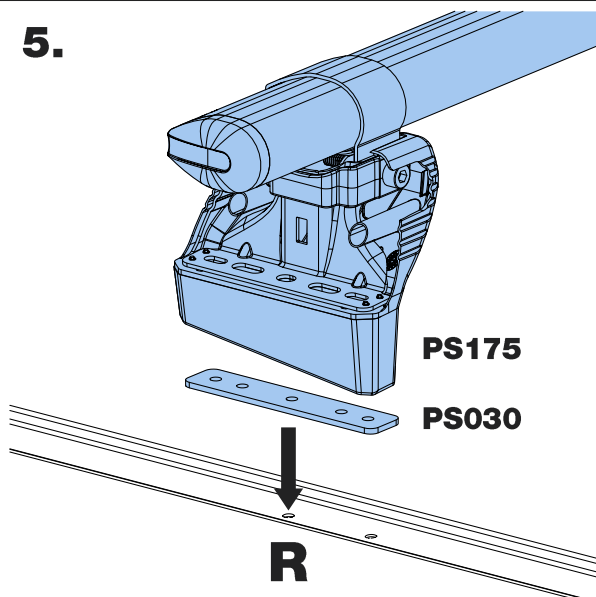


6.

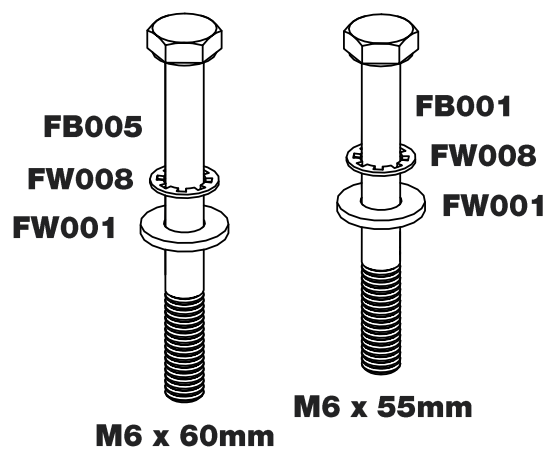


7.

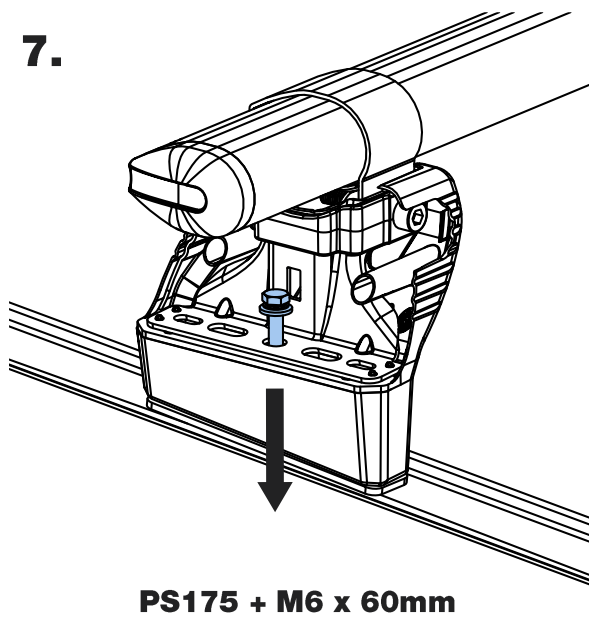


8.

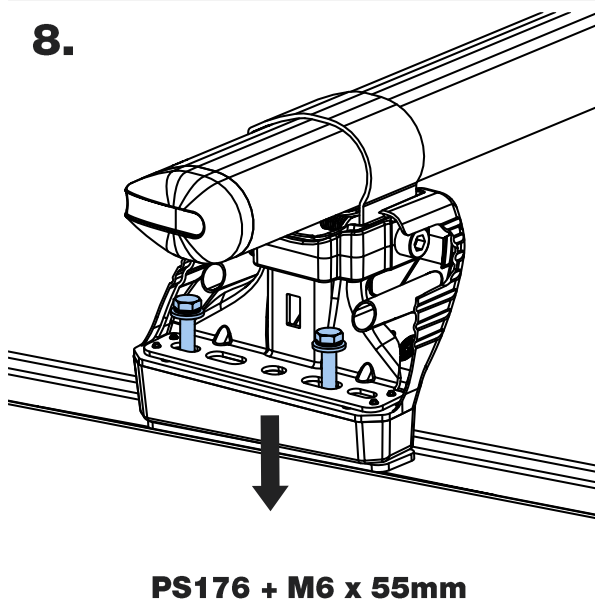


9.

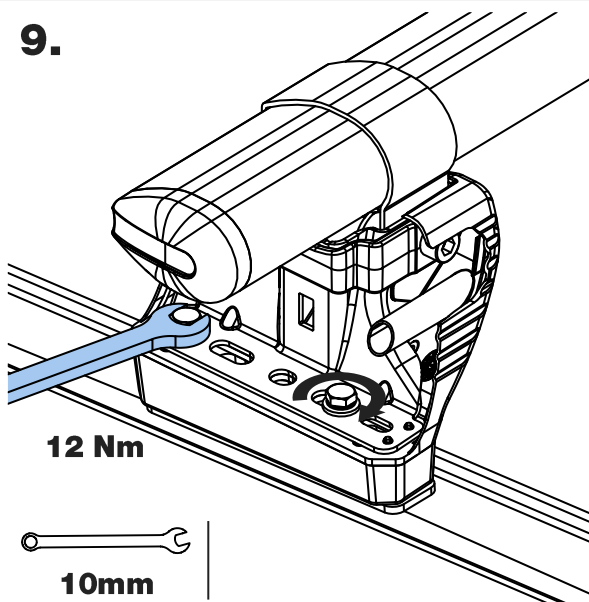


10.

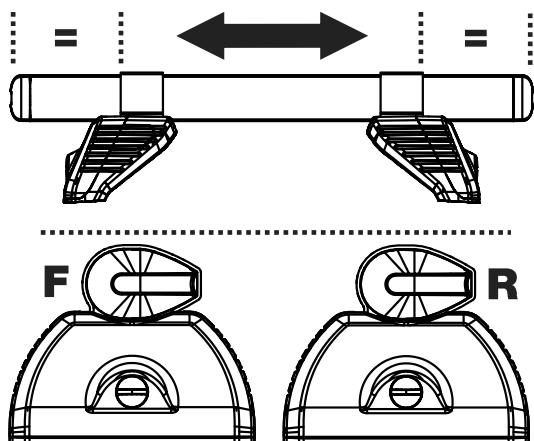

11.

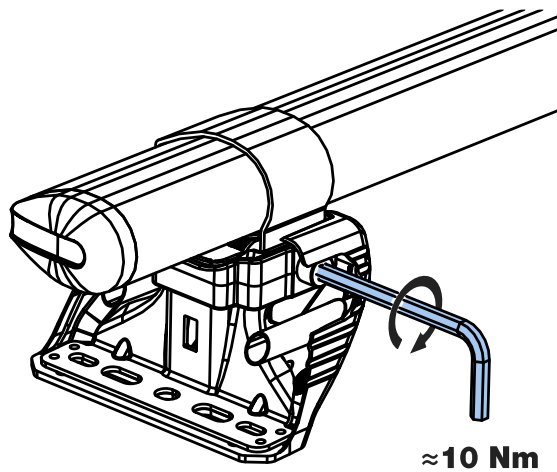

12.

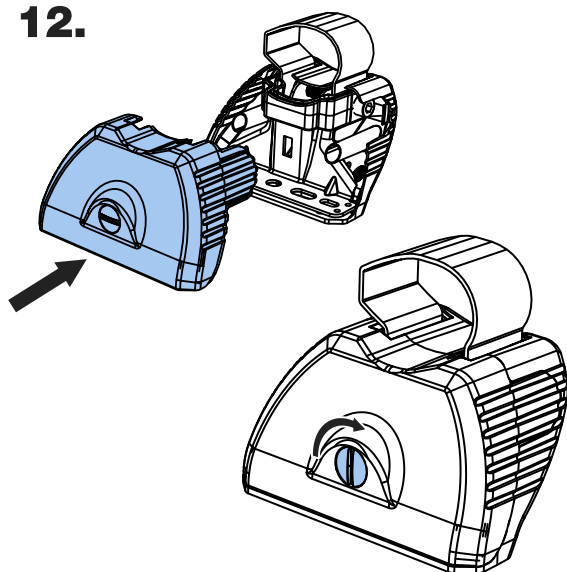

13.

