


VA2PR/FL





KammBar

Instructions

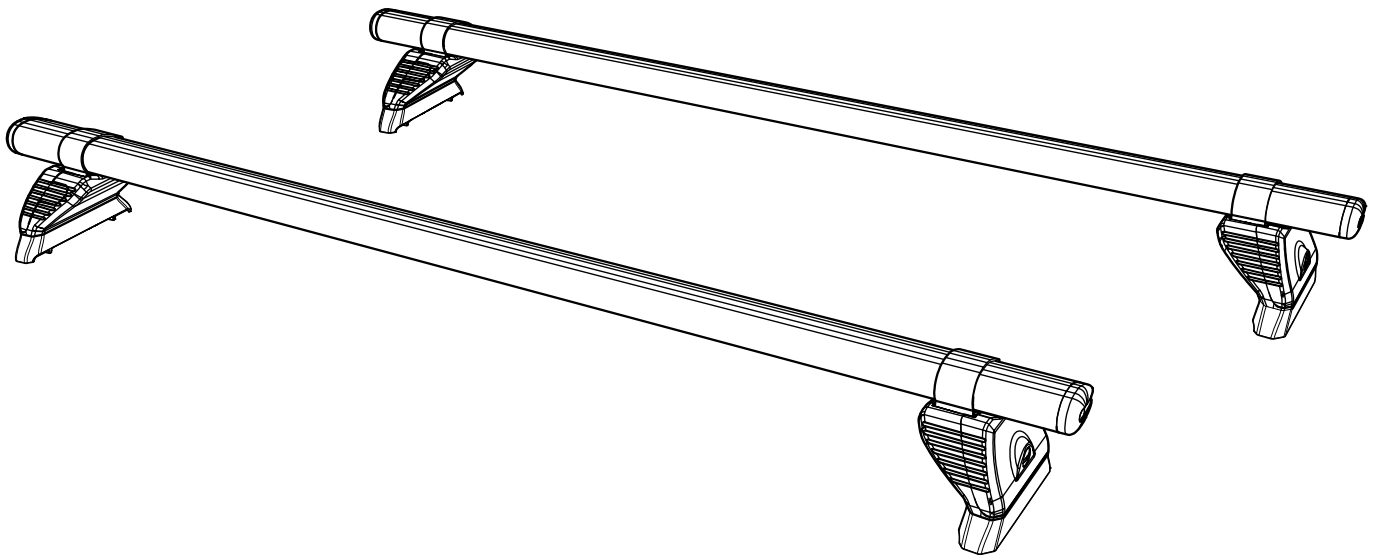


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

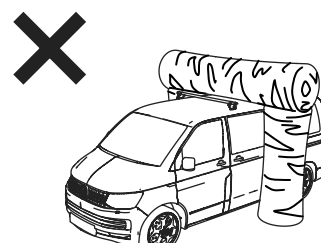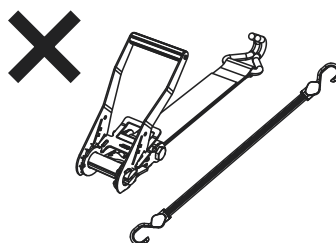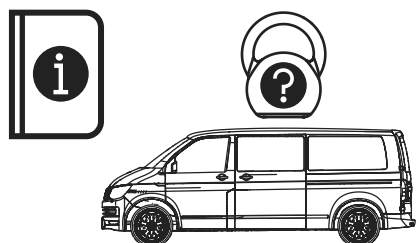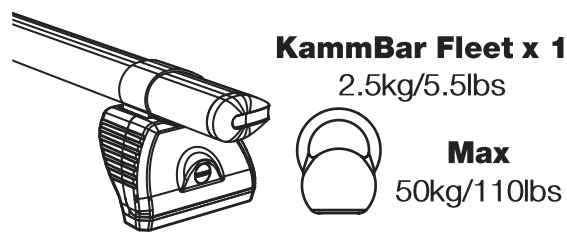


KammBar Pro

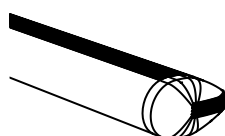


SA421 x 2 ☐



SA070 x 4 ☐

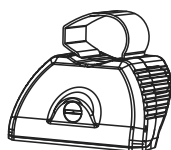


SA397 x 2 ☐

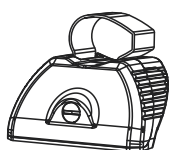


SA398 x 2 ☐


KammBar Fleet

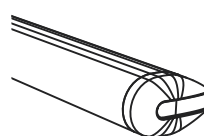


SA395 x 2 ☐



C04 x 2
optional upgrade

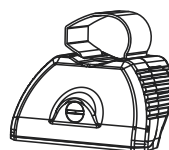


SA397 x 2 ☐

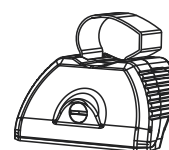


SA398 x 2 ☐

Fitting Kit



PS186 x 4 ☐




PS210 x 4 ☐



FT02 x 1 ☐



FT01 x 1 ☐



PS208 (M6) x 2 ☐




FW036 (M6) x 2 ☐



PS209 (M6) x 4 ☐




FW001 (M6) x 4 ☐



SA069 x 2 ☐




FW002 (M8) x 2 ☐




TP030 (M6) x 2



FS103
(M6 x 25) x 4




FS062
(M8 x 25) x 2




FB001
(M6 x 55) x 2



1.

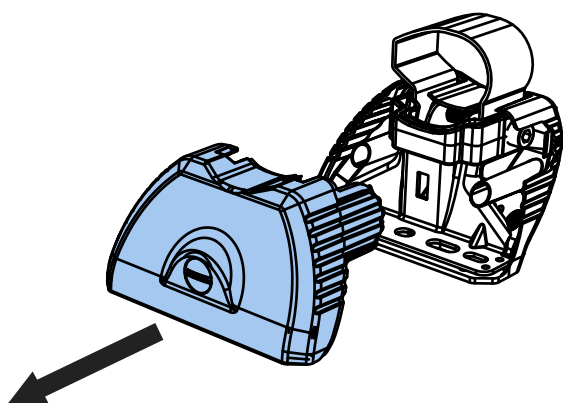

2.

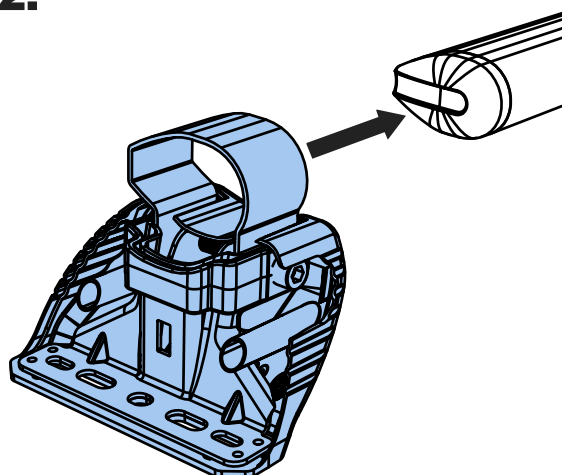

3.




SA397

PS186

SA398

PS186





SA397

PS186

SA398


PS186

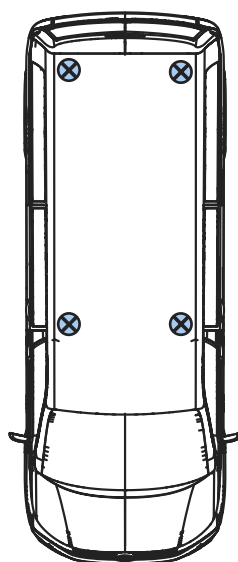

4.

FS103


FW001
PS209



M6 x 25mm

FS062


FW002

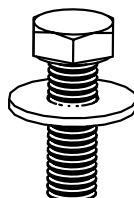

M8 x 25mm


FB001

FW036
PS208

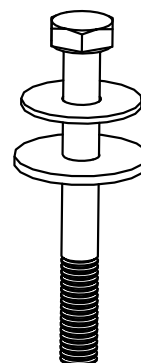


M6 x 55mm

5.

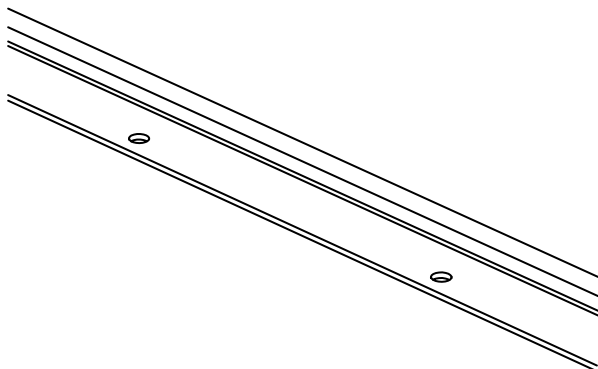


7-13, 17-20.

6.

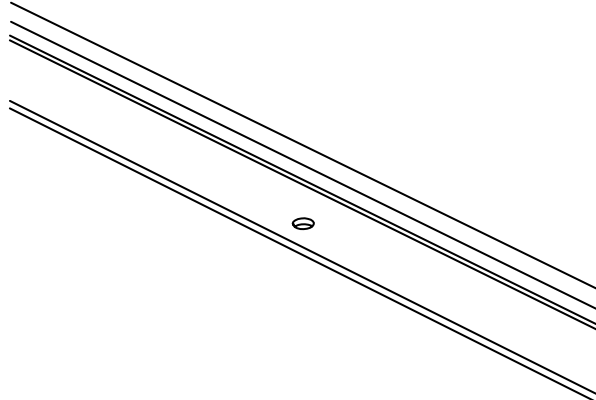


14-20.


7.

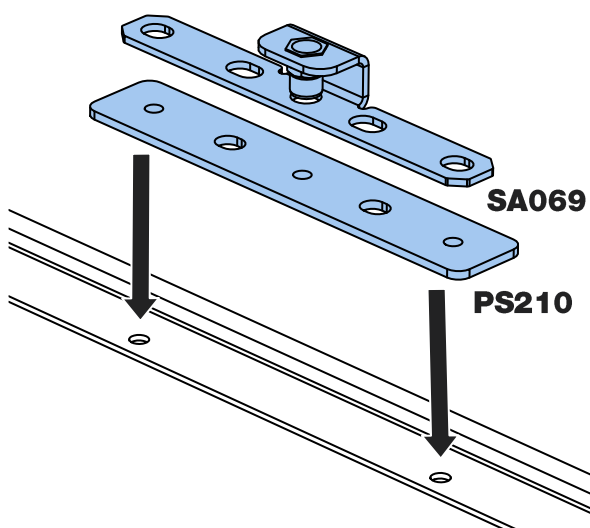

8.

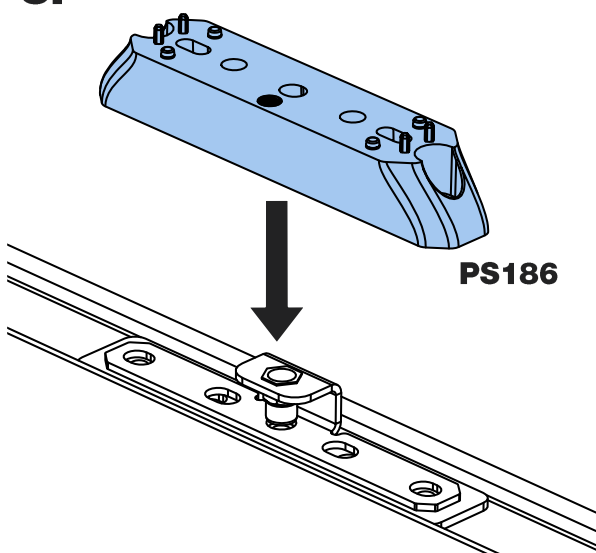


9.

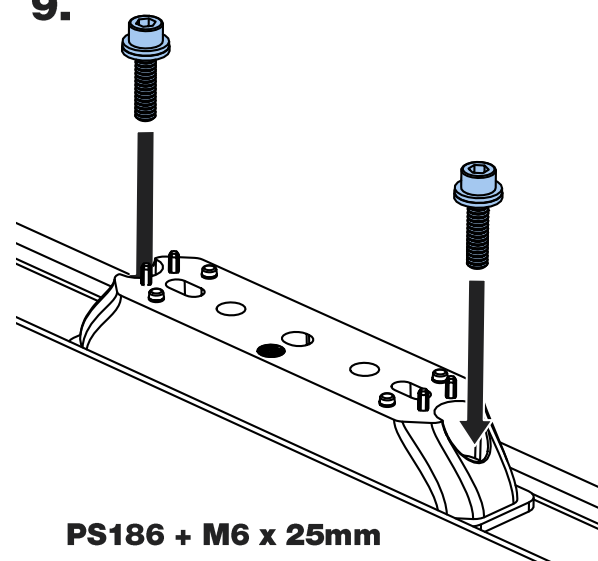

PS186 + M6 x 25mm


10.

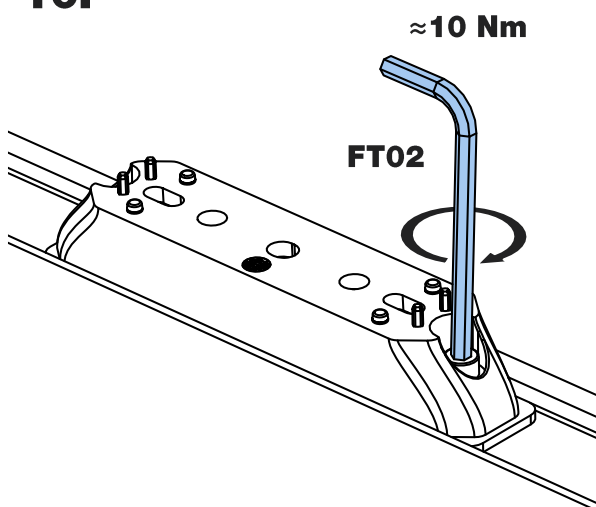


≈10 Nm

FT02

11.

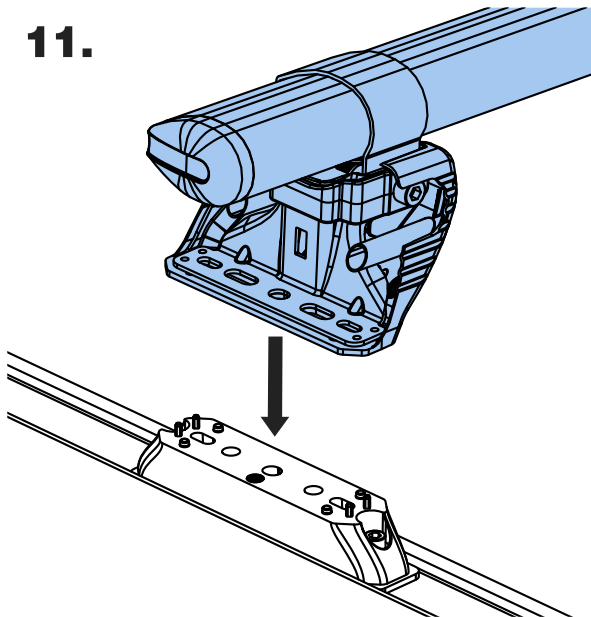


12.

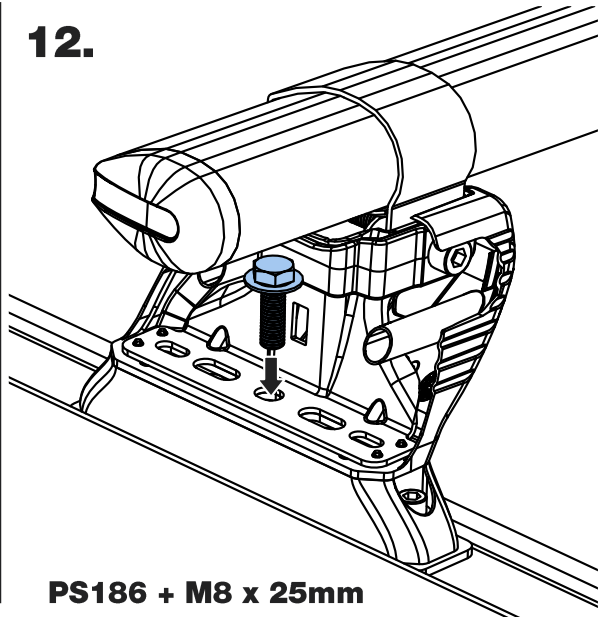

PS186 + M8 x 25mm


13.

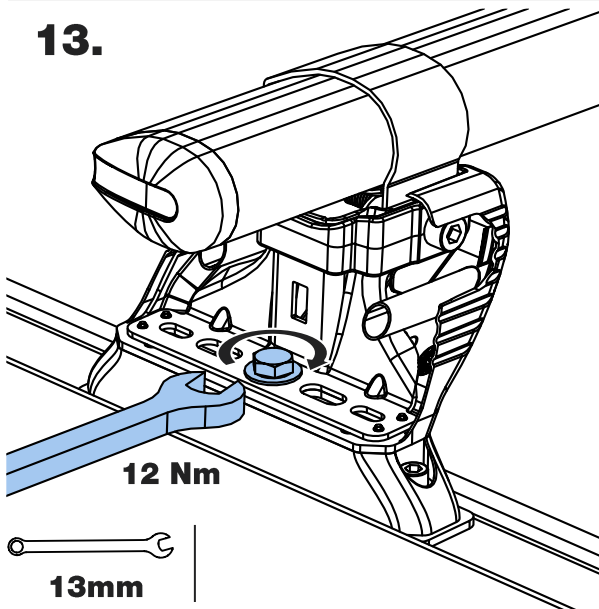

12 Nm

13mm


14.

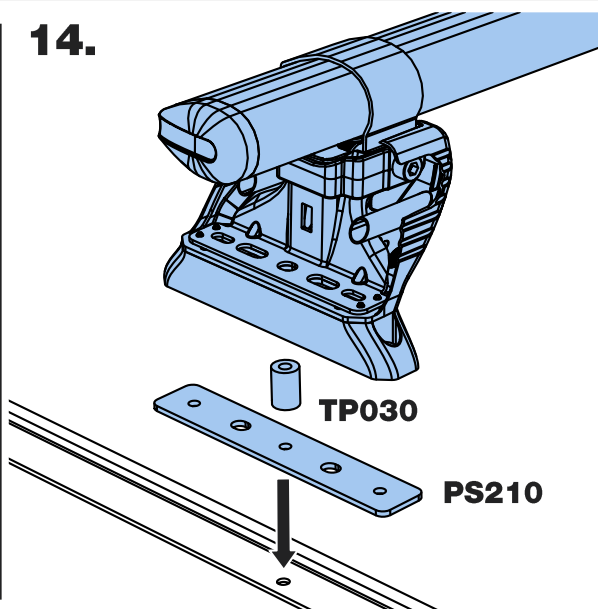

TP030


PS210

15.

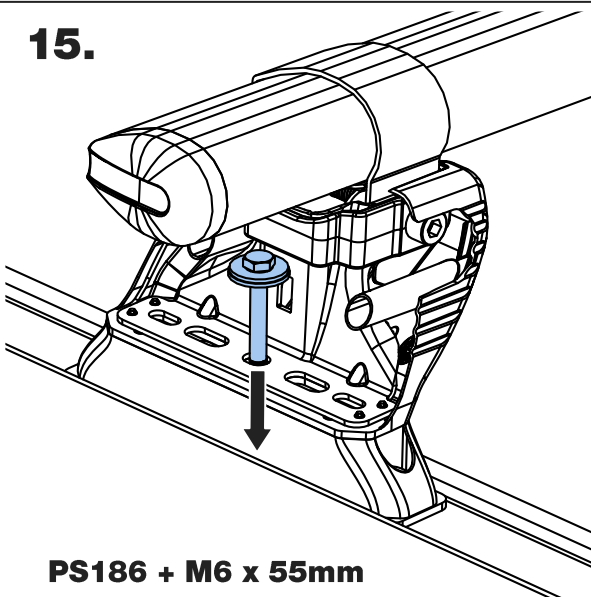

PS186 + M6 x 55mm


16.

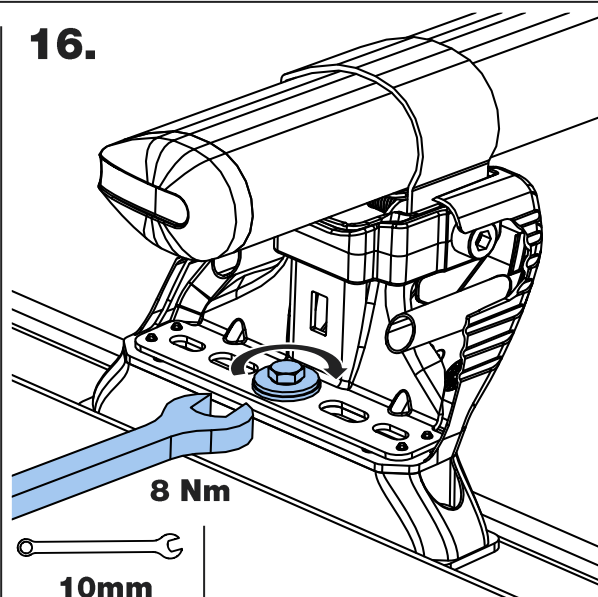


8 Nm

10mm


17.

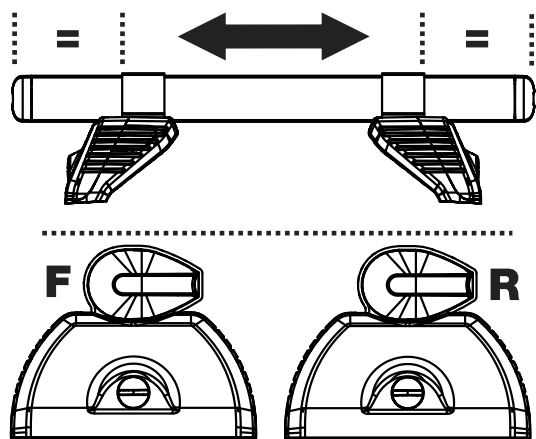

18.

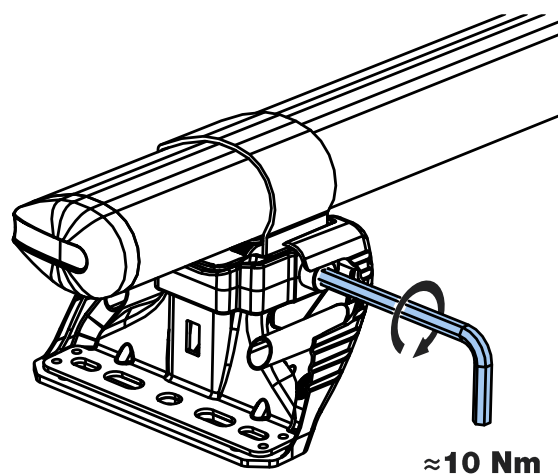

19.

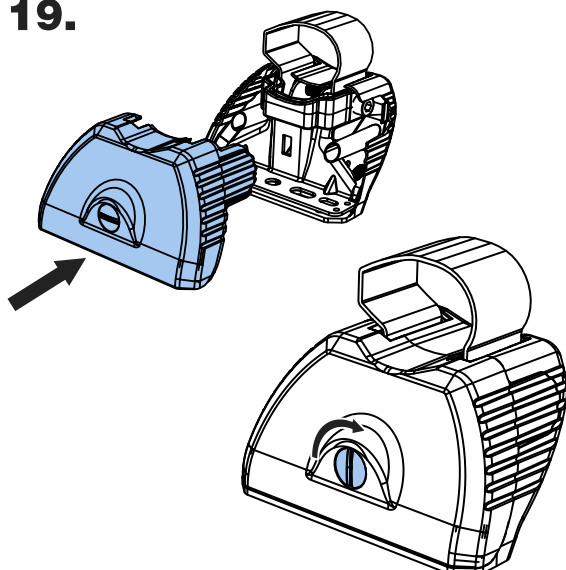

20.

