






MA3PR/FL KammBar

Instructions

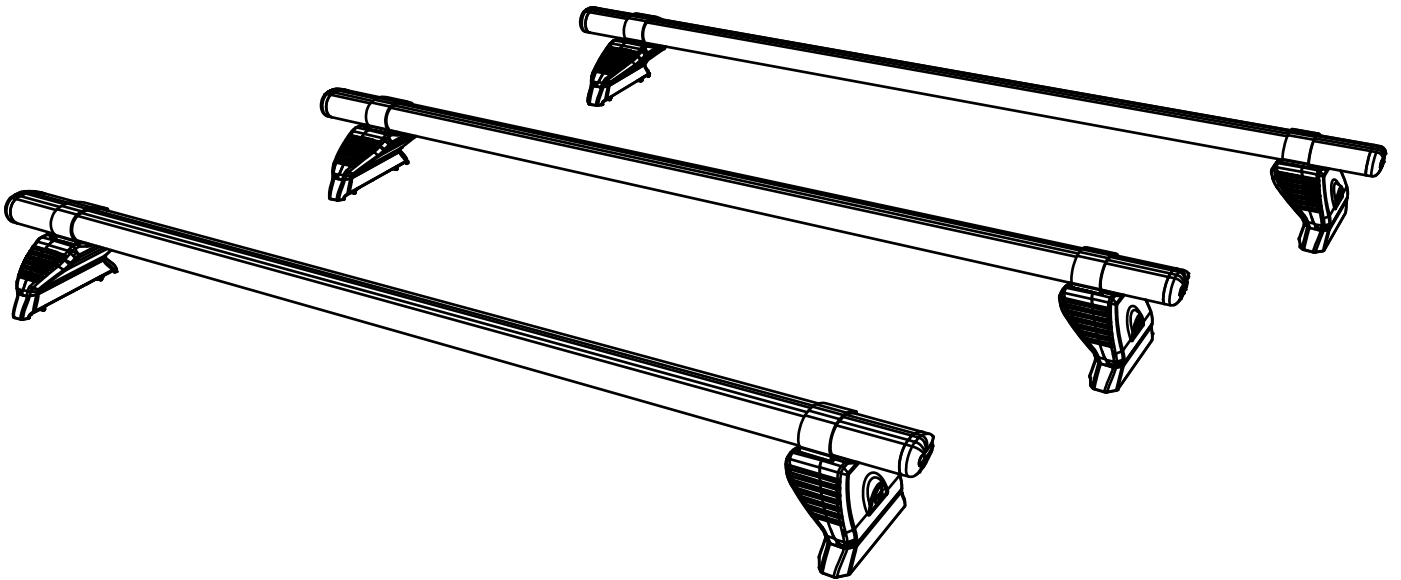


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

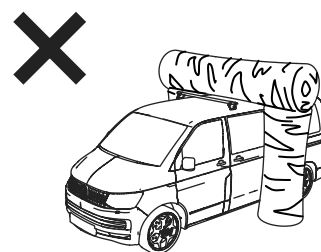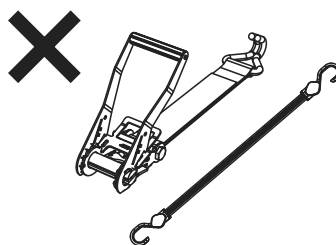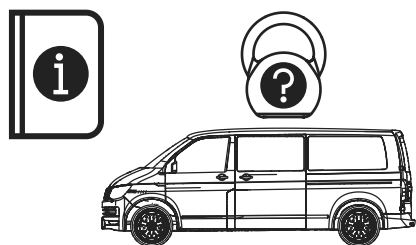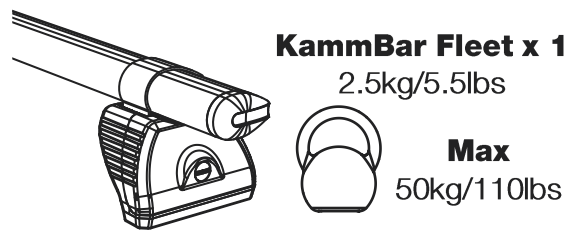


KammBar Pro

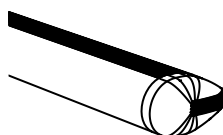


SA420 x 3 ☐



SA070 x 4 ☐

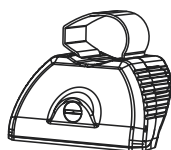


SA397 x 3 ☐

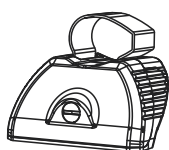


SA398 x 3 ☐


KammBar Fleet

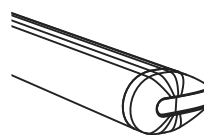


SA394 x 3 ☐



C04 x 3
optional upgrade

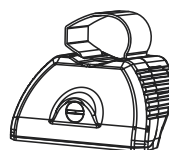


SA397 x 3 ☐

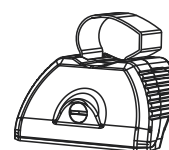

SA398 x 3 ☐

Fitting Kit




PS183 x 6 ☐




FT01 x 1 ☐




FN020 (M6) x 12 ☐




FS042
(M6 x 40) ☐
x 12

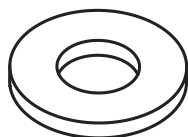

FW001 (M6) x 12 ☐

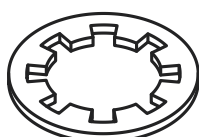


FW008 (M6) x 12 ☐

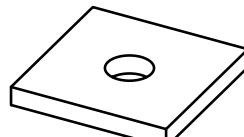


PS024 x 12 ☐


1.

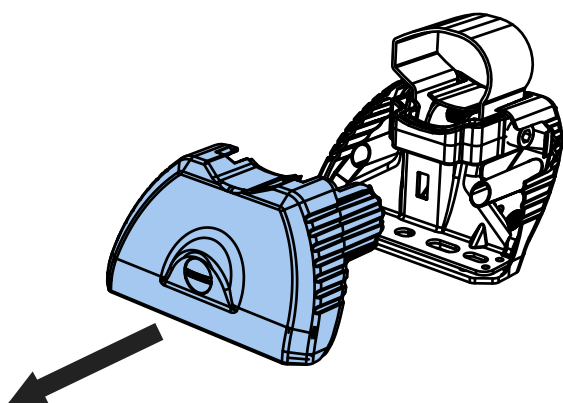

2.

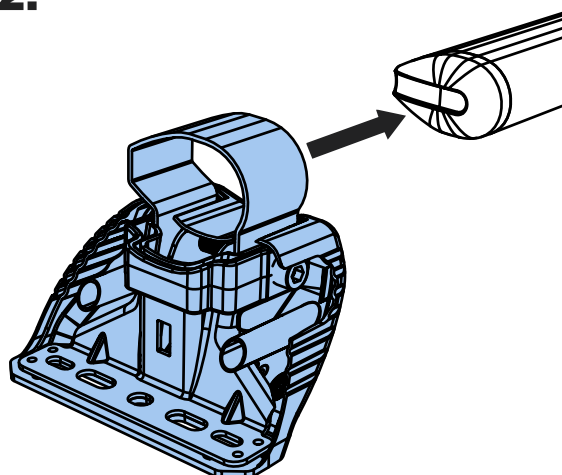


3.



SA397

PS183




SA397

PS183




SA397

PS183

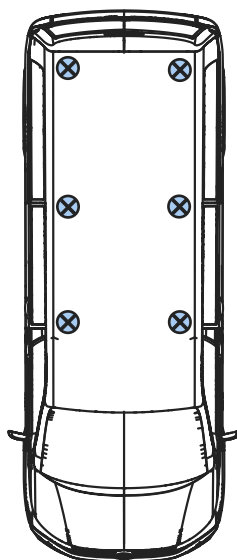


SA398




PS183

SA398




PS183

SA398




PS183


4.

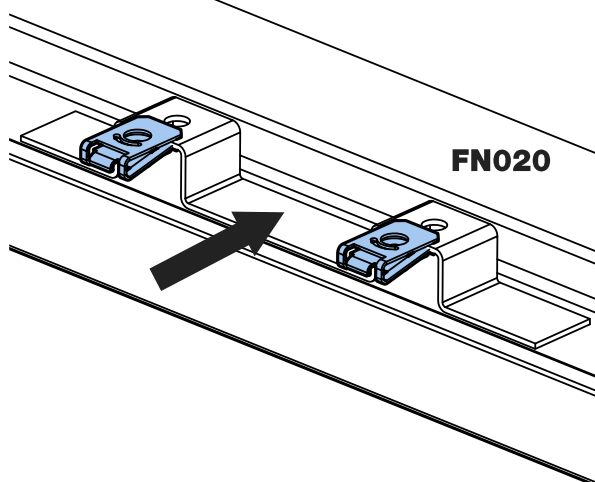


5.

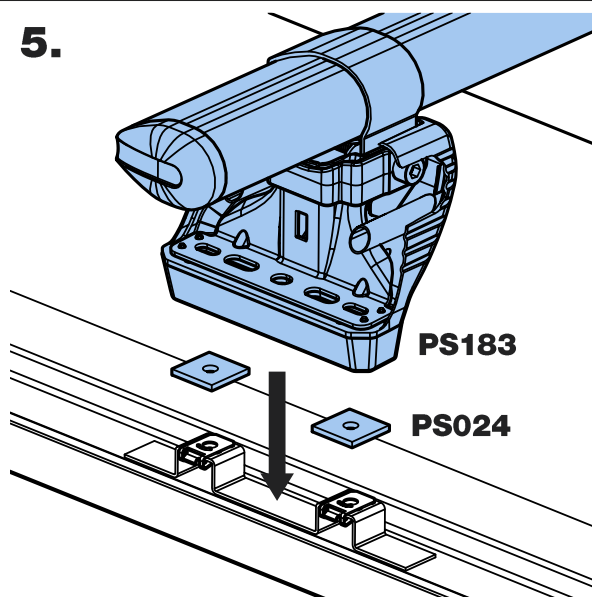


6.

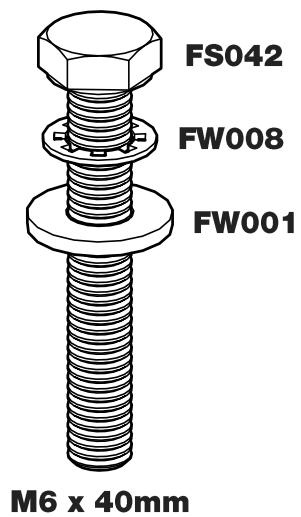


7.

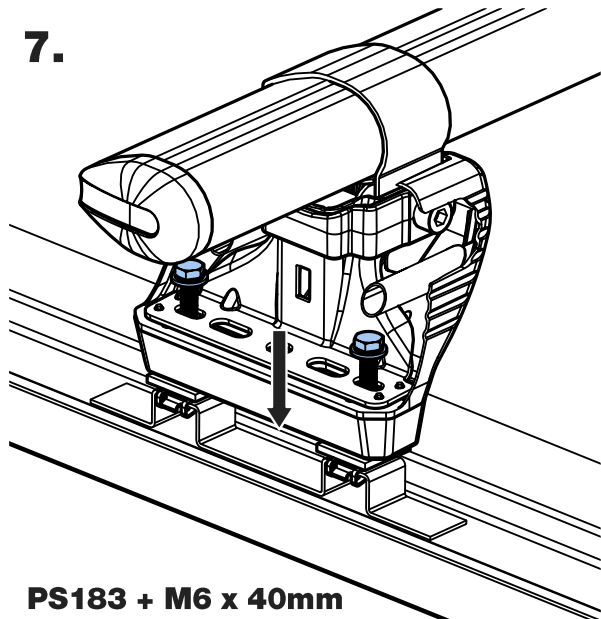


8.

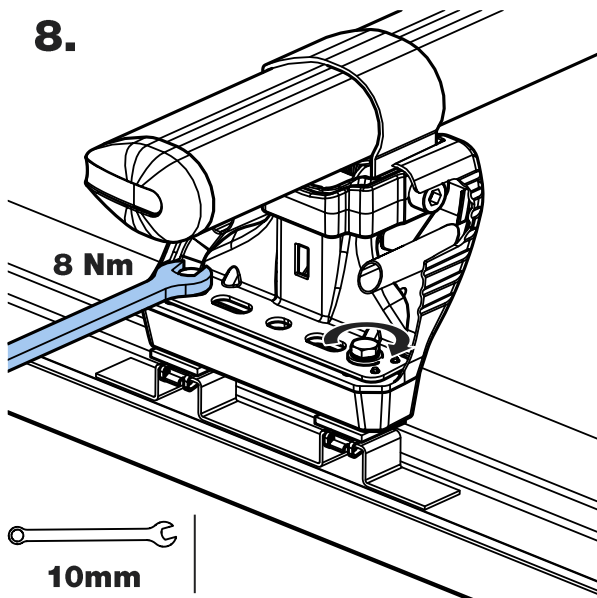


9.

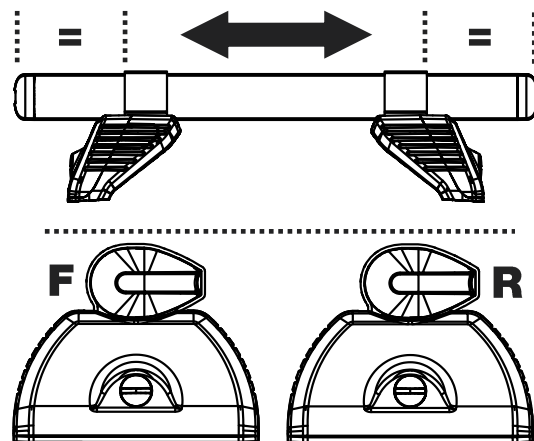


10.

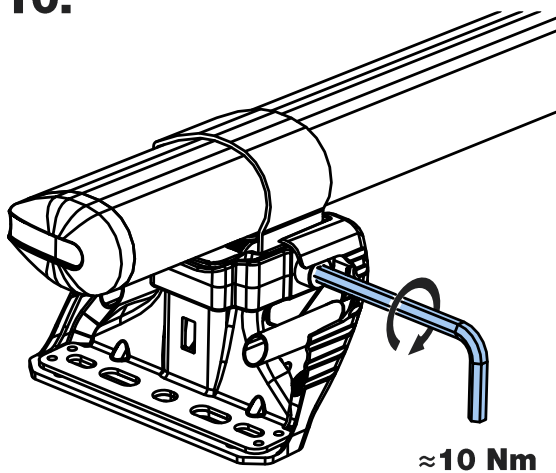

11.

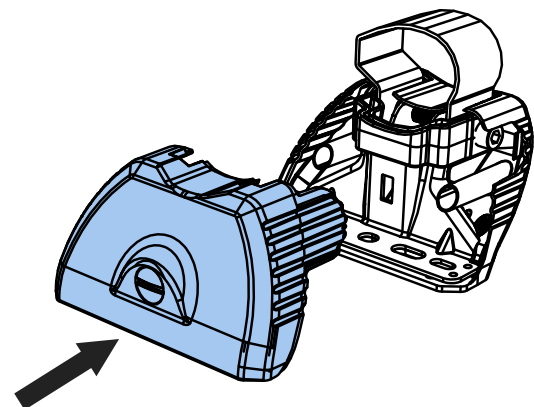

12.

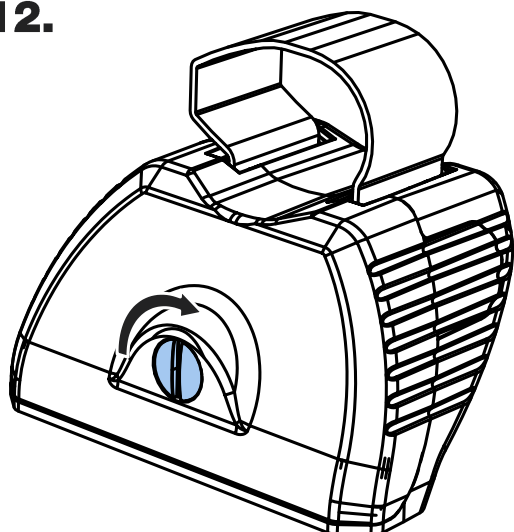

13.

