


VA3PR/FL





KammBar

Instructions

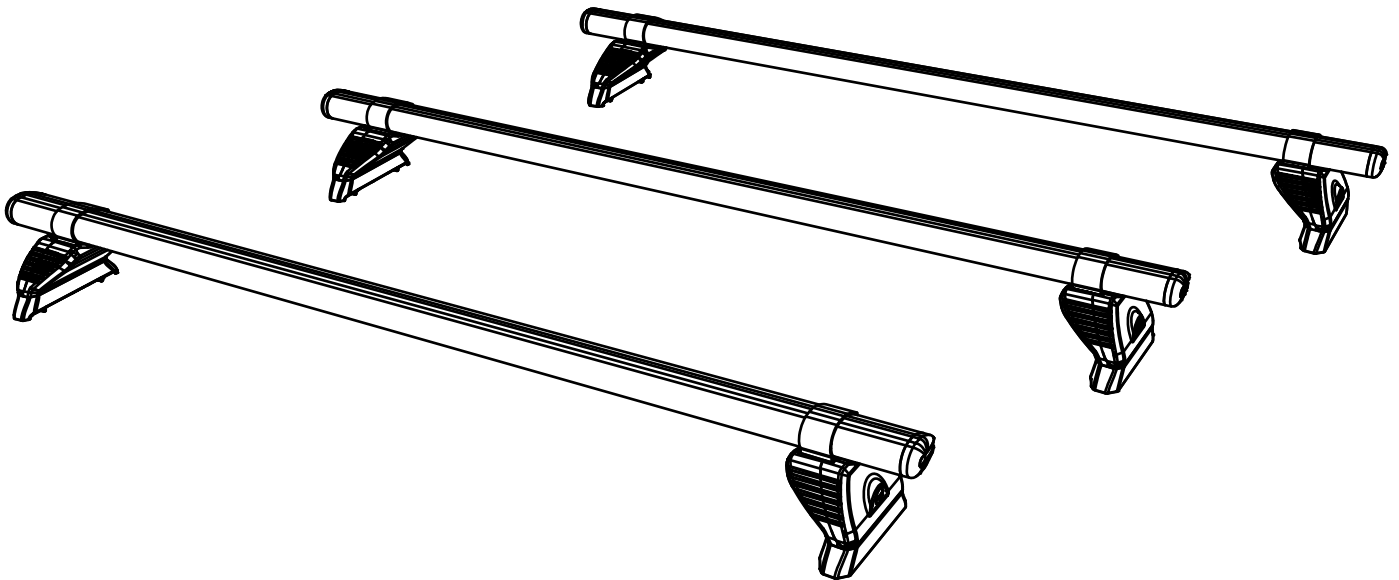


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

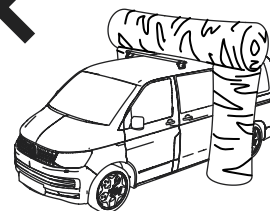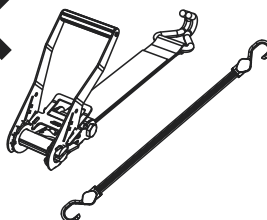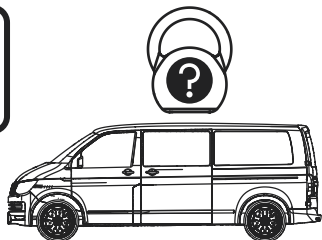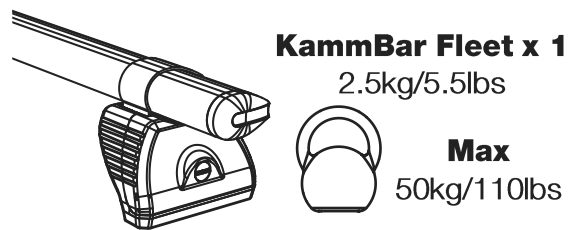


KammBar Pro

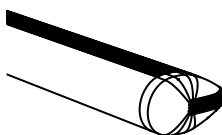


SA421 x 3 ☐



SA070 x 4 ☐

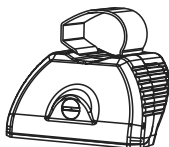


SA397 x 3 ☐

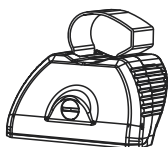


SA398 x 3 ☐


KammBar Fleet

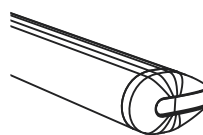


SA395 x 3 ☐



C04 x 3
optional upgrade

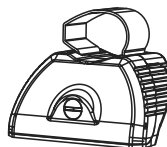


SA397 x 3 ☐

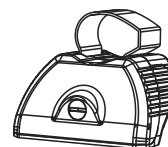


SA398 x 3 ☐


Fitting Kit



PS186 x 6 ☐




PS210 x 6 ☐

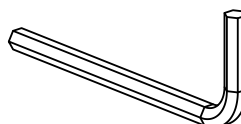

FT02 x 1 ☐



FT01 x 1 ☐



PS208 (M6) x 2 ☐




FW036 (M6) x 2 ☐



PS209 (M6) x 8 ☐




FW001 (M6) x 8 ☐



SA069 x 4 ☐




FW002 (M8) x 4 ☐




TP030 (M6) x 2



FS103
(M6 x 25) x 8




FS062
(M8 x 25) x 4




FB001
(M6 x 55) x 2



1.

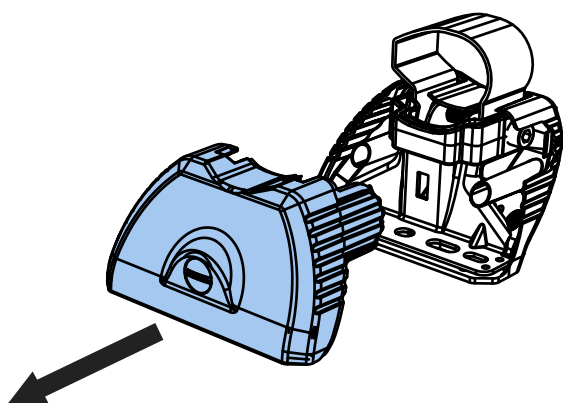

2.

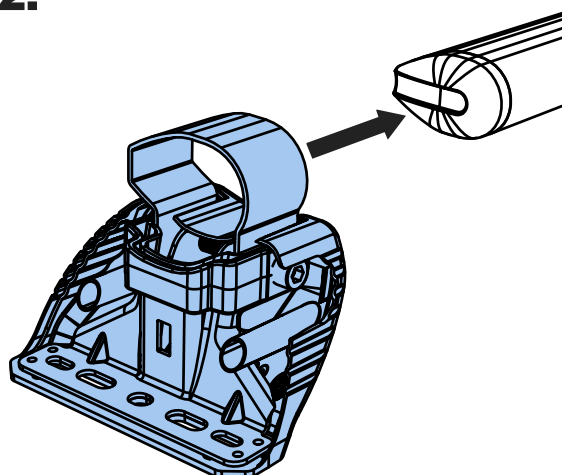


3.



SA397

PS186




SA397

PS186




SA397

PS186

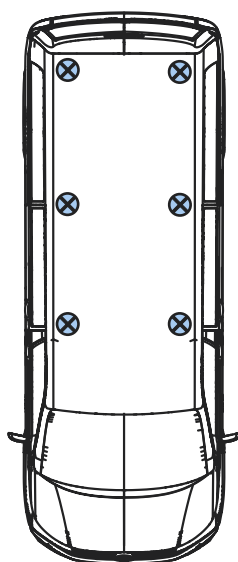


SA398

PS186




SA398

PS186




SA398

PS186




4.

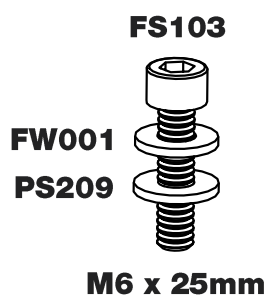

FS103

FW001
PS209


M6 x 25mm

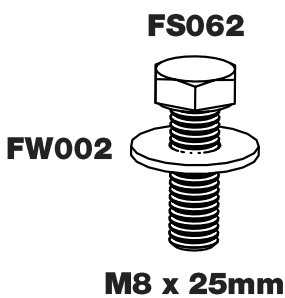

FS062

FW002

M8 x 25mm

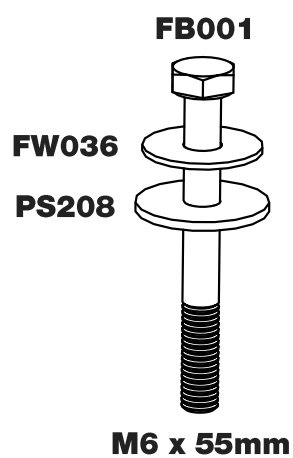


FB001

FW036
PS208


M6 x 55mm

5.

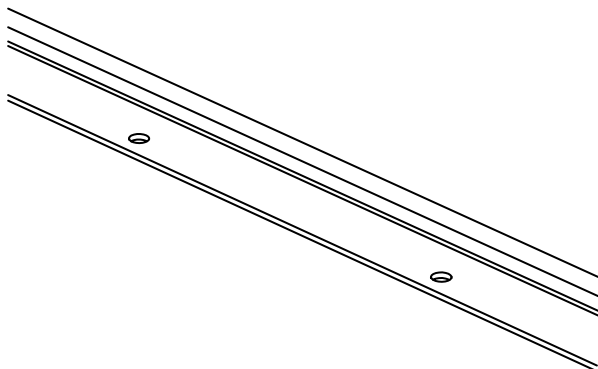


7-13, 17-20.

6.

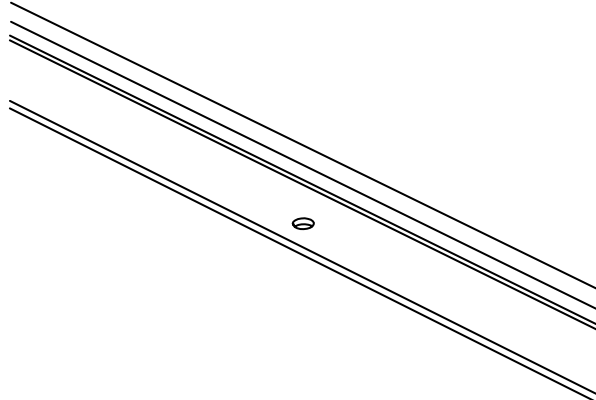


14-20.


7.

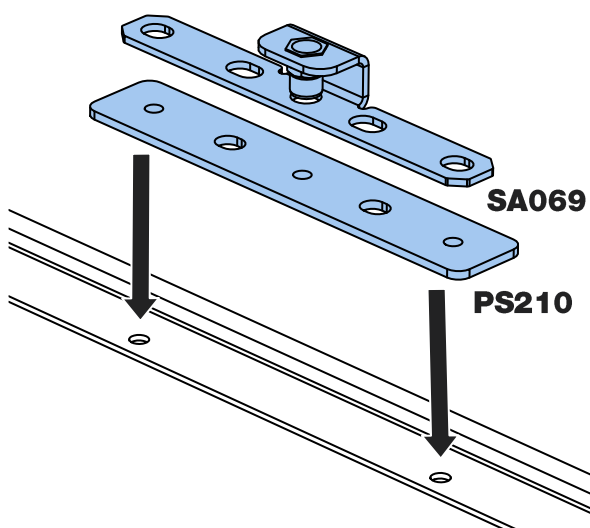


8.

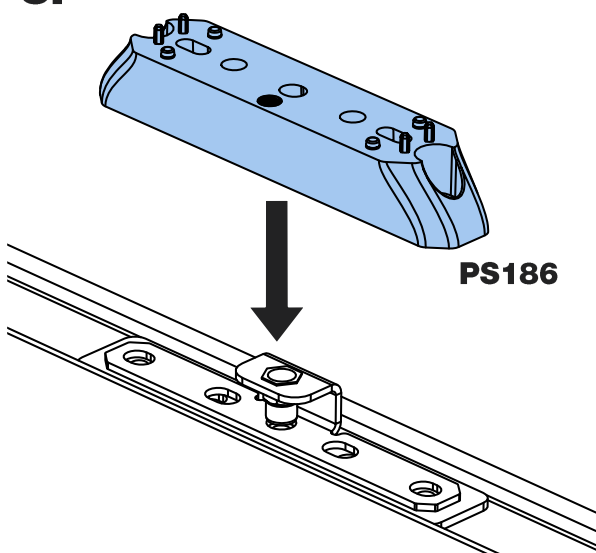


9.

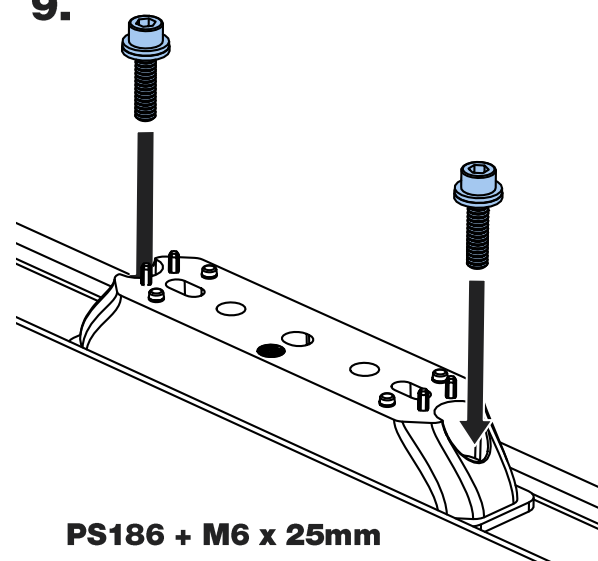


10.

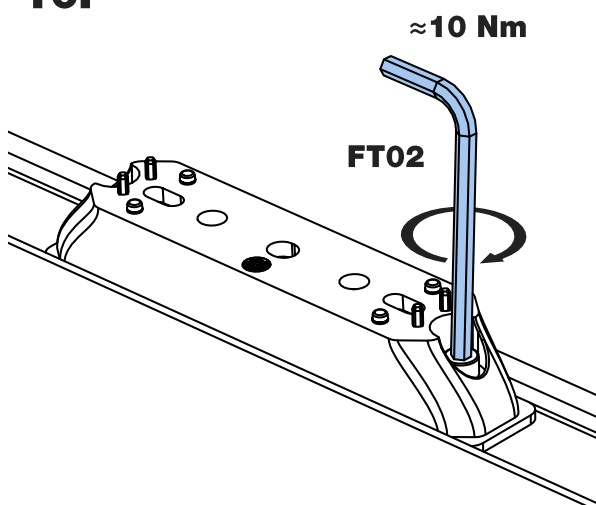


11.

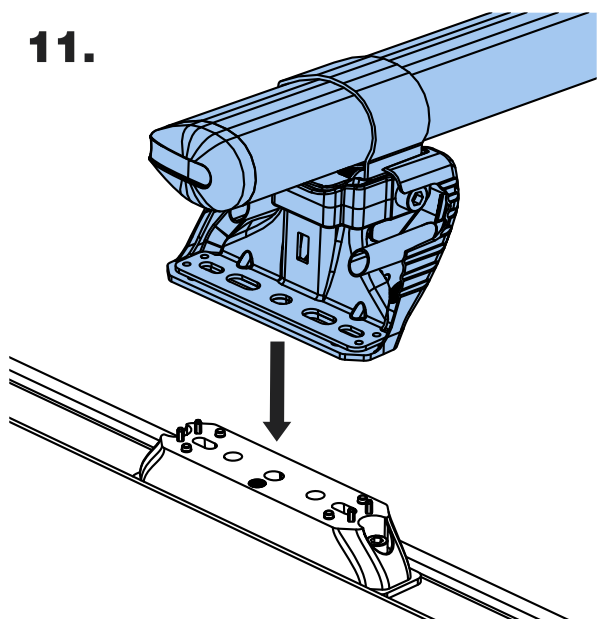


12.

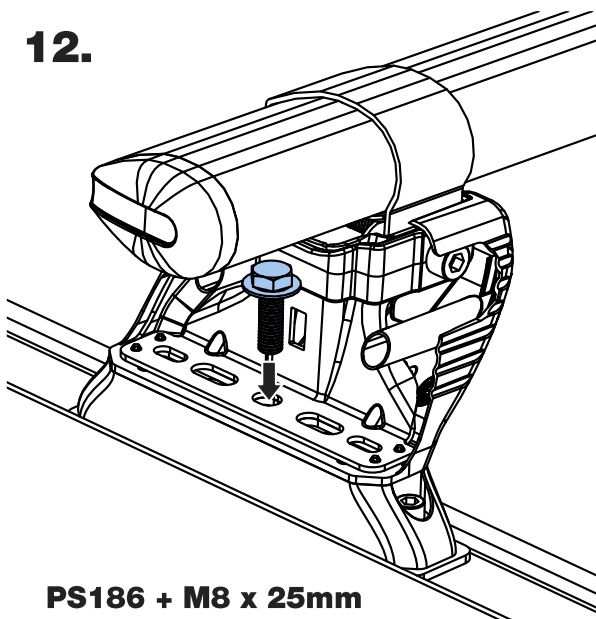


13.

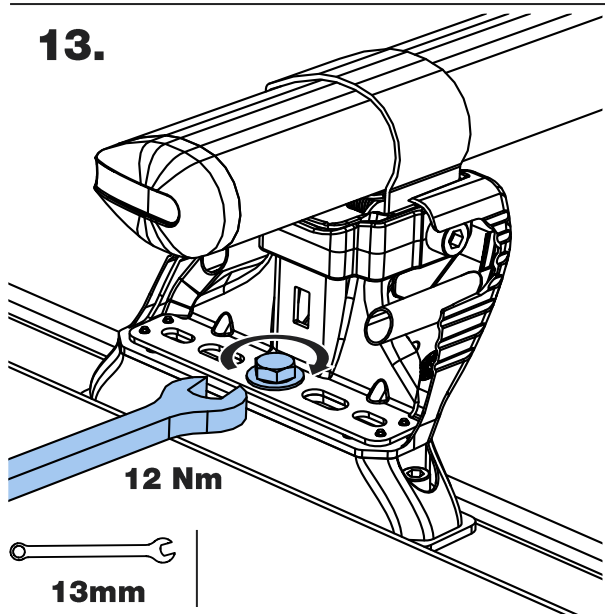


14.

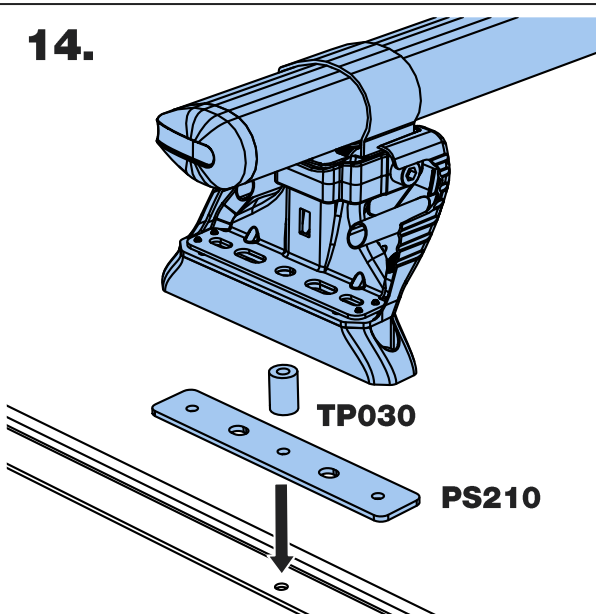


15.

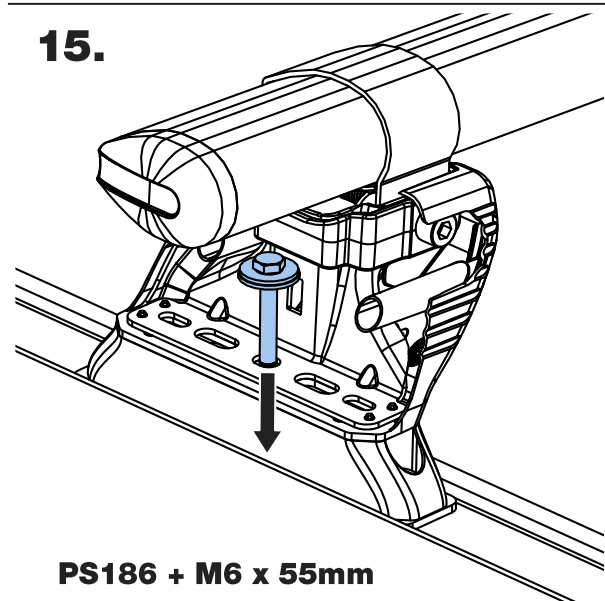


16.

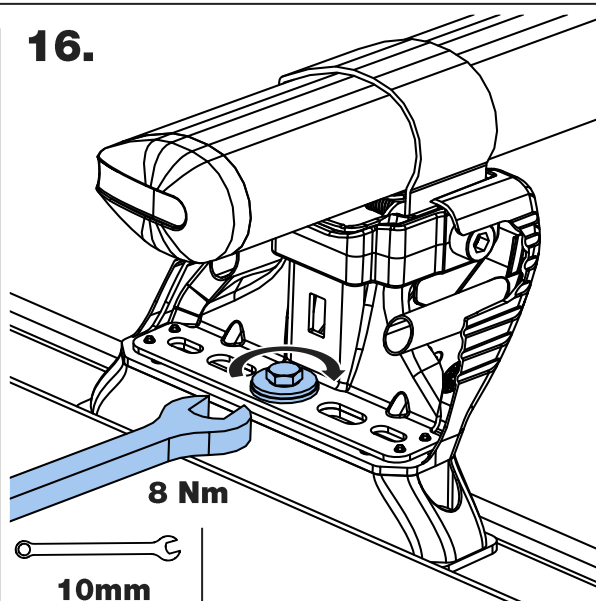


17.

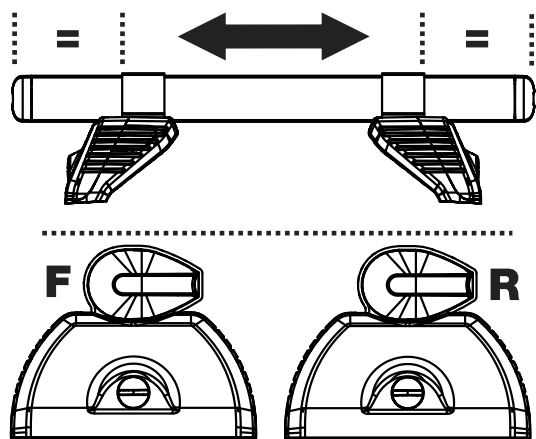

18.

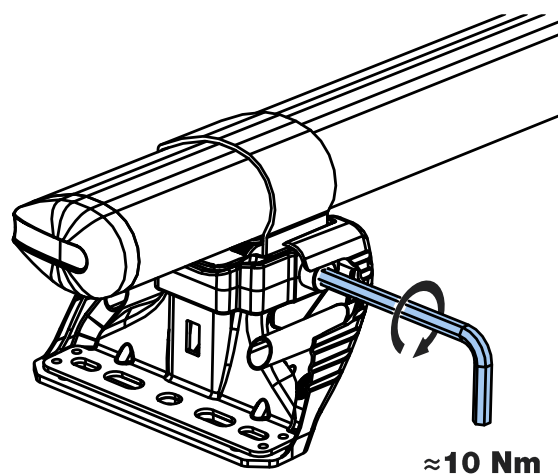

19.

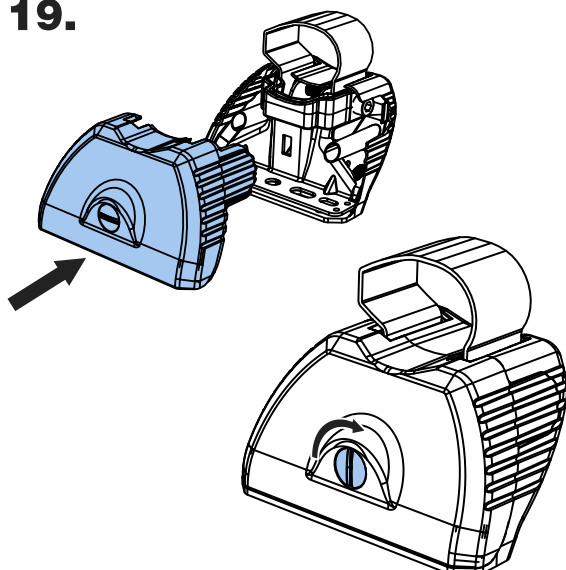

20.

