


VA4PR/FL





KammBar

Instructions

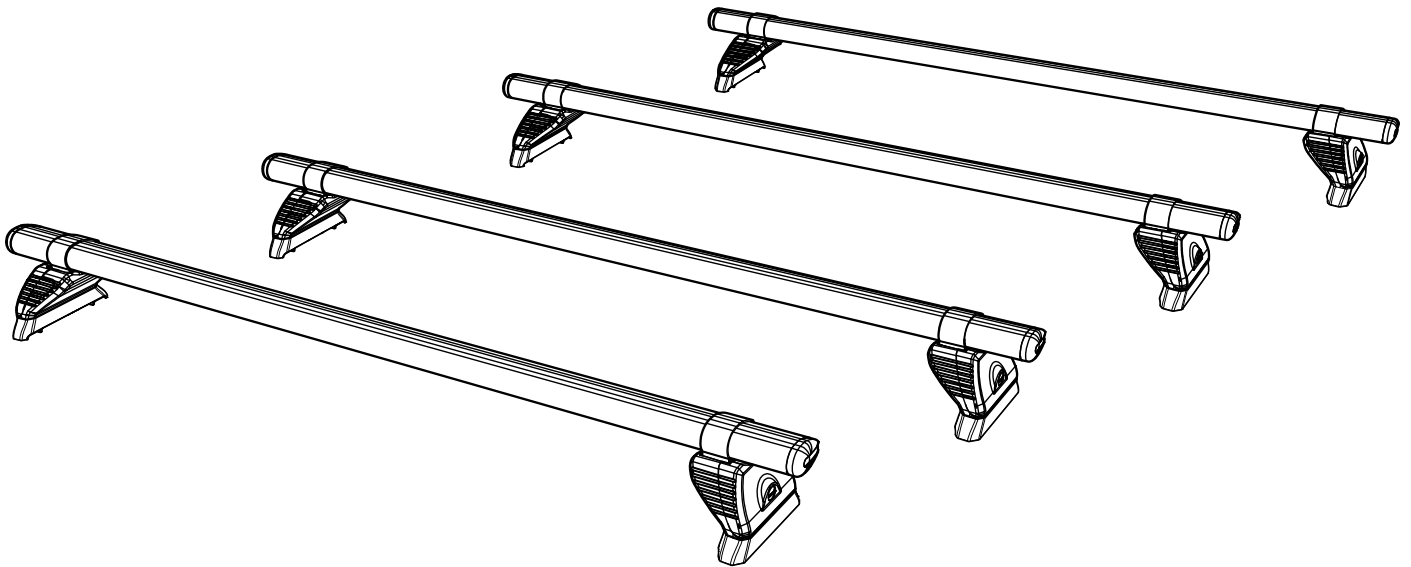


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

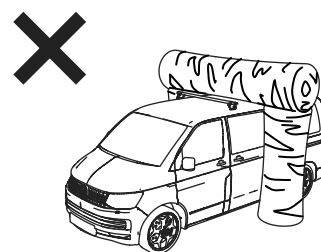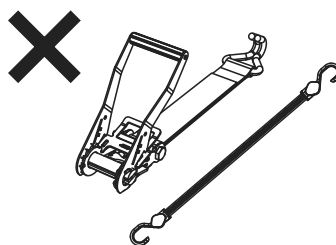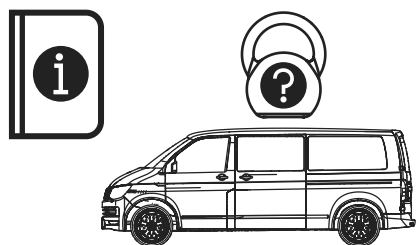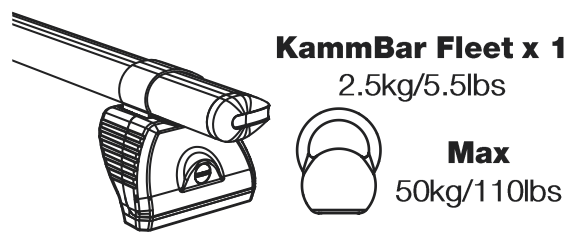


KammBar Pro

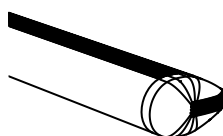


SA421 x 4 ☐



SA070 x 4 ☐

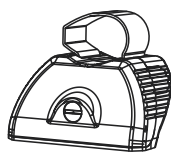


SA397 x 4 ☐

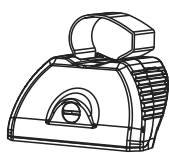


SA398 x 4 ☐


KammBar Fleet

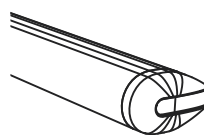


SA395 x 4 ☐



C04 x 4
optional upgrade

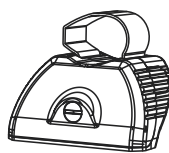


SA397 x 4 ☐

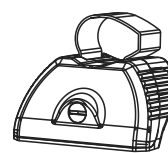


SA398 x 4 ☐


Fitting Kit




PS186 x 8 ☐




PS210 x 8 ☐

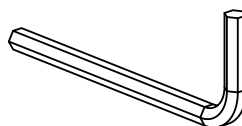


FT02 x 1 ☐

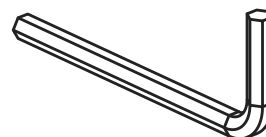

FT01 x 1 ☐



PS208 (M6) x 2 ☐




FW036 (M6) x 2 ☐



PS209 (M6) x 12 ☐




FW001 (M6) x 12 ☐




SA069 x 6 ☐



FW002 (M8) x 6 ☐




TP030 (M6) x 2 ☐



FB001 (M6 x 55) x 2 ☐




FS103 (M6 x 25) x 12 ☐




FS062 (M8 x 25) x 6 ☐


1.

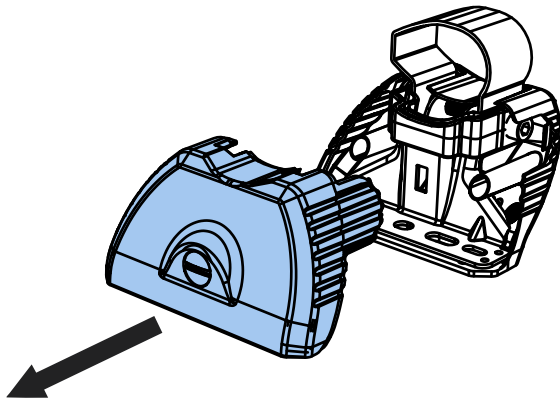

2.

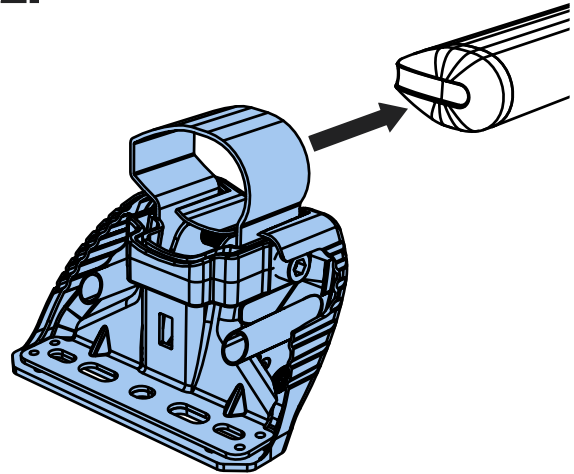


3.




SA397

PS186




SA397

PS186




SA397

PS186




SA397

PS186

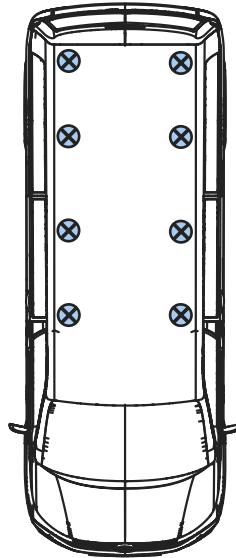


SA398




PS186

SA398




PS186

SA398




PS186

SA398



PS186


4.

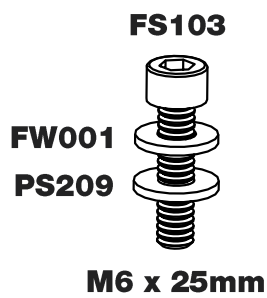

FS103

FW001
PS209


M6 x 25mm

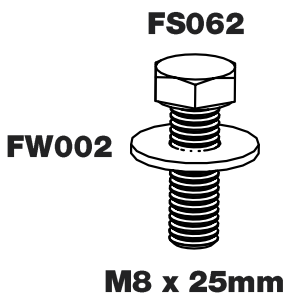

FS062

FW002

M8 x 25mm

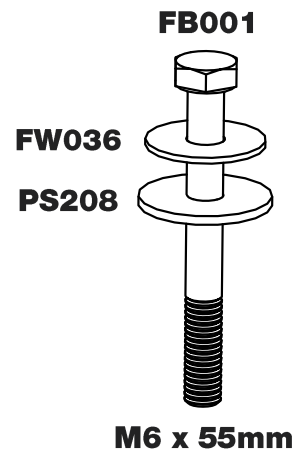


FB001

FW036
PS208


M6 x 55mm

5.

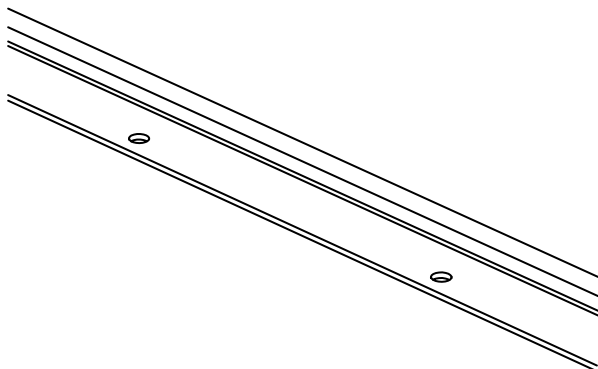


7-13, 17-20.

6.

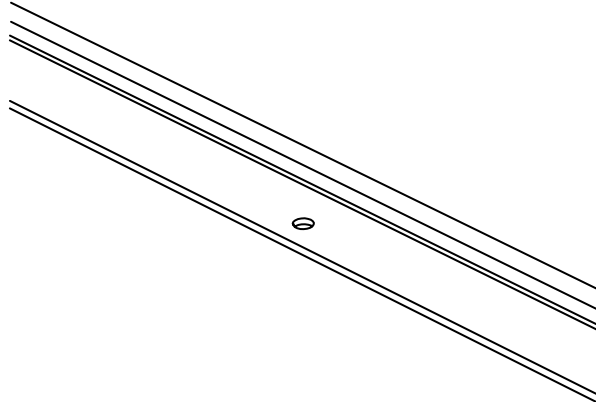


14-20.


7.

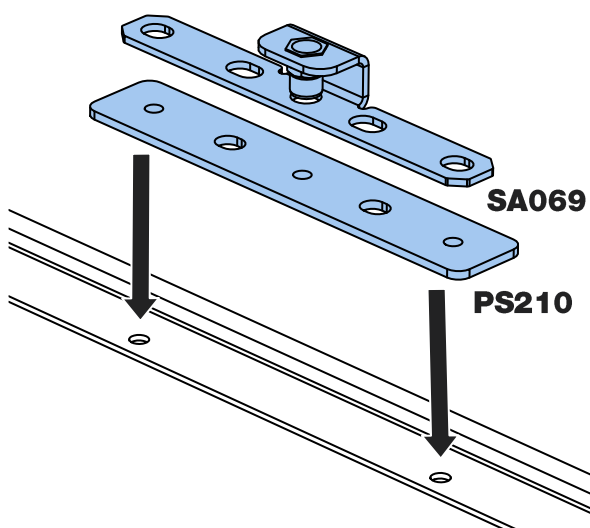


8.

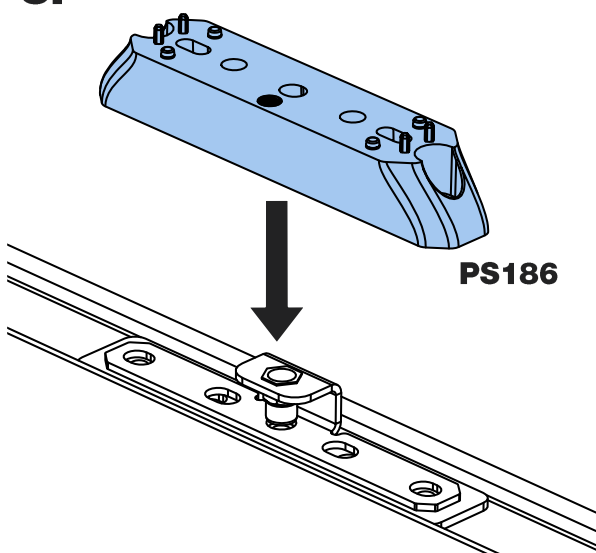


9.

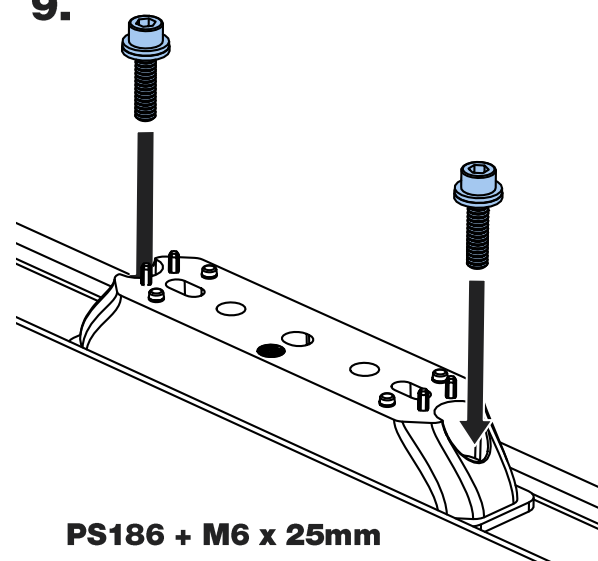


10.

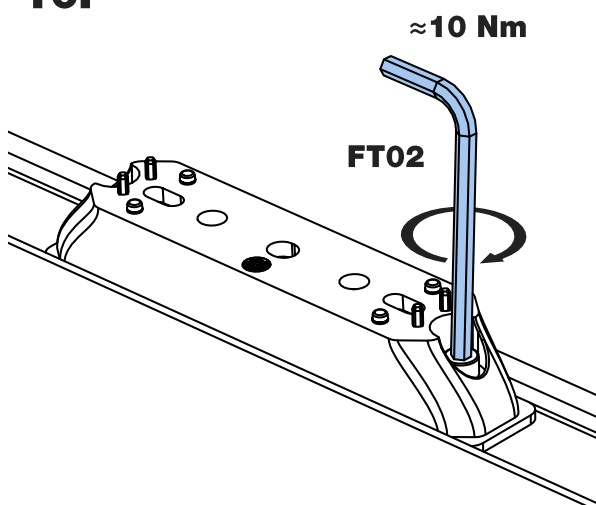

11.

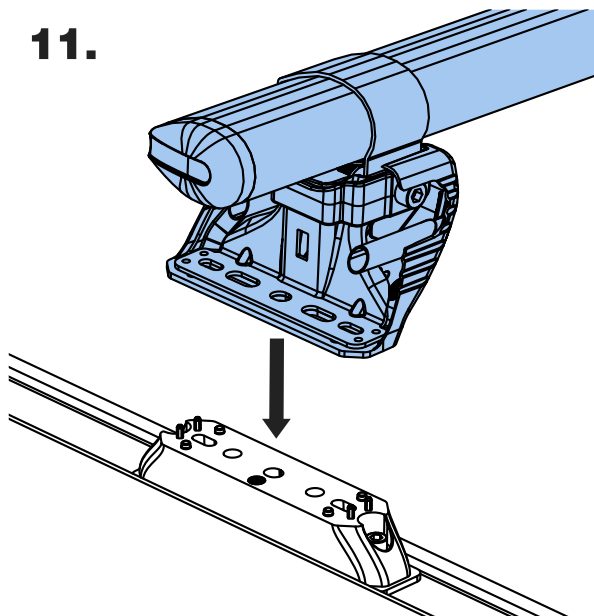


12.

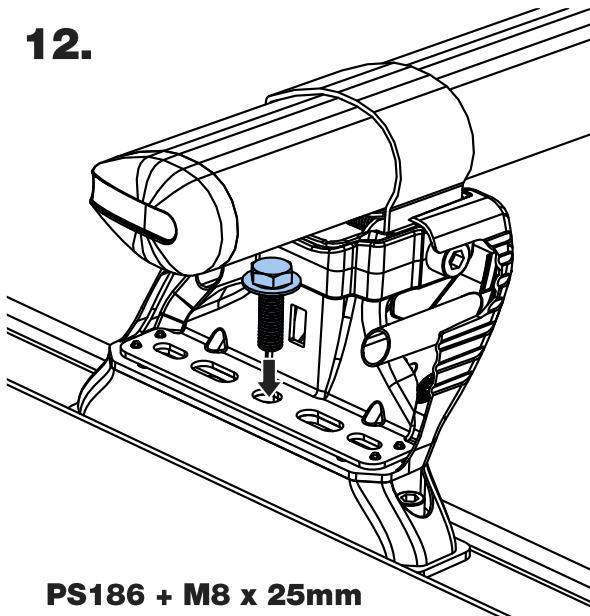

PS186 + M8 x 25mm


13.

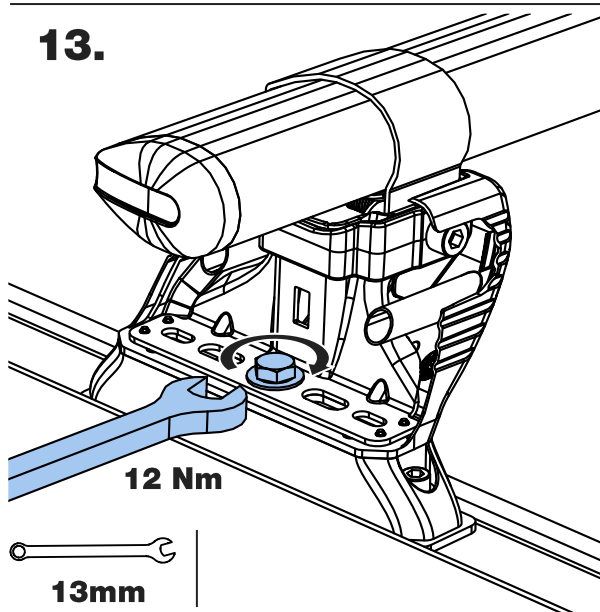

12 Nm

13mm


14.

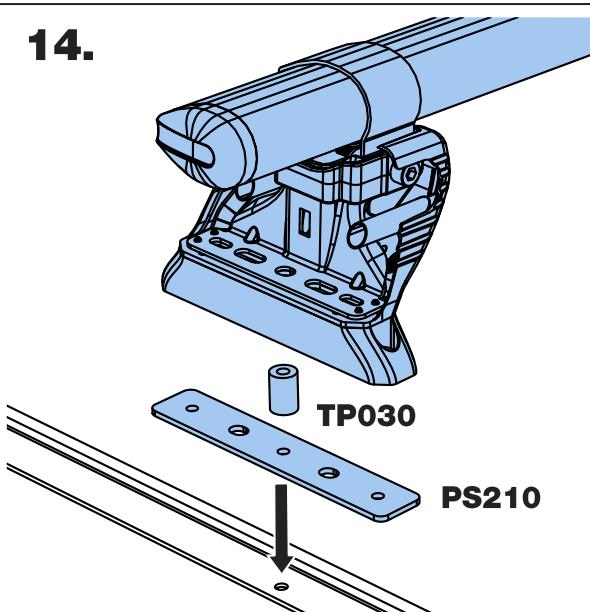

TP030


PS210

15.

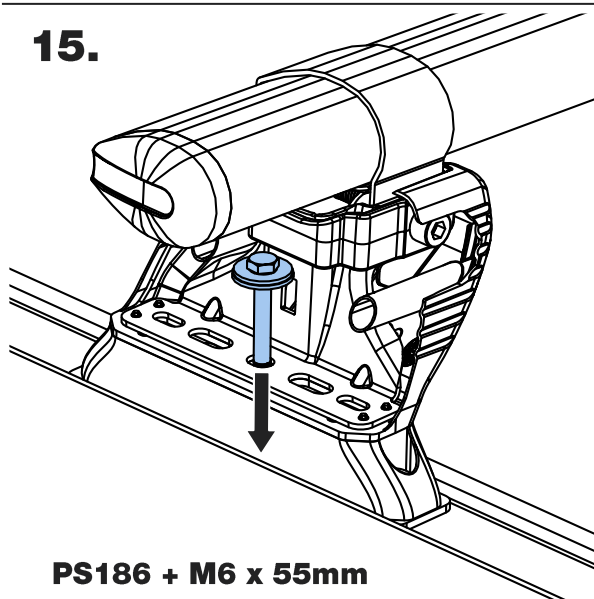

PS186 + M6 x 55mm


16.

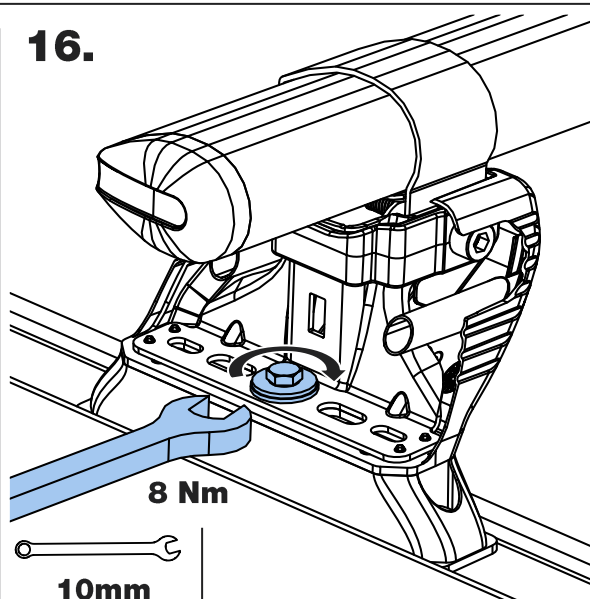


8 Nm

10mm


17.

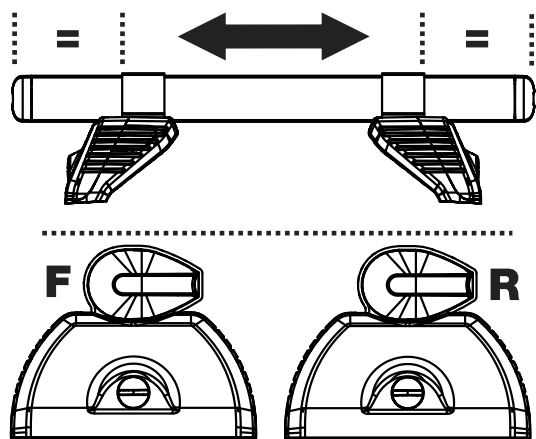

18.

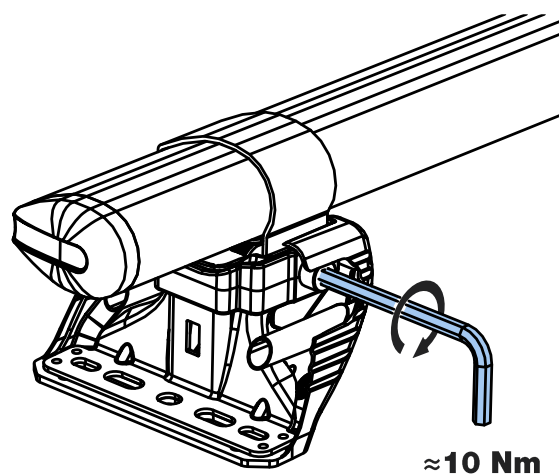

19.

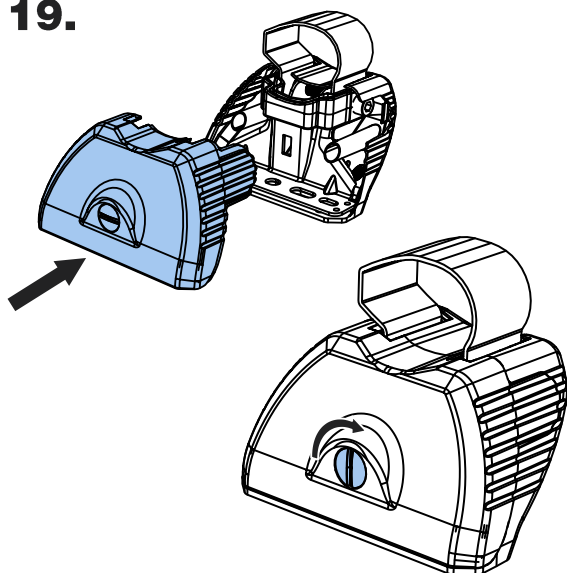

20.

