


LE2PR/FL





KammBar

Instructions

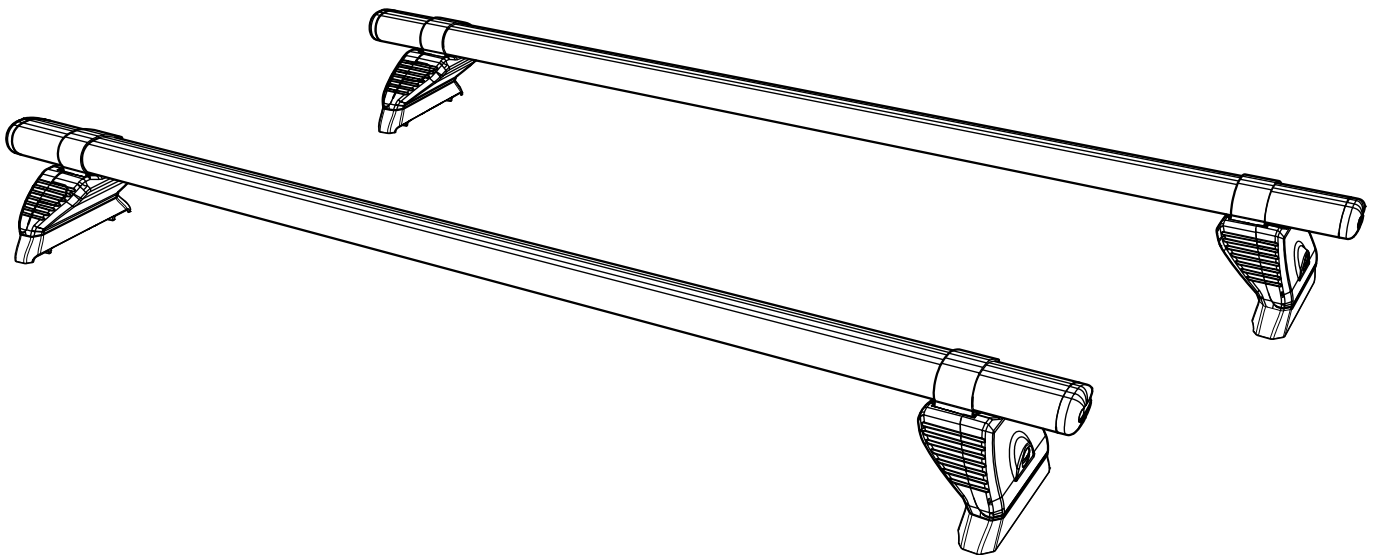


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

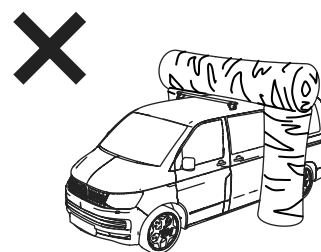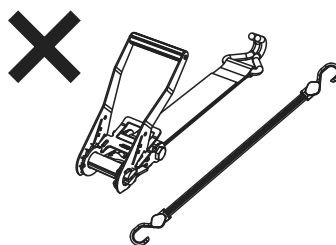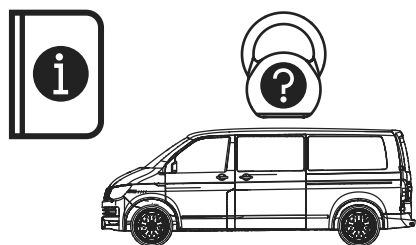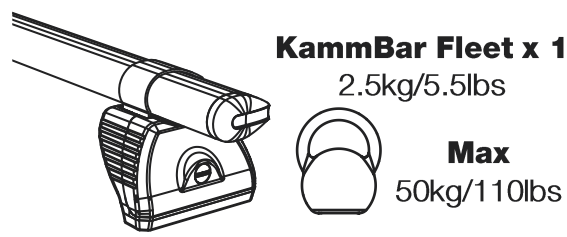


KammBar Pro

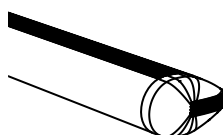


SA419 x 2 ☐



SA070 x 4 ☐

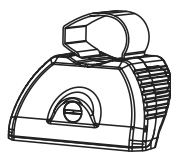


SA397 x 2 ☐

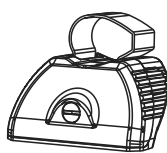


SA398 x 2 ☐


KammBar Fleet

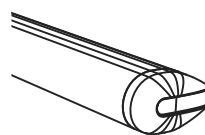


SA393 x 2 ☐



C04 x 2
optional upgrade

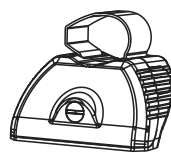


SA397 x 2 ☐

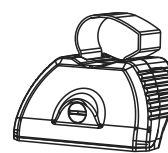


SA398 x 2 ☐


Fitting Kit

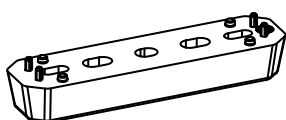


PS183 x 2 ☐

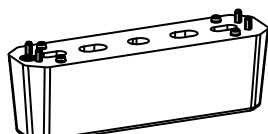


PS325 x 2 ☐

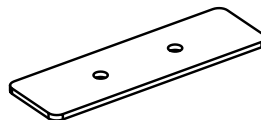


PS561 x 4 ☐




PS404 x 2 ☐

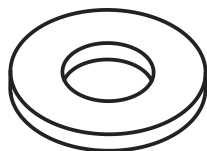


FW002 (M8) x 8 ☐

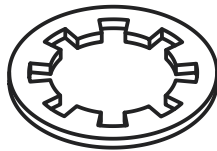


FW009 (M8) x 8 ☐

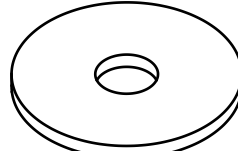


PS208 (M8) x 8 ☐

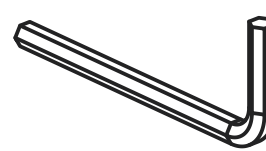


FT01 x 1 ☐



**FS107
(M8 x 75) x 4**
☐




**FS105
(M8 x 55) x 4**
☐




MS1511 x 4 ☐

1.

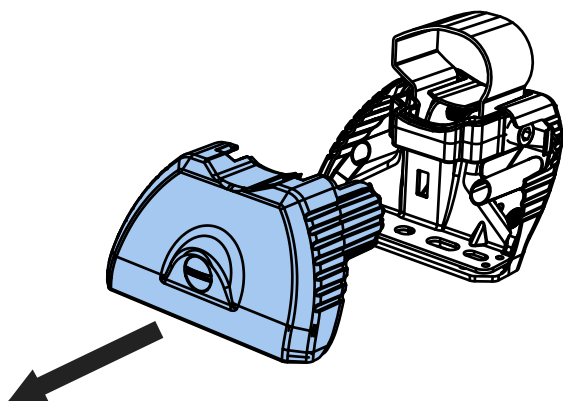

2.


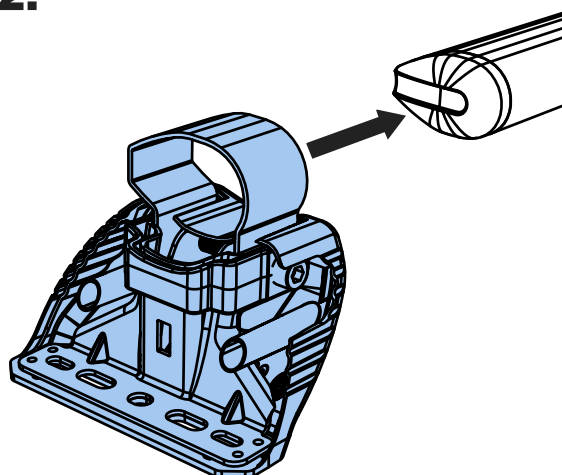


3.





SA397
PS183

SA398
PS183




SA397
PS325


SA398
PS325

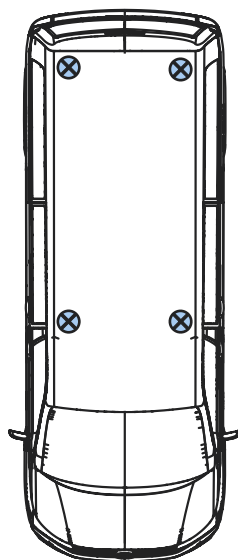


4.

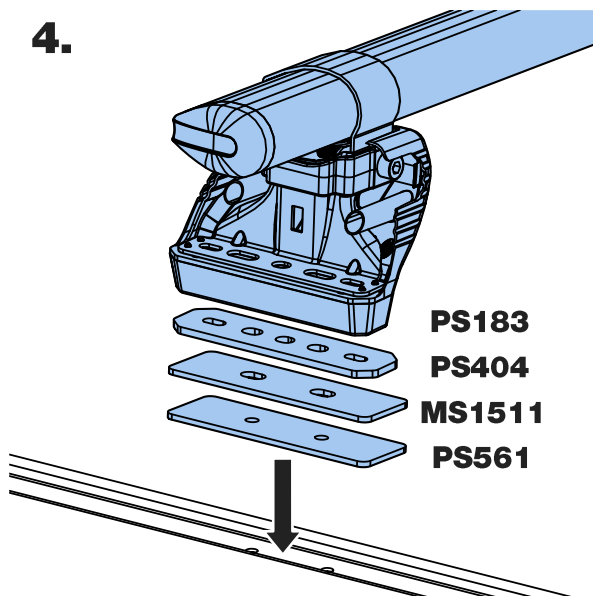


5.

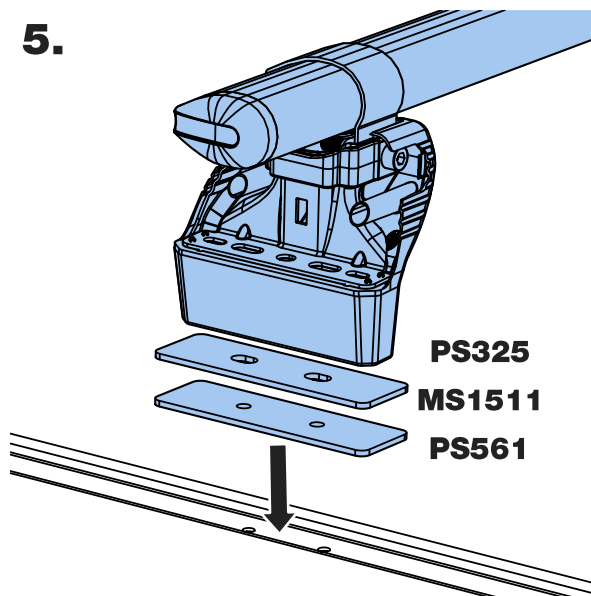


6.

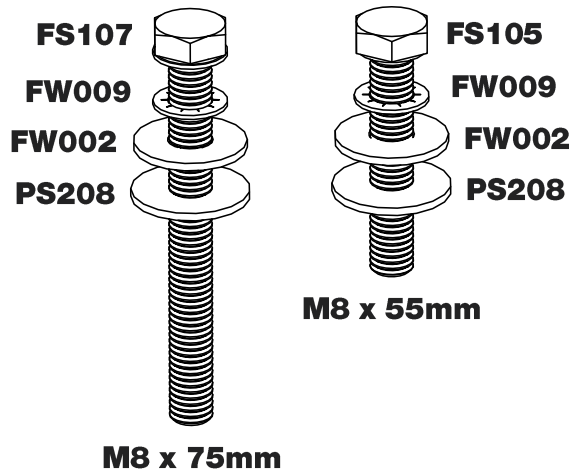


7.

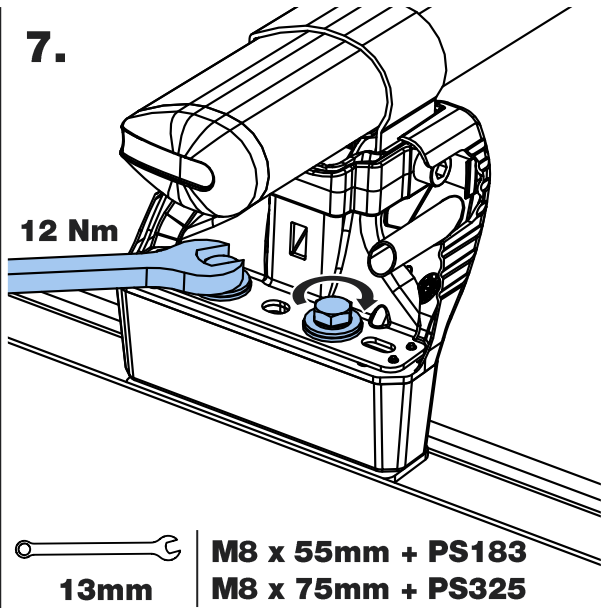


8.

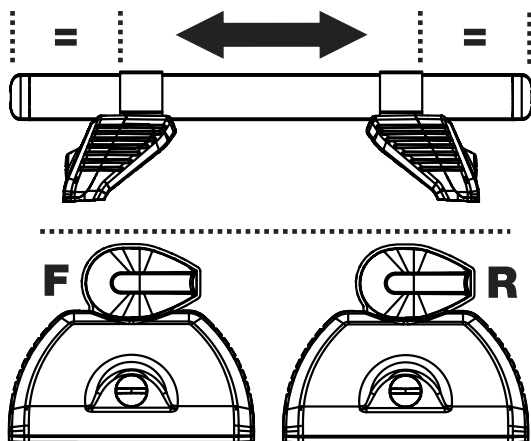

9.

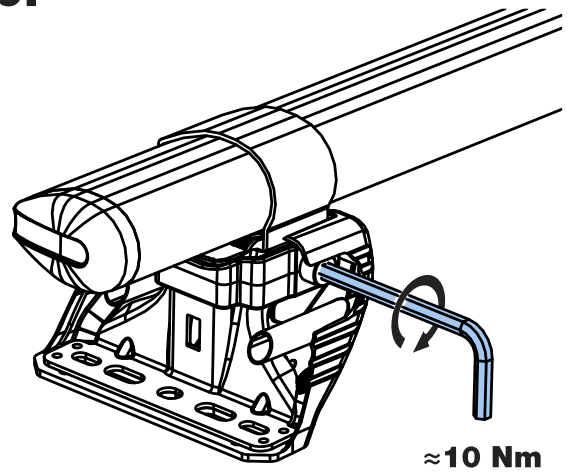

10.

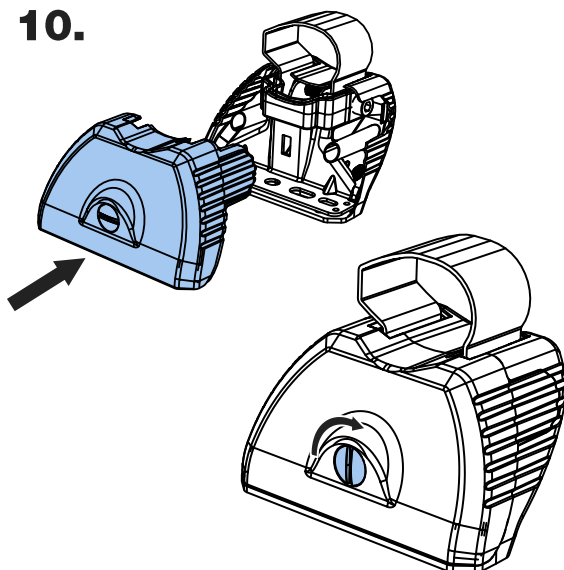

11.

