






LE3PR/FL KammBar

Instructions

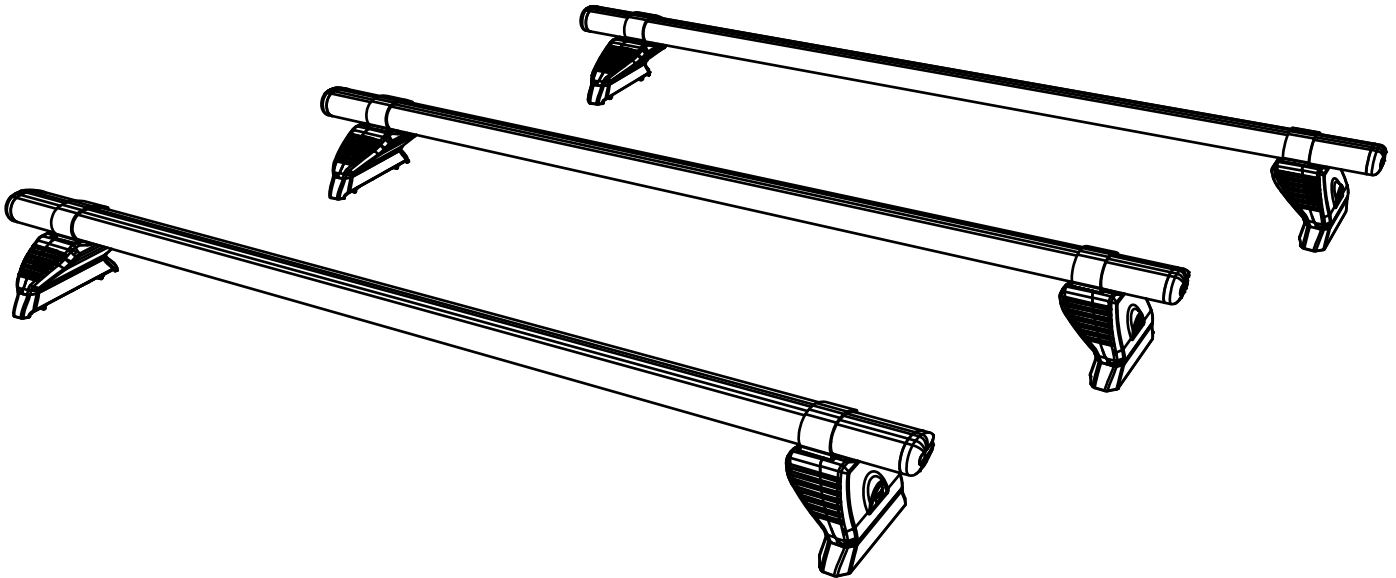


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

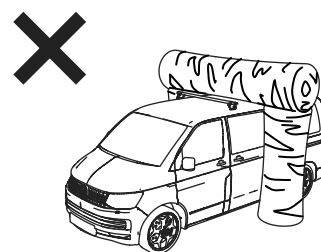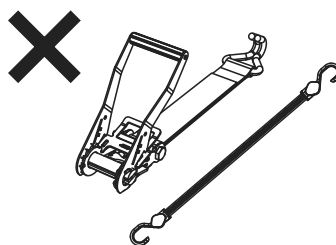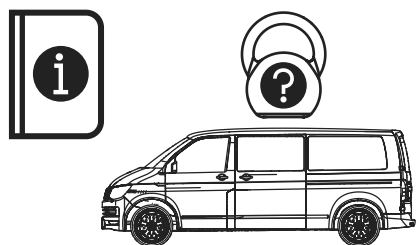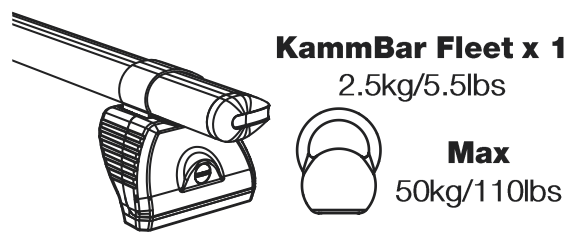


KammBar Pro

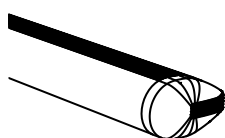


SA419 x 3 ☐



SA070 x 4 ☐

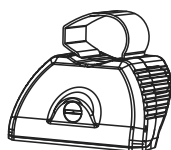


SA397 x 3 ☐

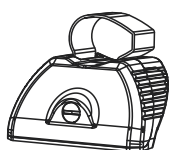


SA398 x 3 ☐


KammBar Fleet

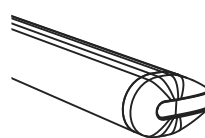


SA393 x 3 ☐



C04 x 3
optional upgrade

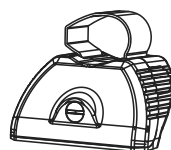


SA397 x 3 ☐

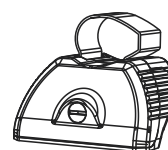


SA398 x 3 ☐


Fitting Kit

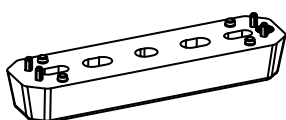


PS183 x 4 ☐

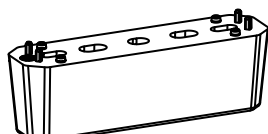


PS325 x 2 ☐

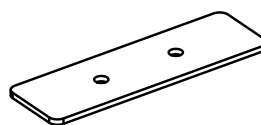


PS561 x 6 ☐




PS404 x 2 ☐

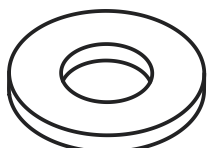


FW002 (M8) x 12

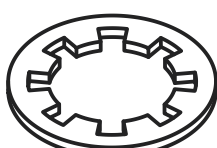


FW009 (M8) x 12

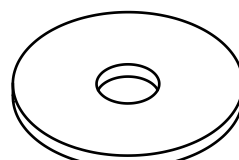


PS208 (M8) x 12



PS324 x 2 ☐




**FS107
(M8 x 75) x 4**



**FS105
(M8 x 55) x 8**




FT01 x 1 ☐




MS1511 x 6 ☐


1.

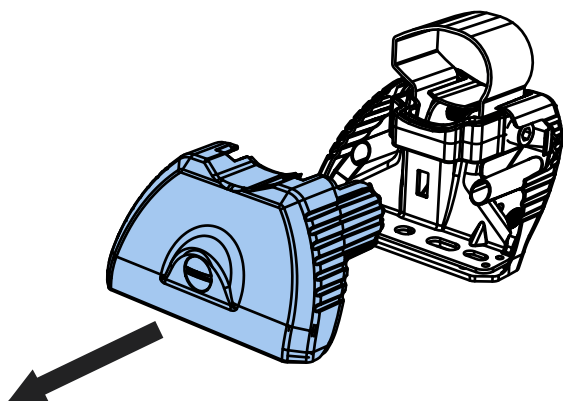


2.

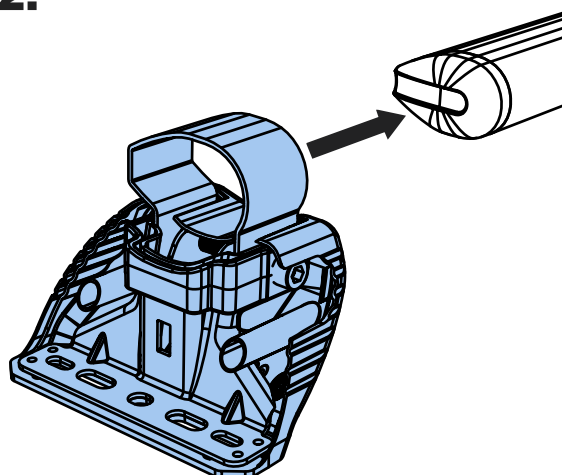


3.




SA397
PS183




SA397
PS183




SA397
PS325

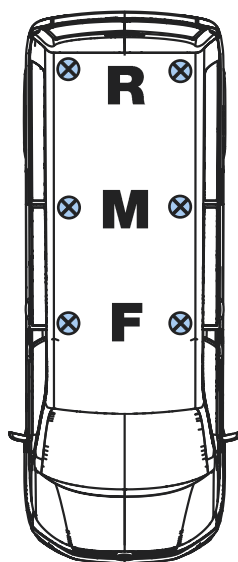


SA398
PS183




SA398
PS183




SA398
PS325









4.

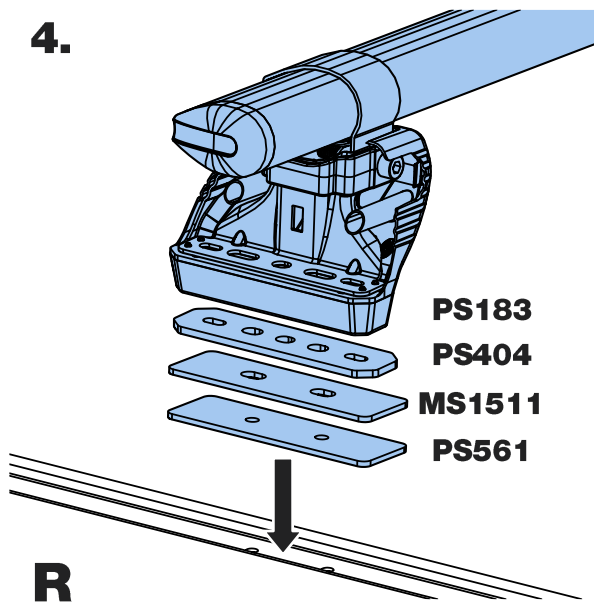


5.

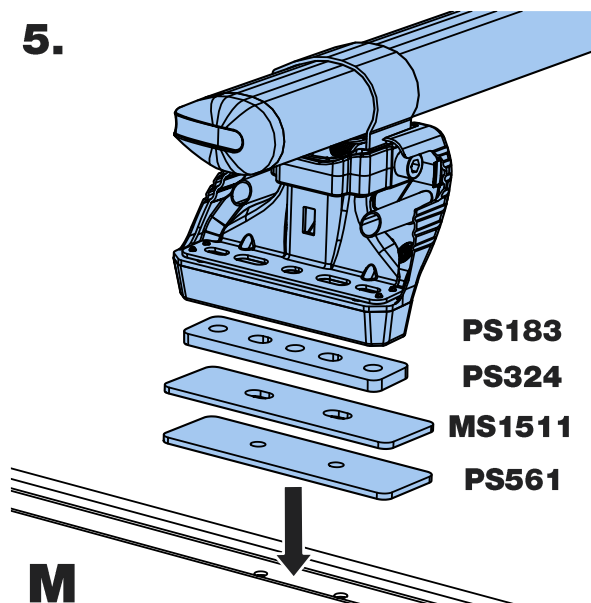

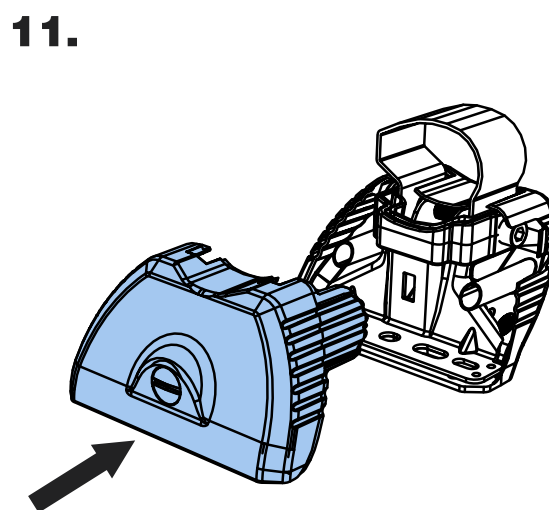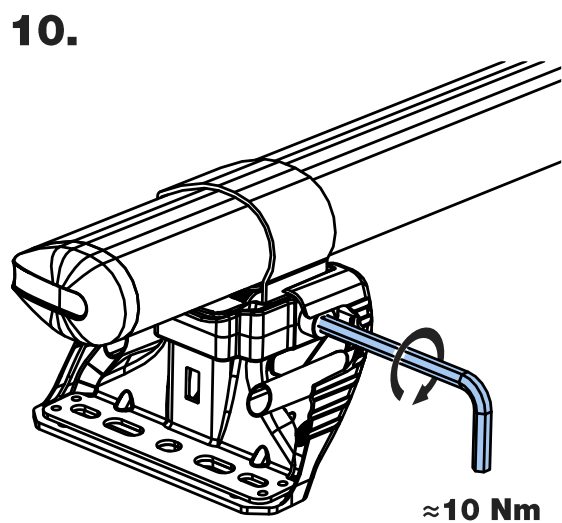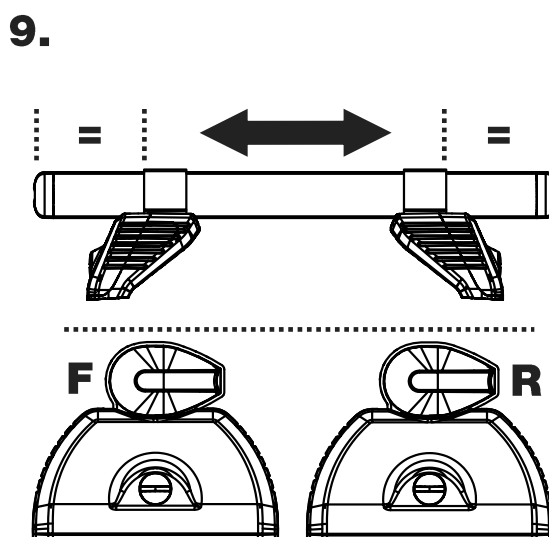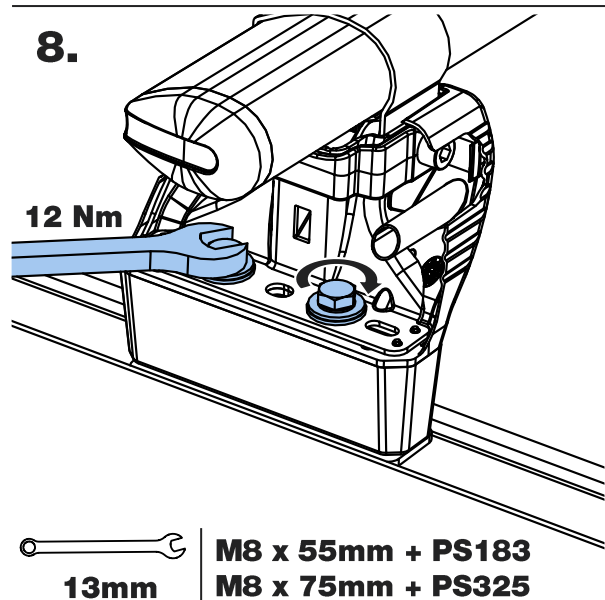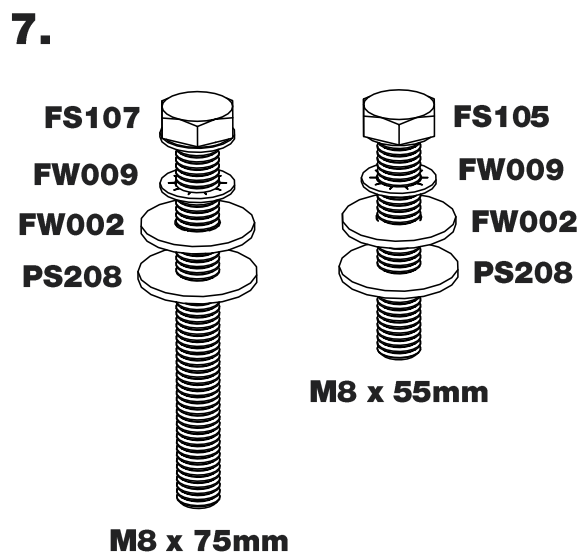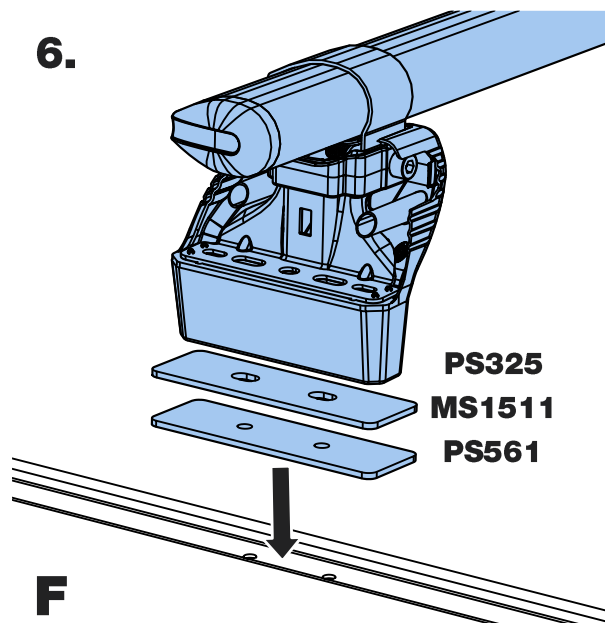

12.

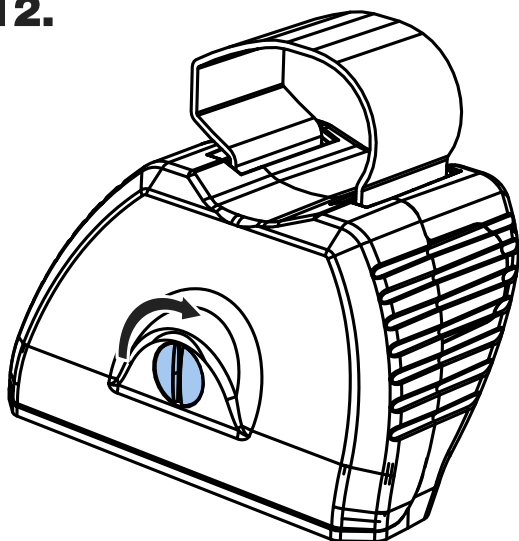

13.

