


XC2PR/FL





KammBar

Instructions

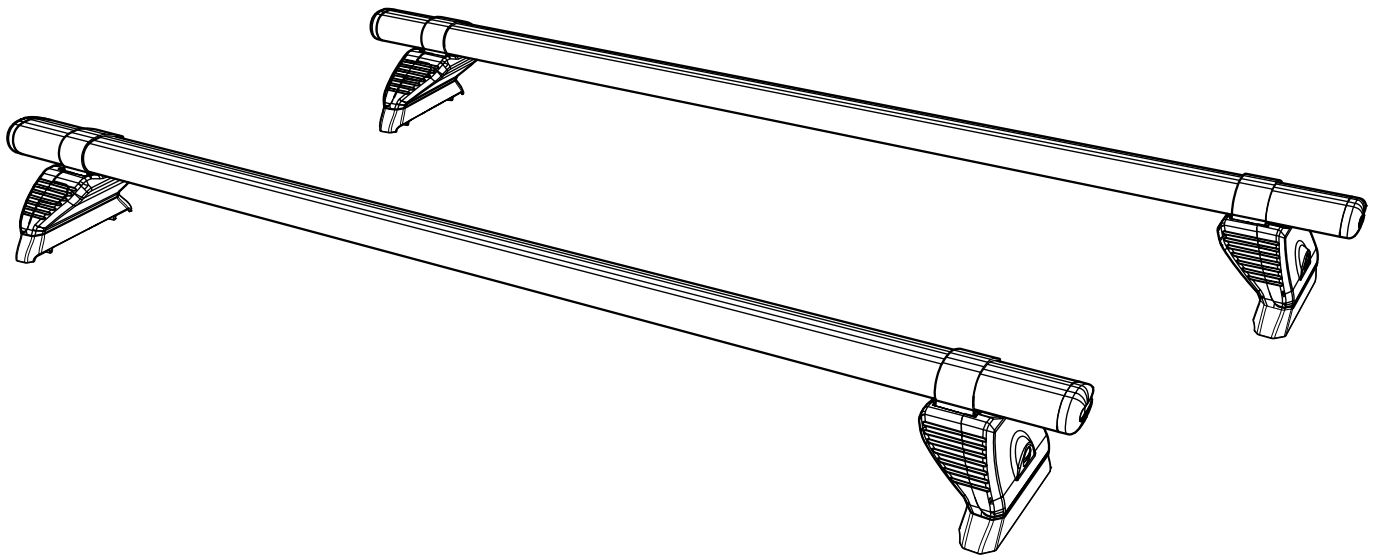


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

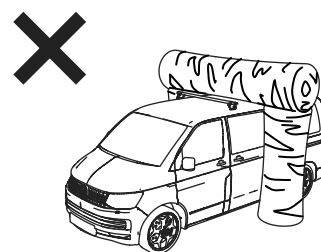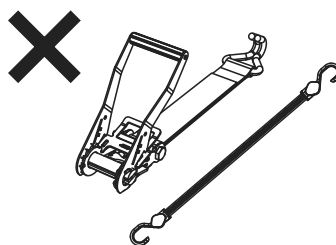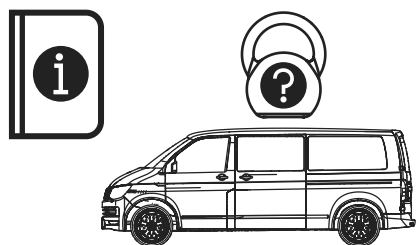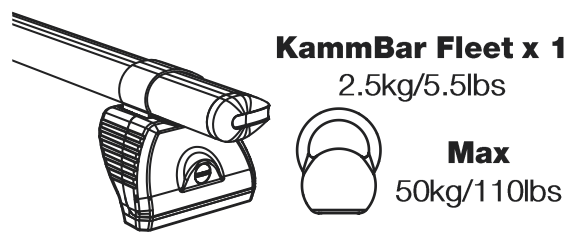


KammBar Pro

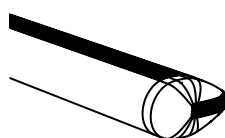


SA421 x 2 ☐



SA070 x 4 ☐

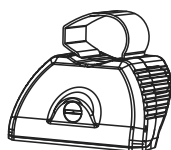


SA397 x 2 ☐

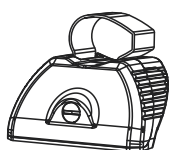


SA398 x 2 ☐


KammBar Fleet

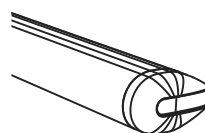


SA395 x 2 ☐



C04 x 2
optional upgrade

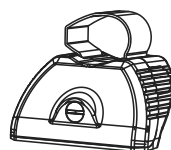


SA397 x 2 ☐

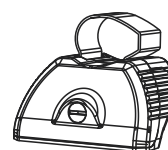


SA398 x 2 ☐


Fitting Kit

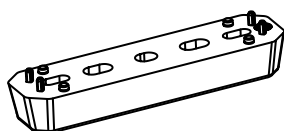


PS183 x 4 ☐




PS023 x 4 ☐




PS046 x 4 ☐

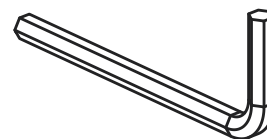


FT01 x 1 ☐

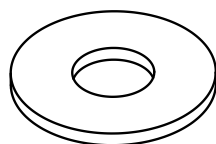


FW002 (M8) x 6 ☐

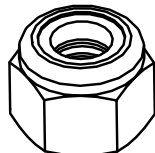

FN006 (M8) x 6 ☐

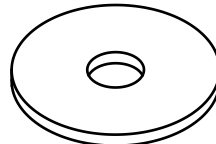

PS208 (M8) x 6 ☐

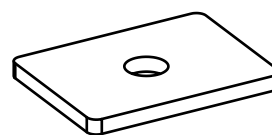


PS020 (M8) x 4 ☐




**FS024
(M8 x 100) x 4** ☐



**FS081
(M8 x 50) x 4** ☐




MS019 x 2 ☐

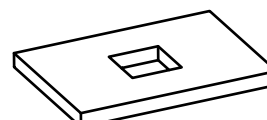


MS209 x 4 ☐




L1/H1 = 1-4, 17-33.

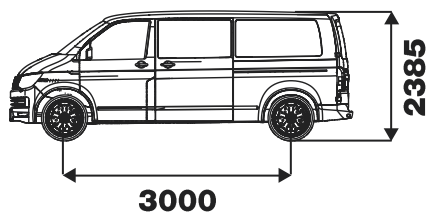


L2/H2 = 5-10, 17-33.

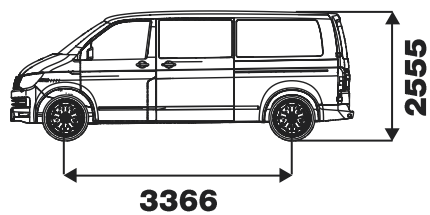


L3/H2 = 11-33.

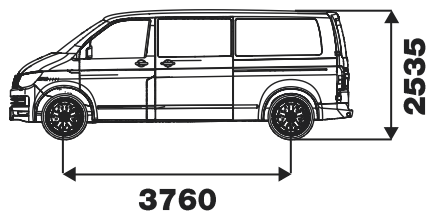


L3/H3 = 11-33.

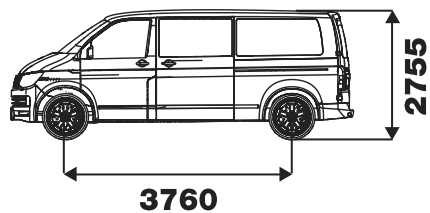


1.

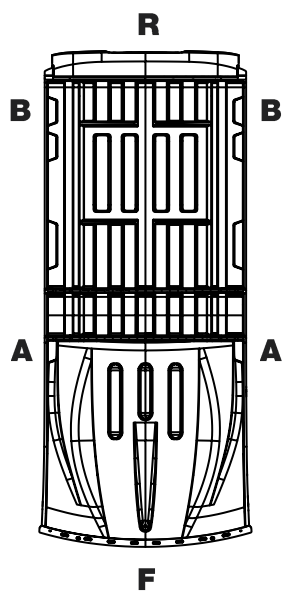

2.

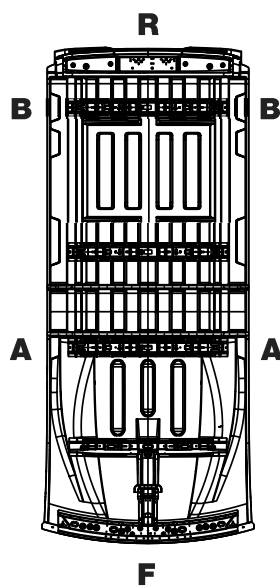


3.

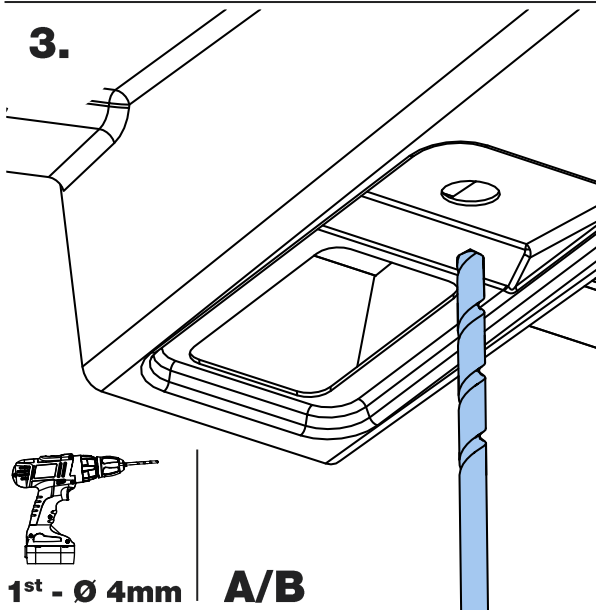

1st - Ø 4mm

A/B


4.

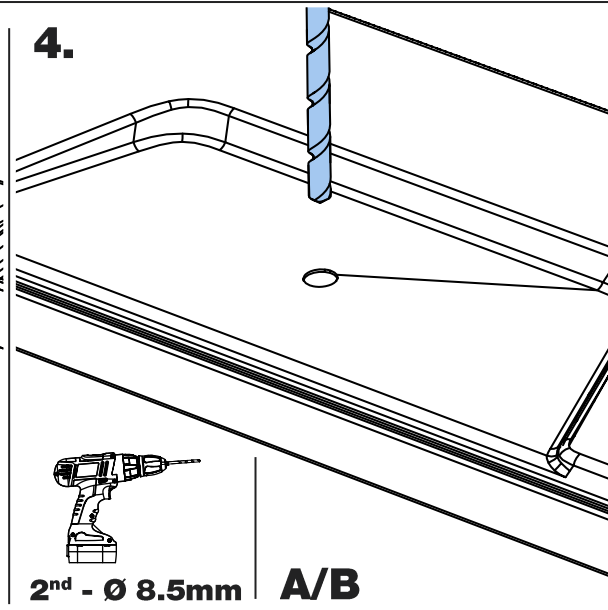






2nd - Ø 8.5mm







A/B

5.

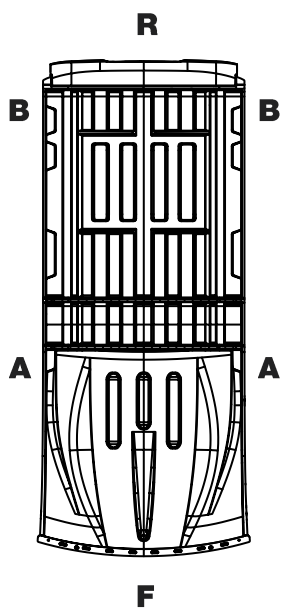


6.

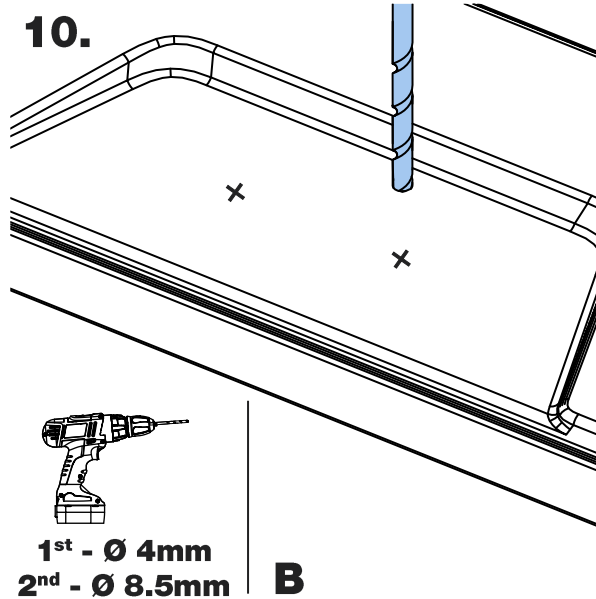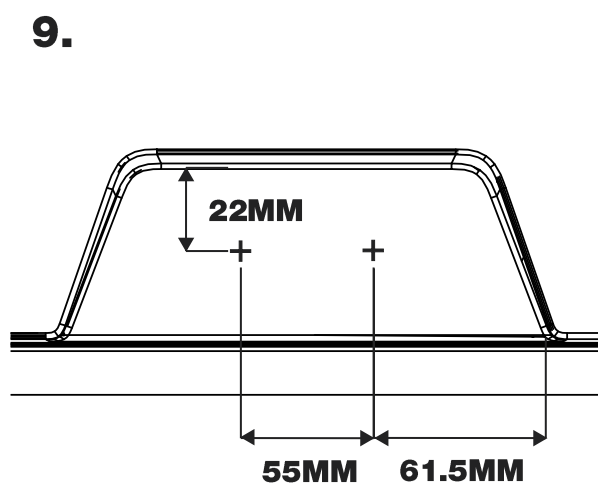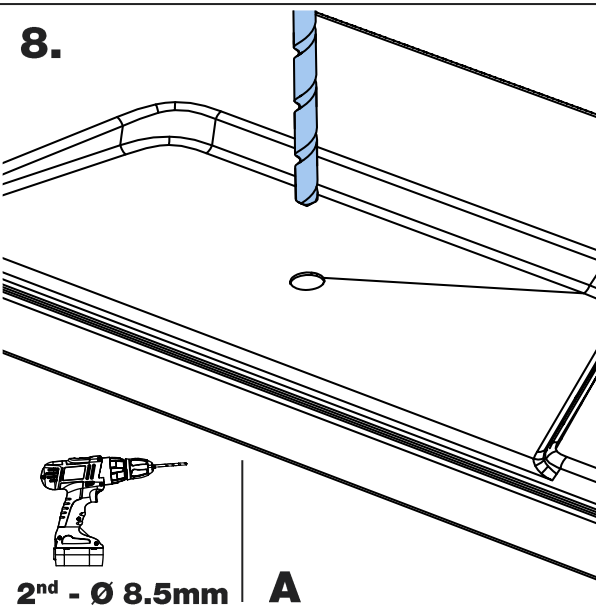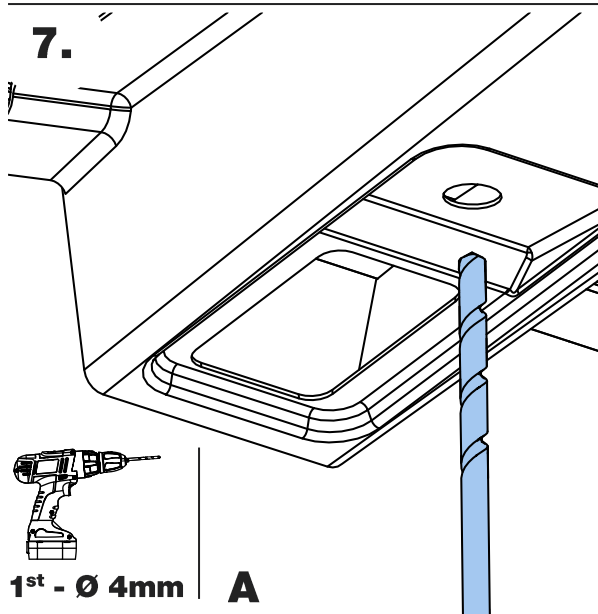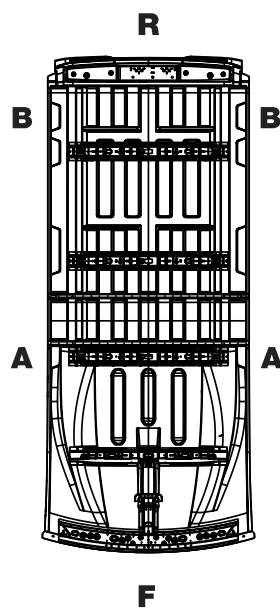


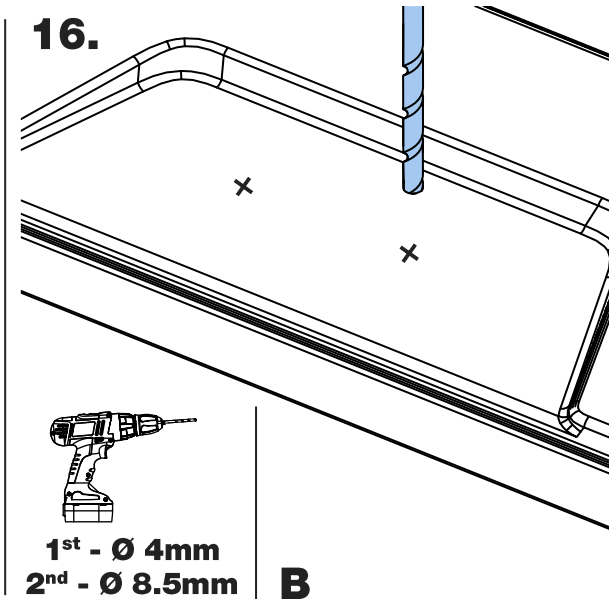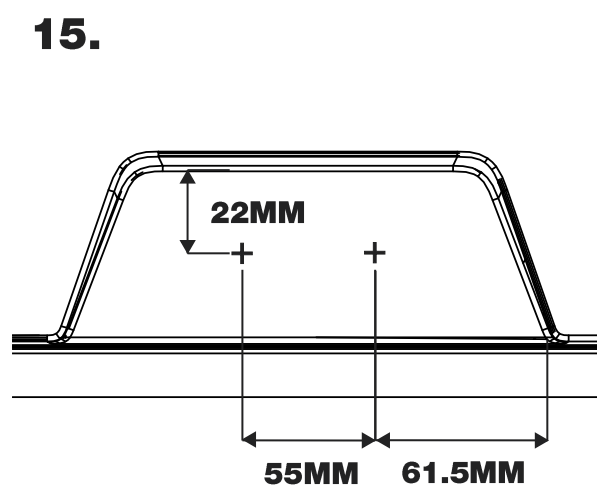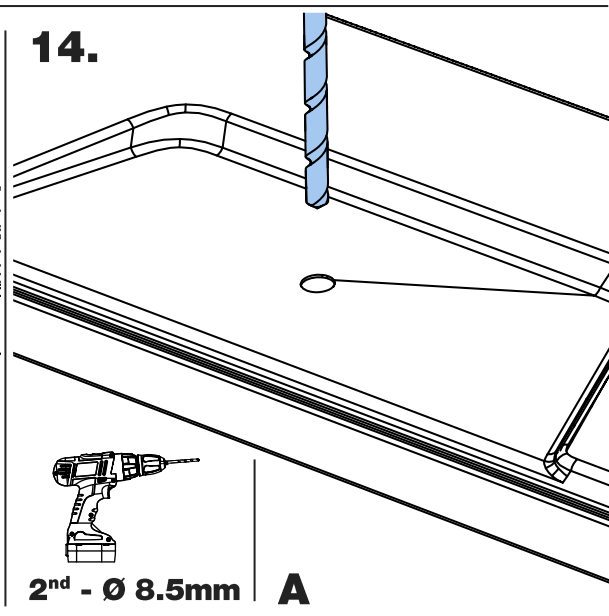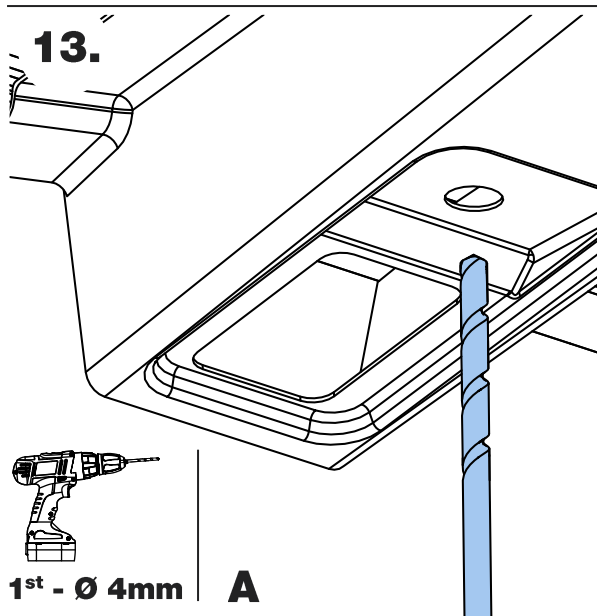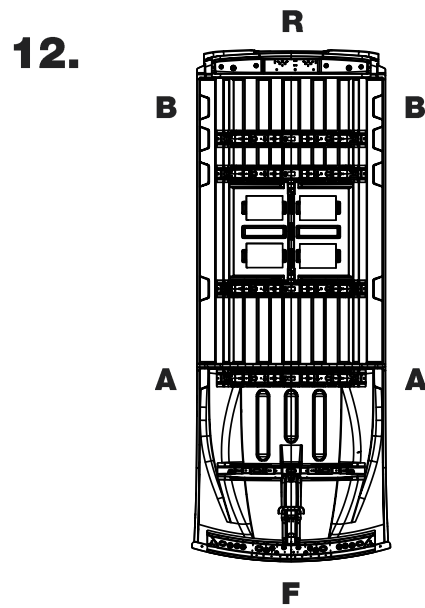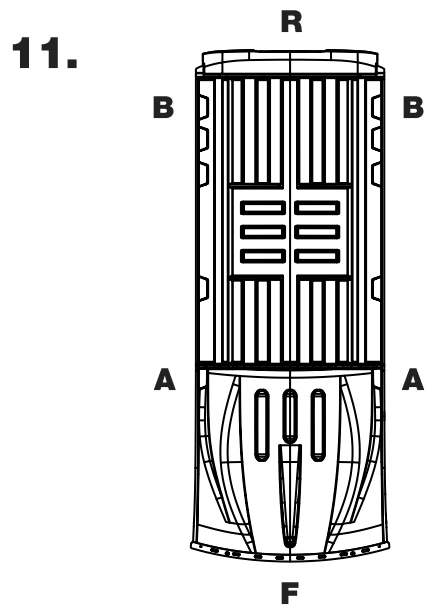


17.

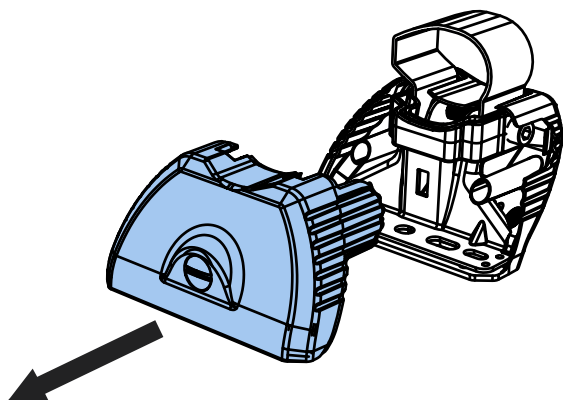

18.

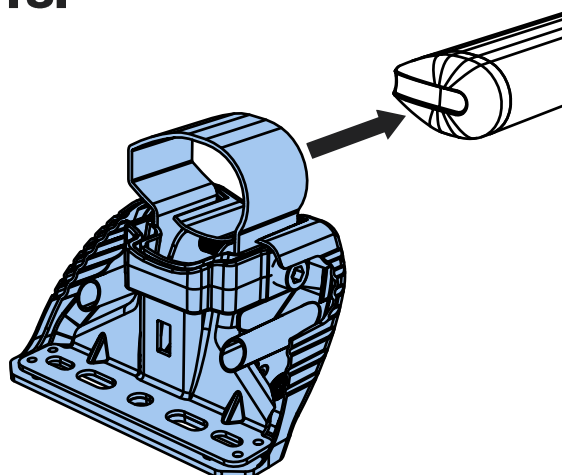

19.





SA397/SA417

PS183

SA398/SA418

PS183





SA397/SA417

PS183


SA398/SA418

PS183

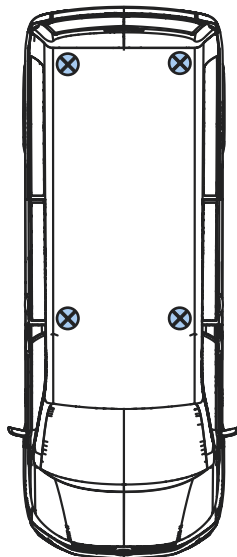


20.

FW002
PS208
FS024




M8 x 100mm



M8 x 50mm

FW002
PS208
FS081

21.

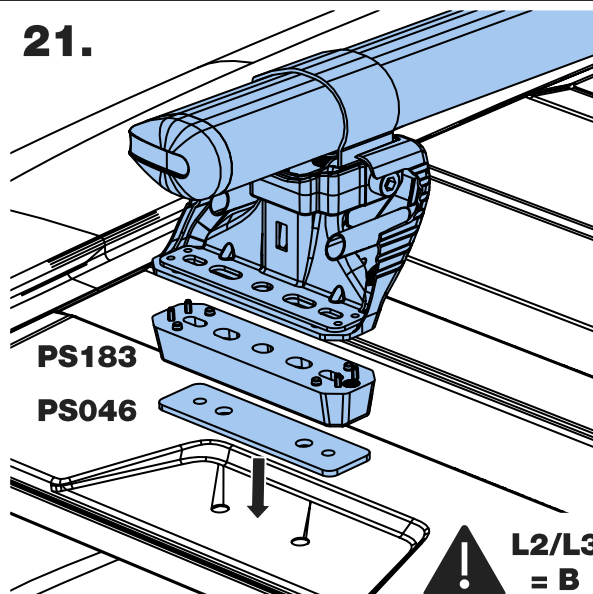

PS183

PS046



L2/L3
= B

