






TB3PR/FL KammBar

Instructions

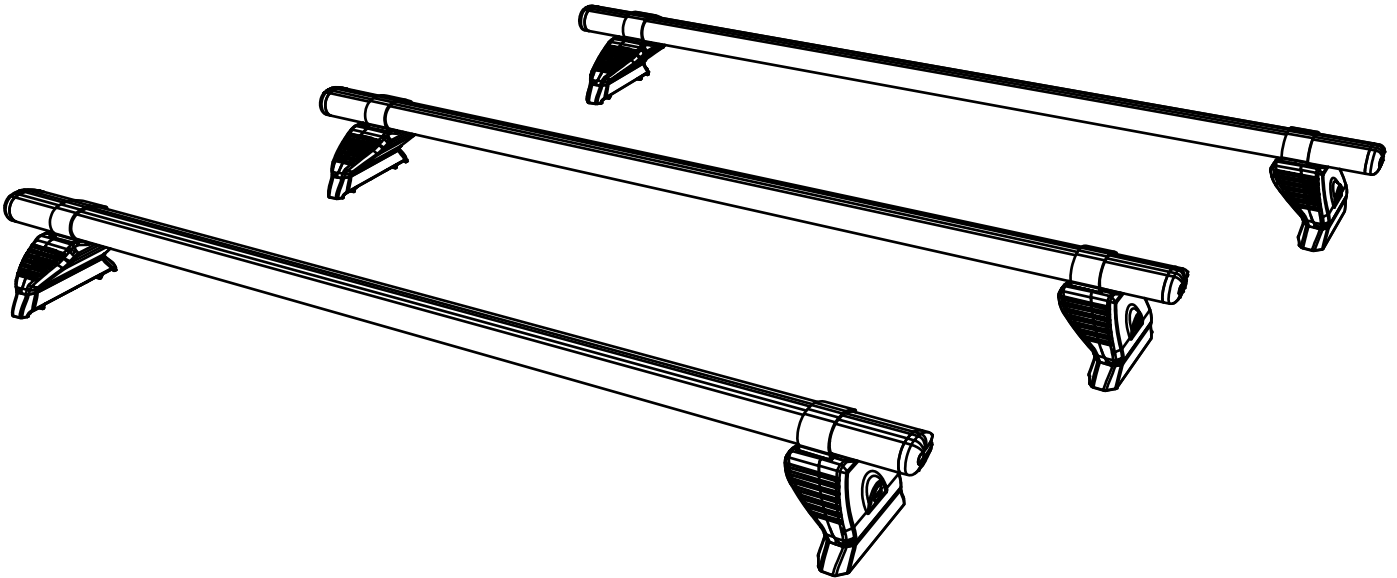


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

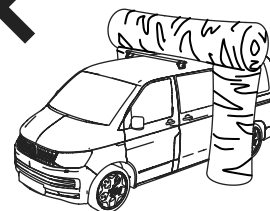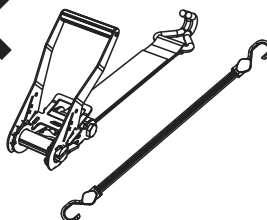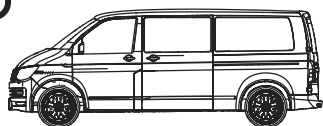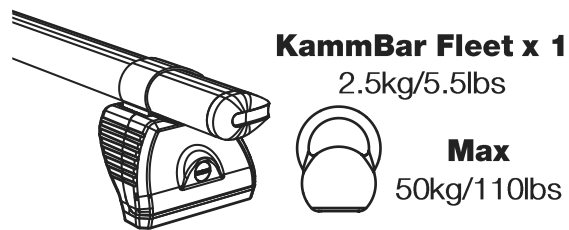


KammBar Pro

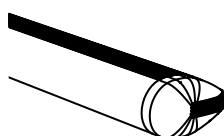


SA420 x 3 ☐



SA070 x 4 ☐

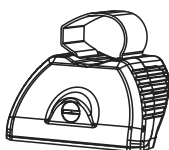


SA397 x 3 ☐

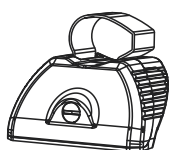


SA398 x 3 ☐


KammBar Fleet

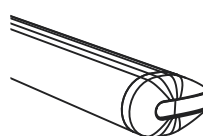


SA394 x 3 ☐



C04 x 3
optional upgrade

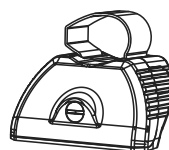


SA397 x 3 ☐

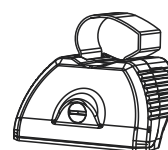


SA398 x 3 ☐

Fitting Kit




PS178 x 6




PS404 x 6




PS492 x 6




PS491 x 6

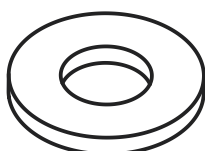

FW002 (M8) x 12

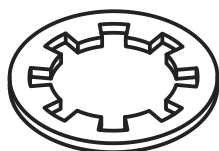


FW009 (M8) x 12



FS061
(M6 x 35) x 8




FS062
(M6 x 25) x 4

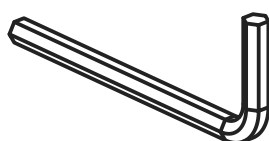


FT01 x 1




1.

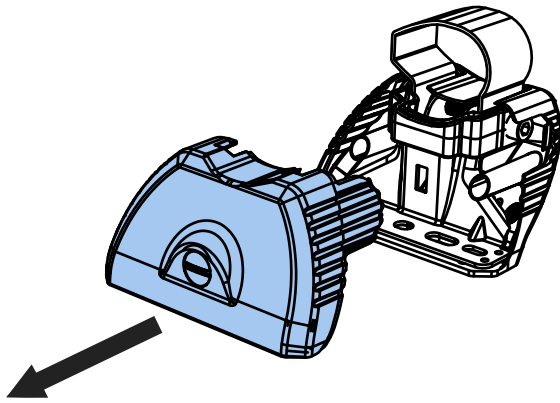


2.

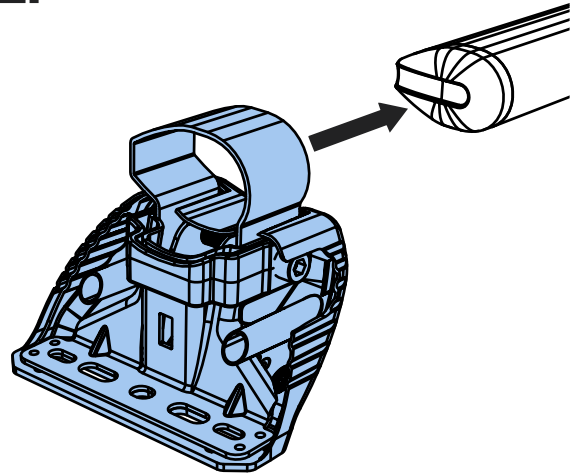


3.

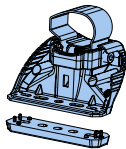


SA397
PS178

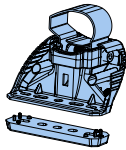


SA397
PS178

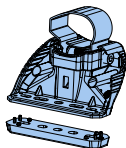


SA397
PS178

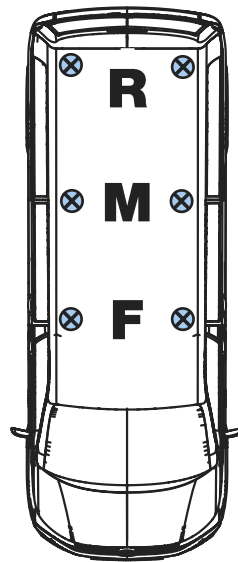


SA398
PS178

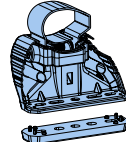


SA398
PS178

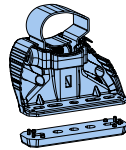

SA398
PS178

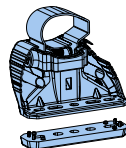


4.

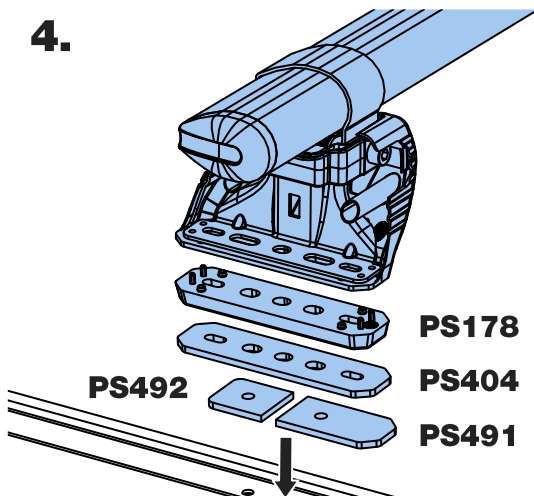


R

5.

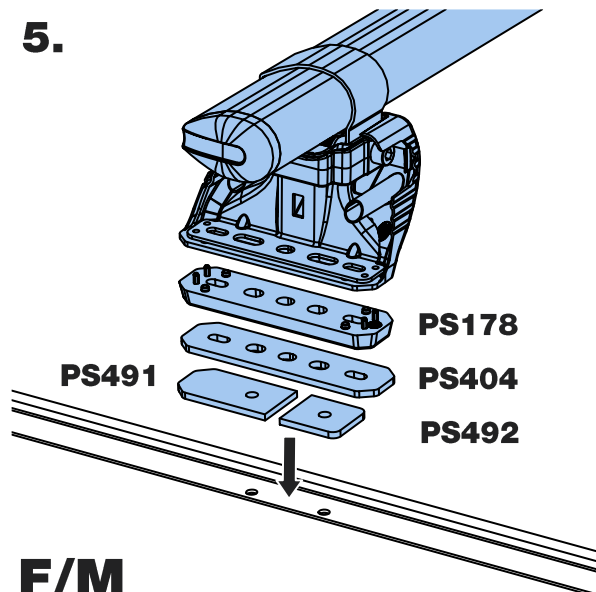


F/M


6.

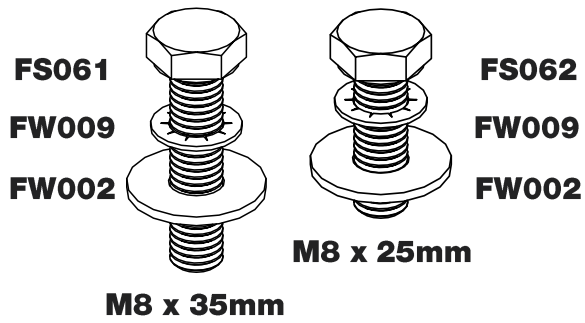


7.

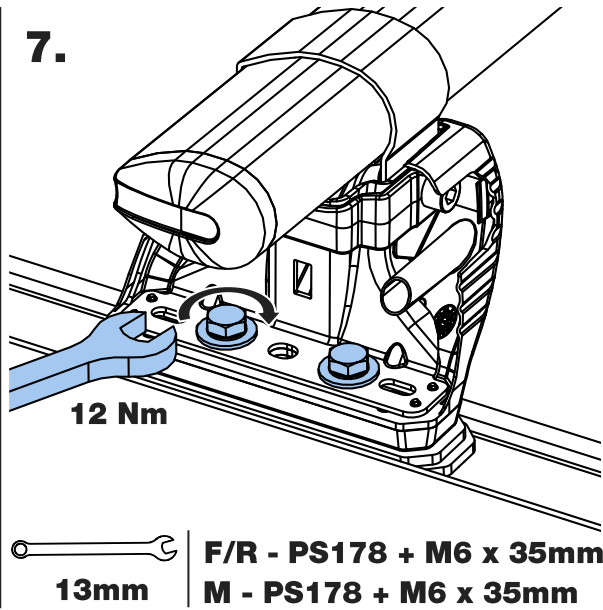


8.

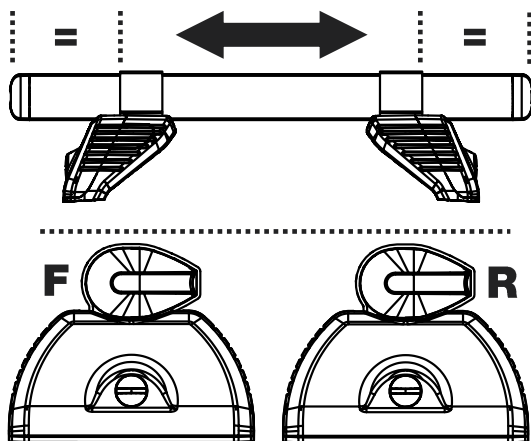

9.

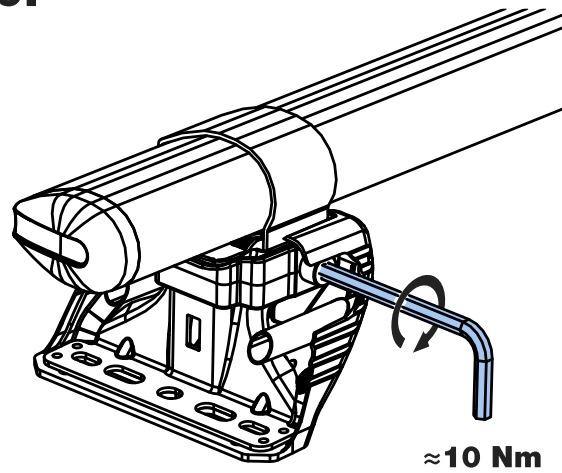

10.

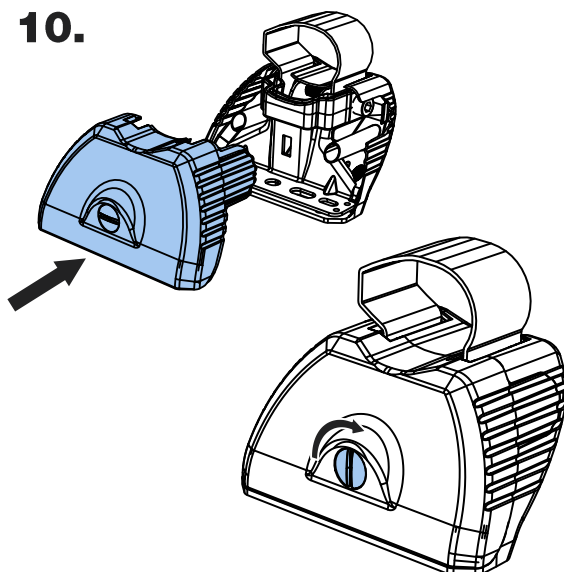

11.

