


XC3PR/FL





KammBar

Instructions

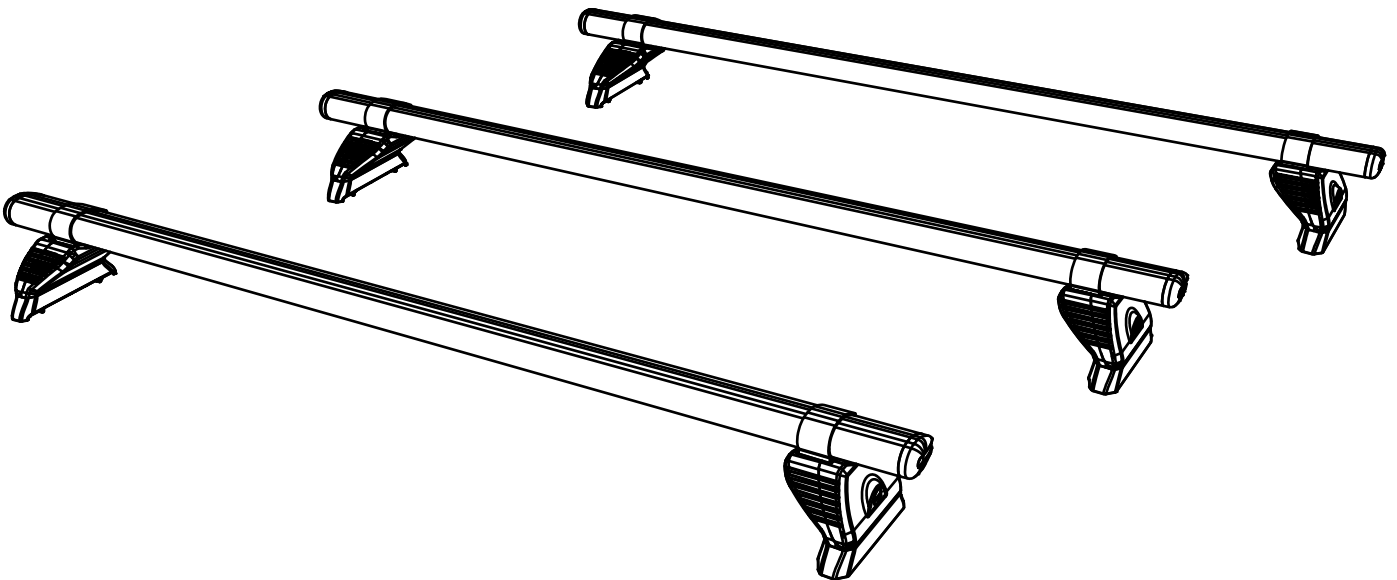


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

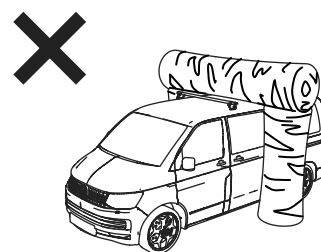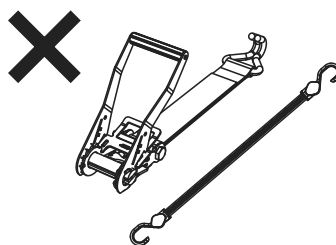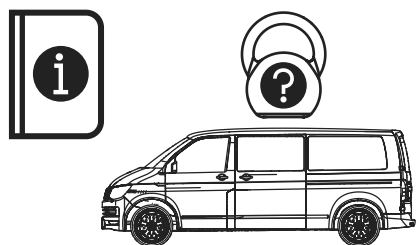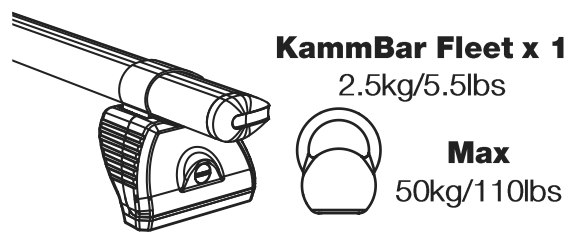


KammBar Pro

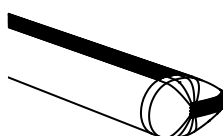


SA421 x 3 ☐



SA070 x 4 ☐

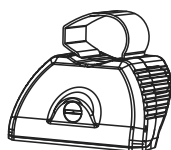


SA397 x 3 ☐

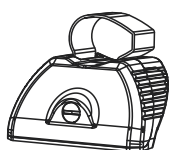


SA398 x 3 ☐


KammBar Fleet

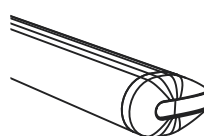


SA395 x 3 ☐



C04 x 3
optional upgrade

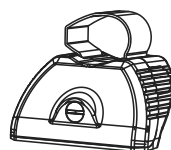


SA397 x 3 ☐

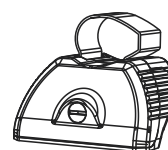


SA398 x 3 ☐


Fitting Kit

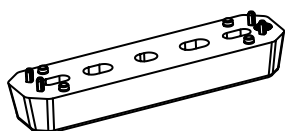


PS183 x 6 ☐




PS023 x 6 ☐




PS046 x 4 ☐

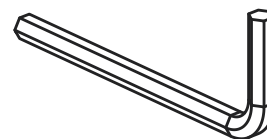


FT01 x 1 ☐

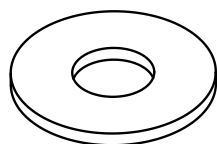


FW002 (M8) x 8 ☐

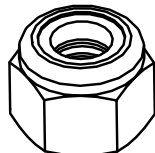

FN006 (M8) x 8 ☐

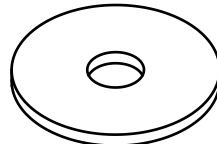

PS208 (M8) x 8 ☐

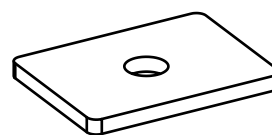


PS020 (M8) x 6 ☐




FS024 (M8 x 100) x 6 ☐



FS081 (M8 x 50) x 4 ☐




MS019 x 2 ☐

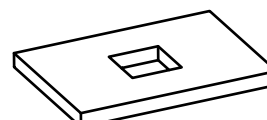


MS209 x 6 ☐




L1/H1 = 1-4, 17-33.

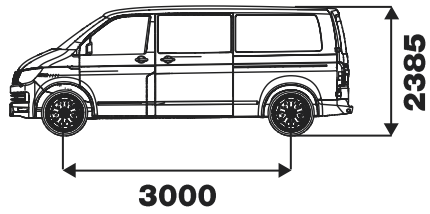


L2/H2 = 5-10, 17-33.

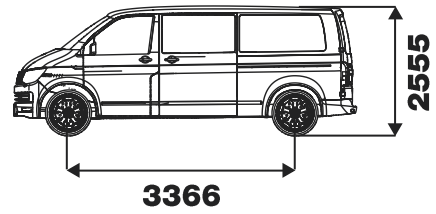


L3/H2 = 11-33.

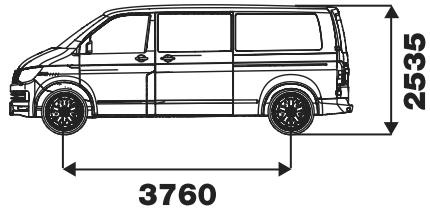


L3/H3 = 11-33.

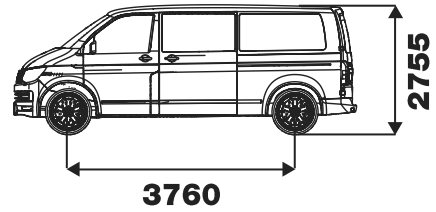


1.

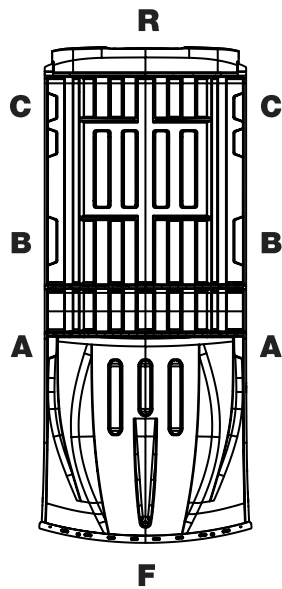

2.

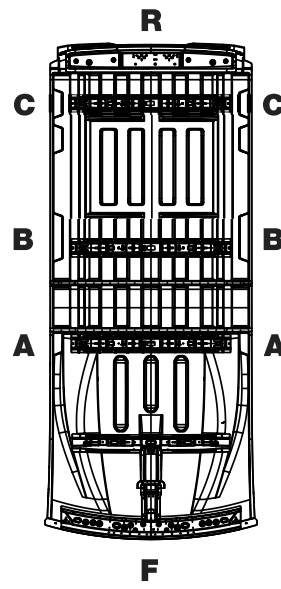


3.

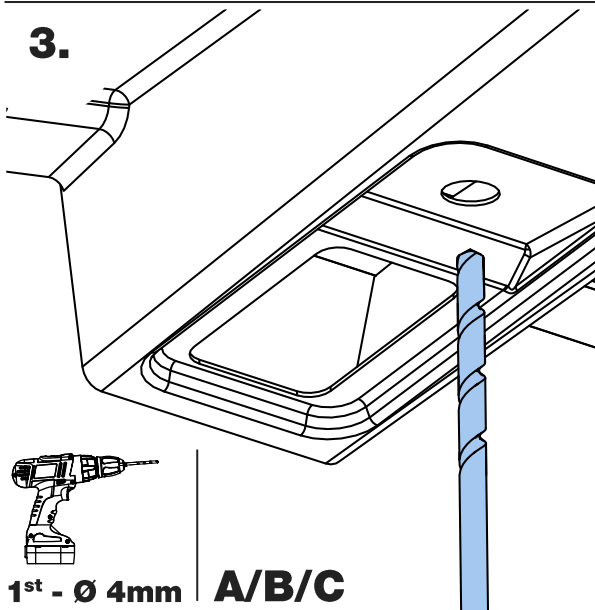

1st - Ø 4mm







A/B/C







4.

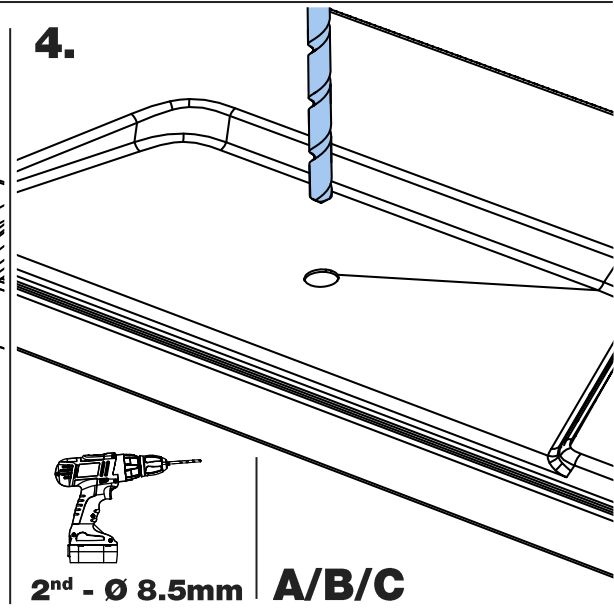


2nd - Ø 8.5mm

A/B/C

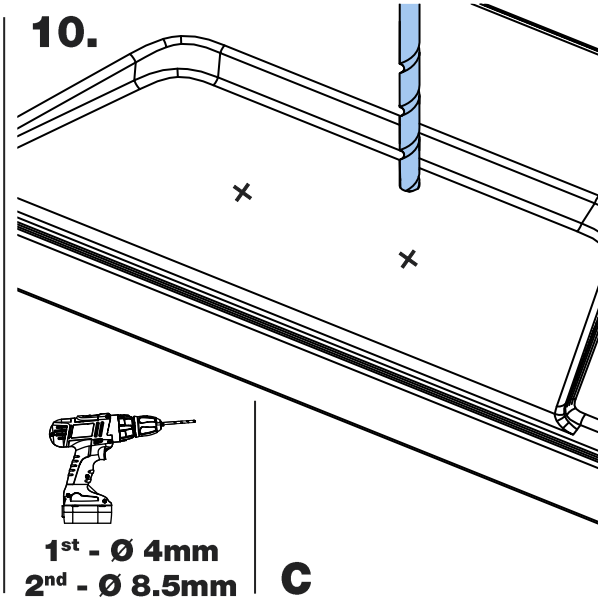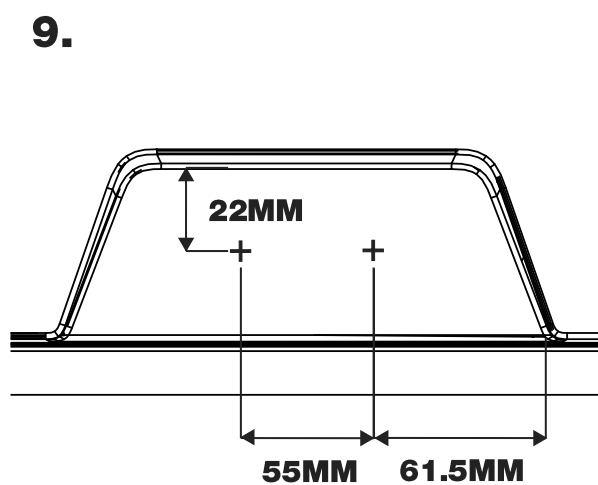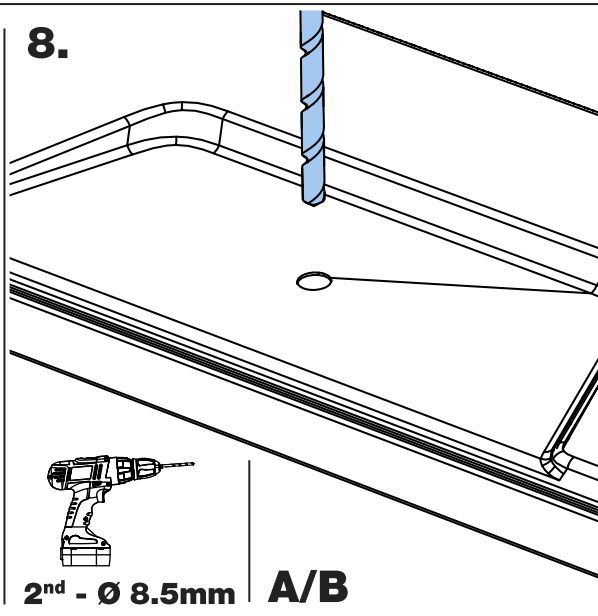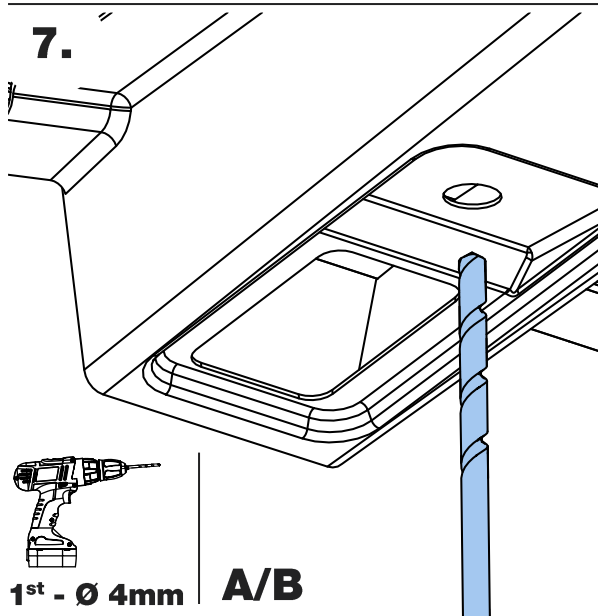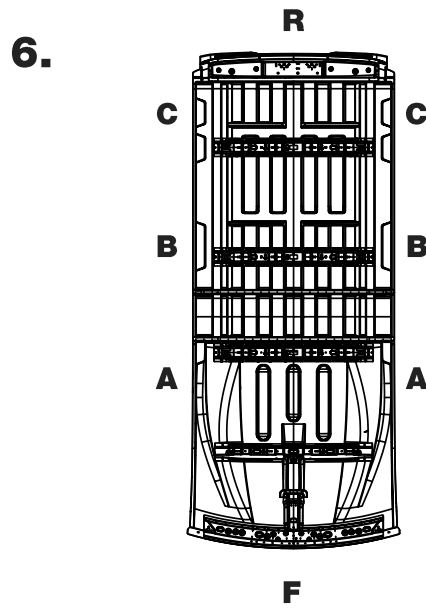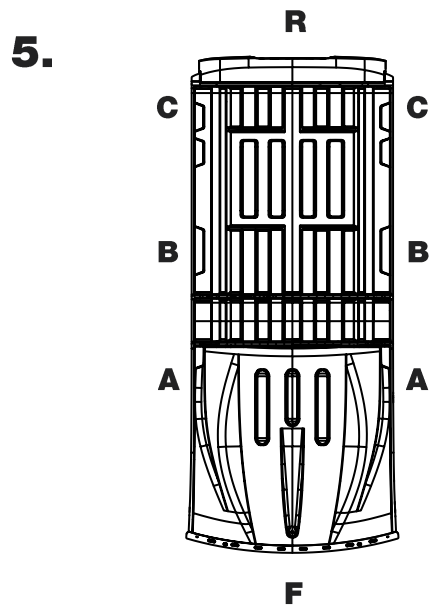


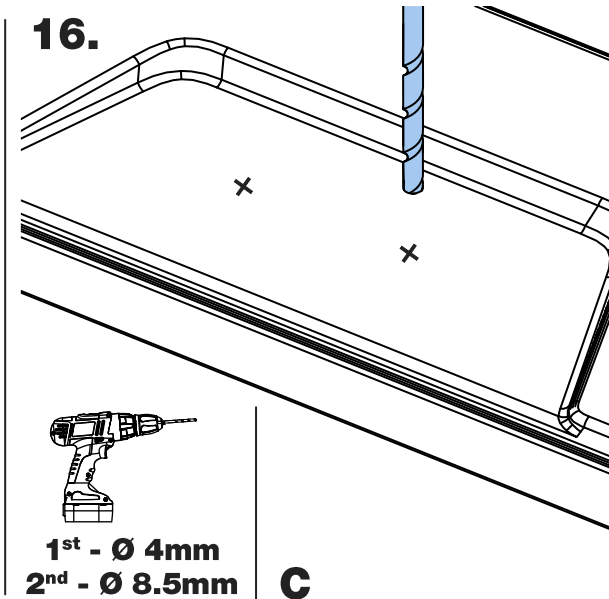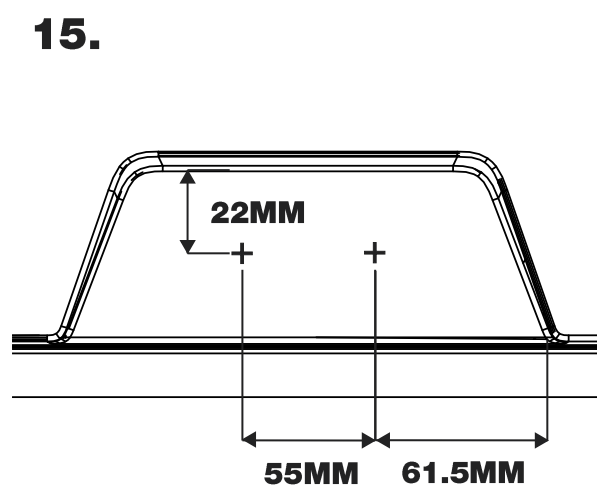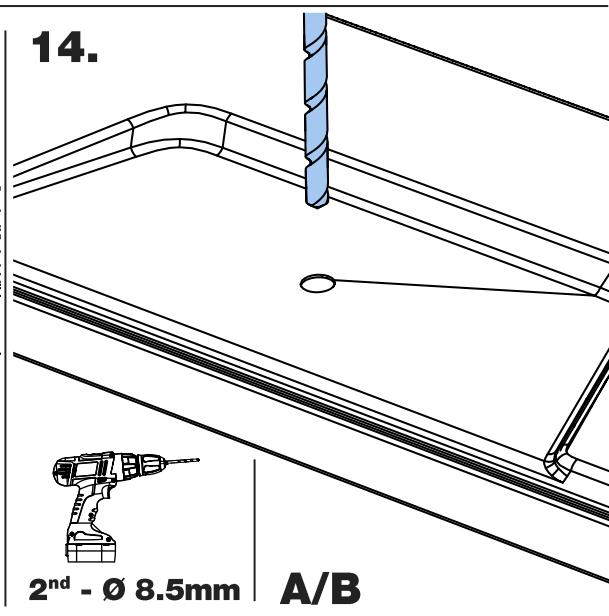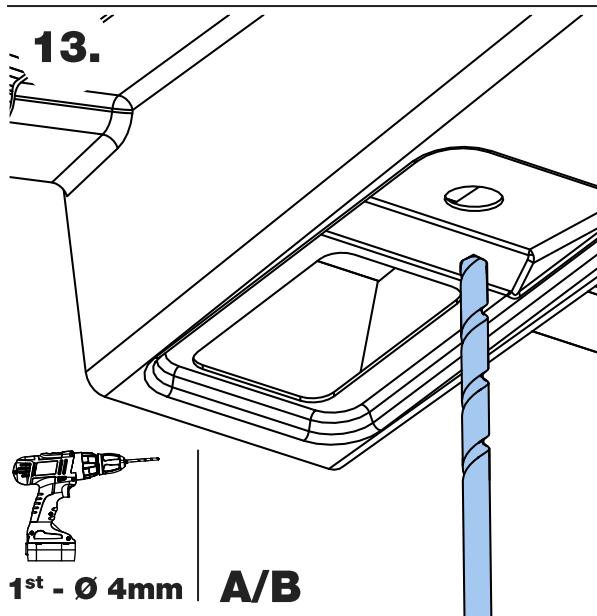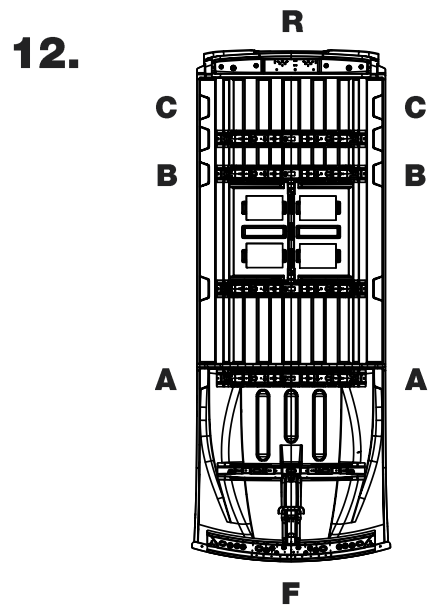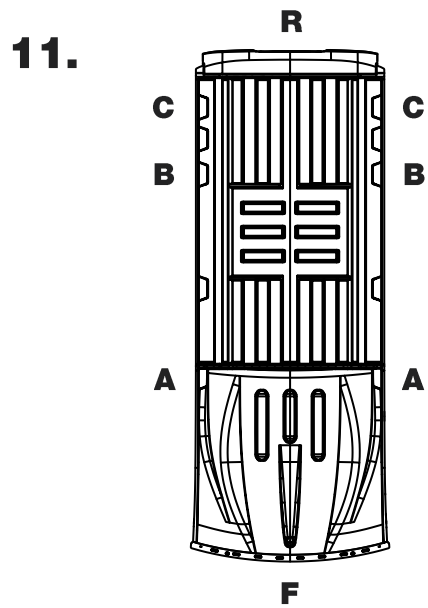


17.

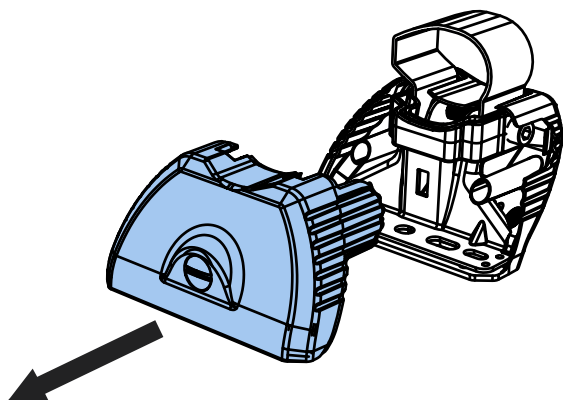

18.

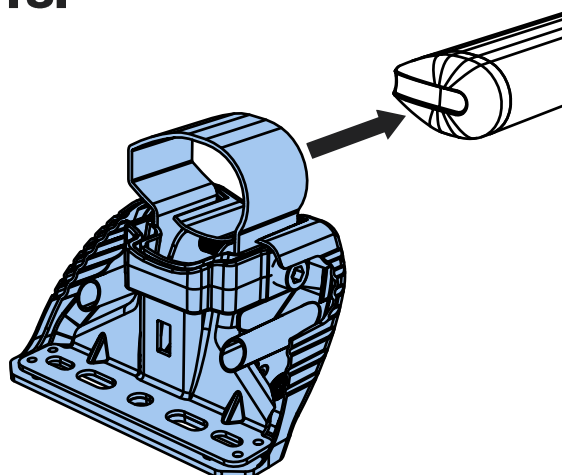

19.




SA397

PS183




SA397

PS183



SA397

PS183

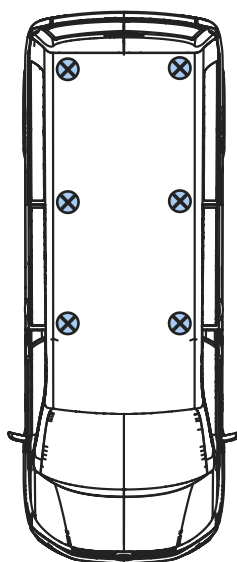


SA398




PS183

SA398



PS183

SA398




PS183

20.


FW002

PS208

FS024



M8 x 100mm




M8 x 50mm

FW002

PS208

FS081

21.

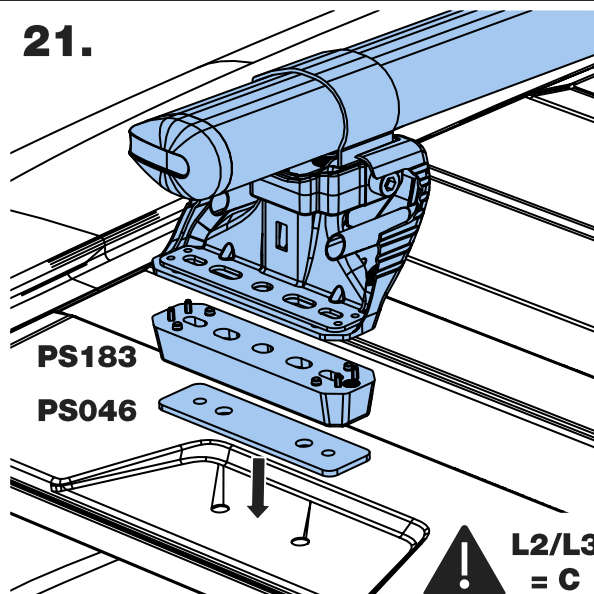

PS183

PS046



L2/L3
= C

