






KD4PR/FL KammBar

Instructions

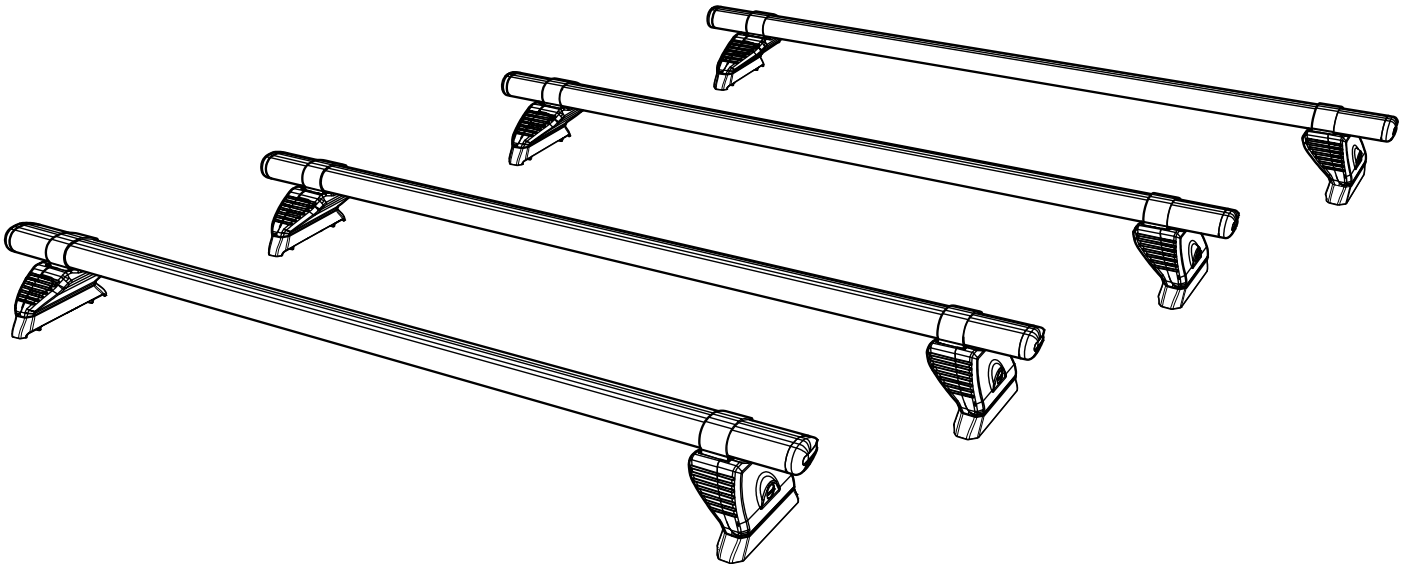


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

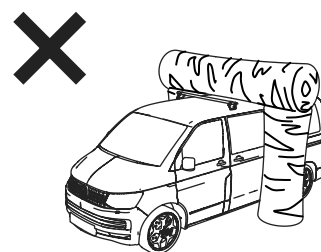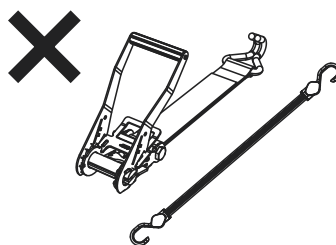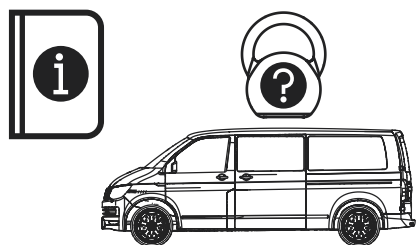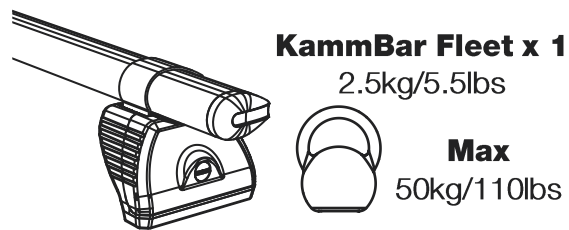


KammBar Pro

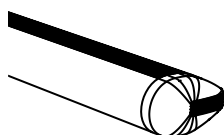

SA419 x 4 ☐



SA070 x 4 ☐

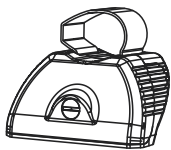


SA397 x 4 ☐




SA398 x 4 ☐


KammBar Fleet

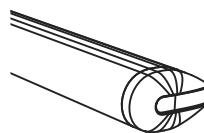


SA393 x 4 ☐



C04 x 4
optional upgrade

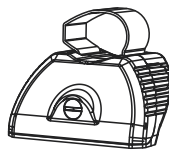


SA397 x 4 ☐

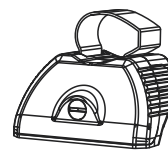


SA398 x 4 ☐


Fitting Kit




PS176 x 4 ☐




PS319 x 4 ☐




PS023 x 4 ☐




PS404 x 4 ☐

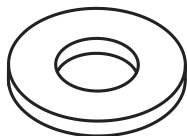

FW002 (M8) x 8 ☐

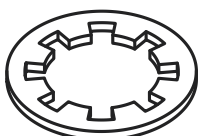


FW009 (M8) x 8 ☐

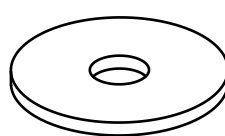


PS208 (M8) x 8 ☐



FT01 x 1 ☐




FS081
(M8 x 50)
x 4 ☐




FS061
(M8 x 35)
x 4 ☐


1.

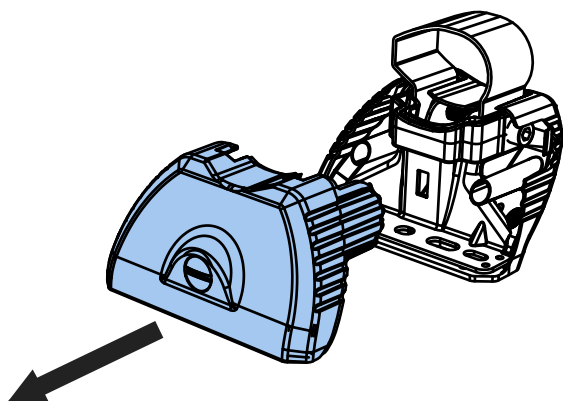

2.

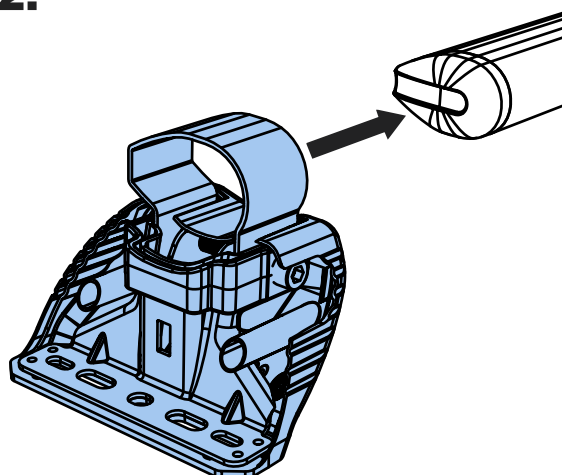


3.




SA397




PS176



SA397




SA397




SA397

PS176

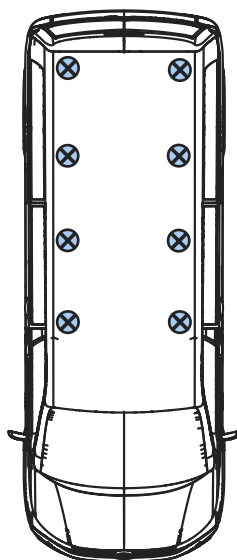


SA398




PS176


SA398



SA398




SA398




PS176

4.

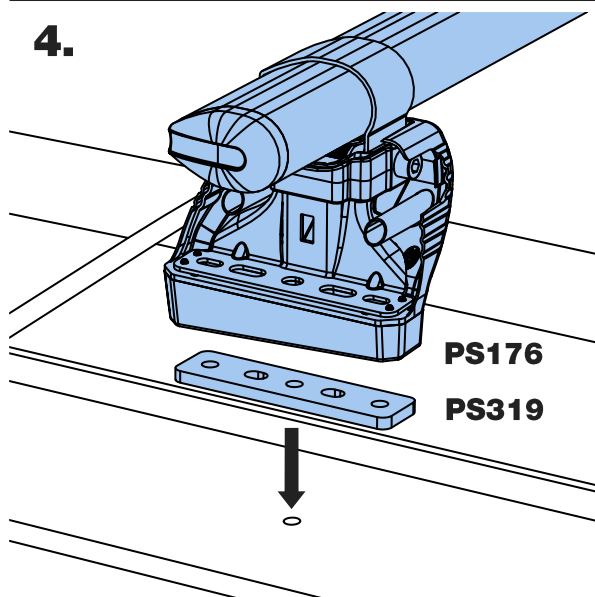


5.

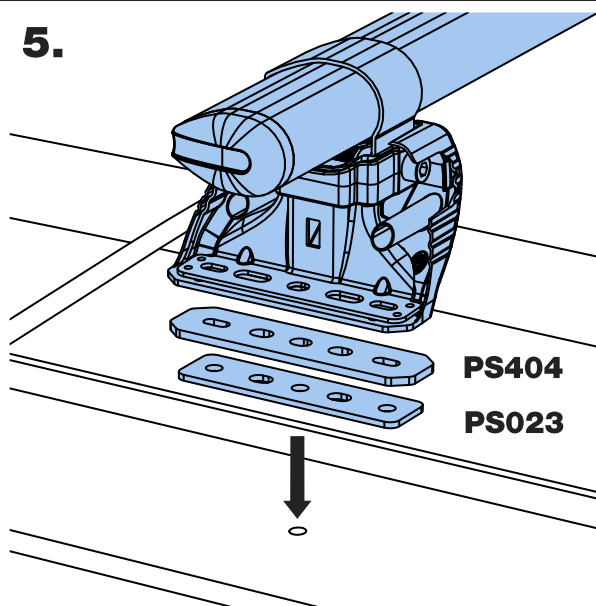

6.

FS081
FW009
FW002
PS208

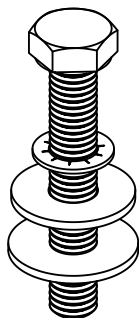


M8 x 35mm

FS061
FW009
FW002
PS208


M8 x 50mm

7.

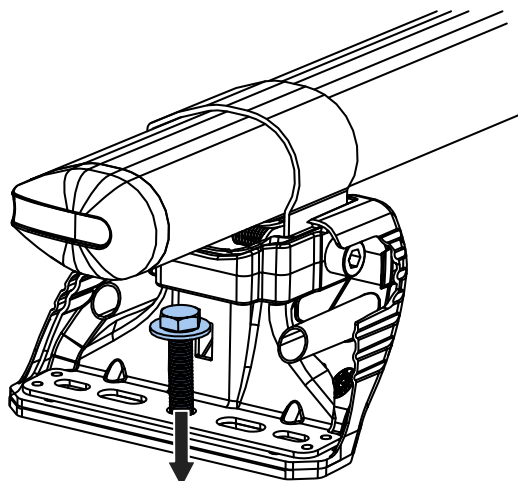


PS404 + M8 x 35mm

8.

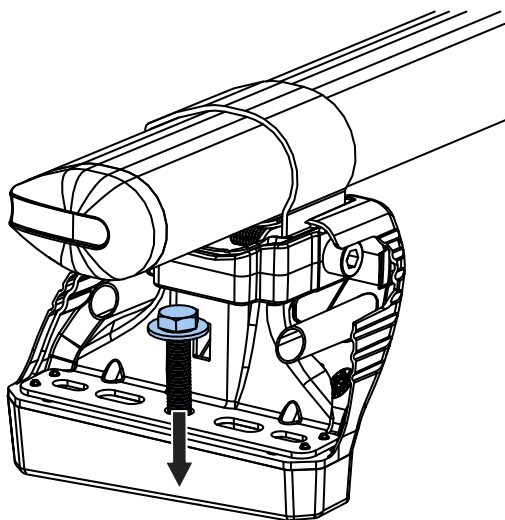


PS176 + M8 x 50mm

9.

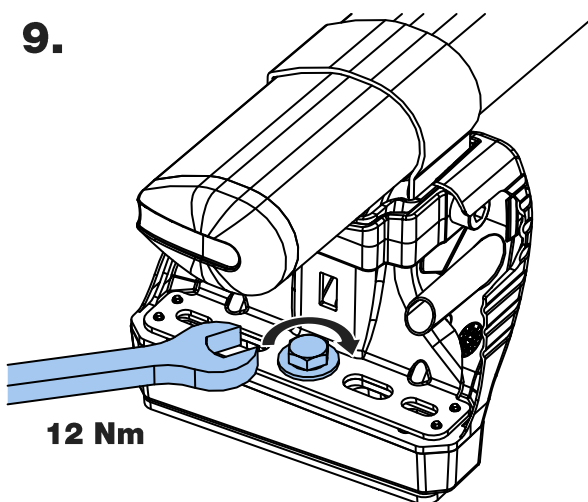


12 Nm




13mm

10.

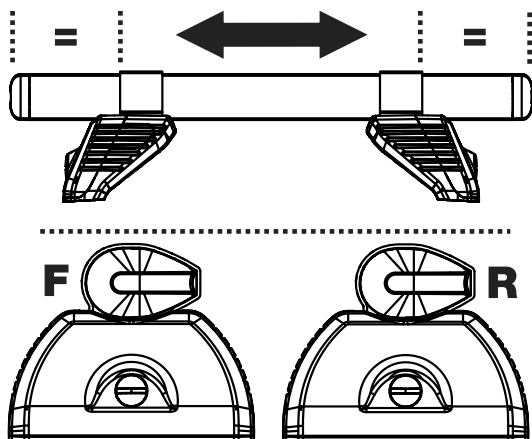


11.

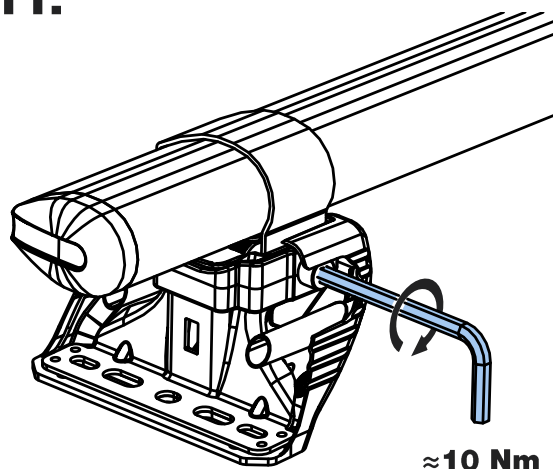

≈10 Nm

12.

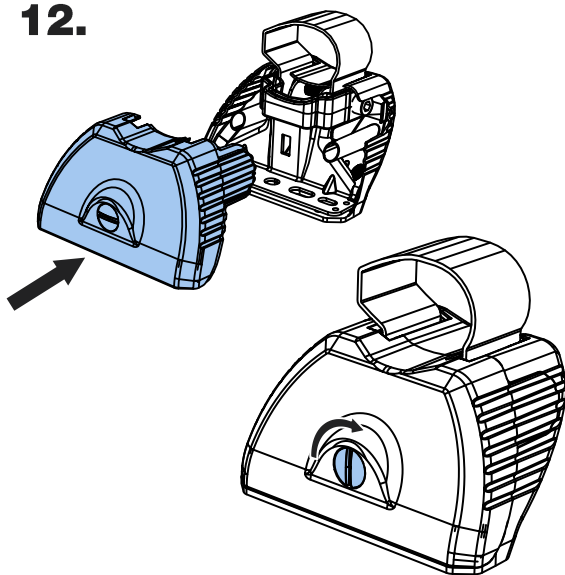

13.

