






# ID2PR/FL KammBar

## Instructions

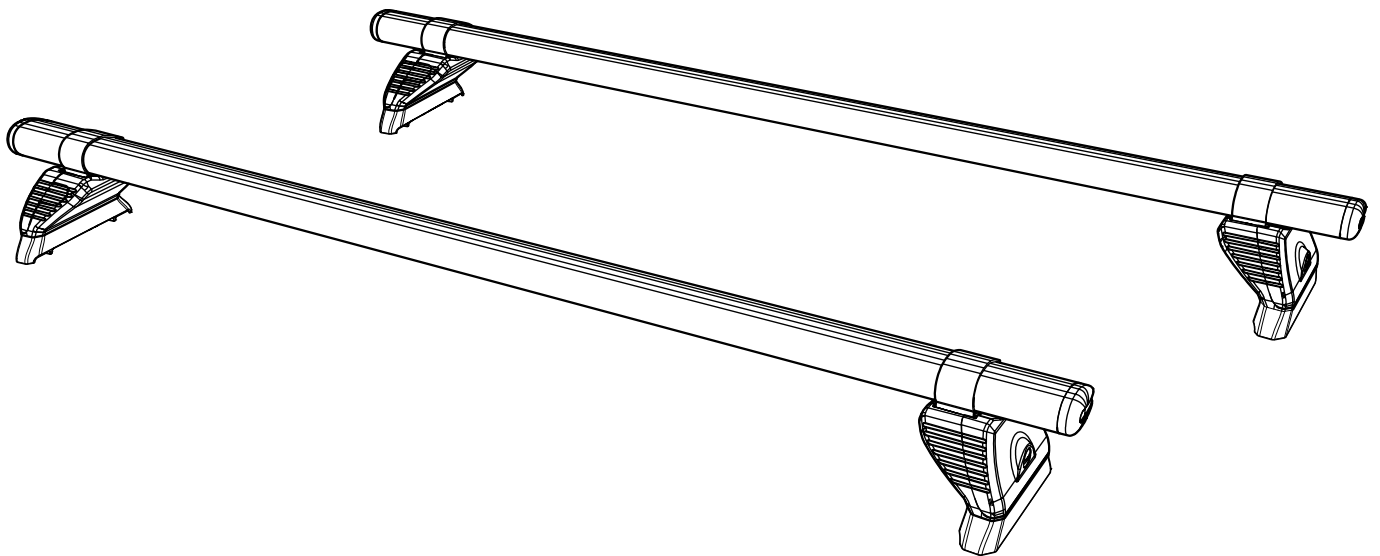


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

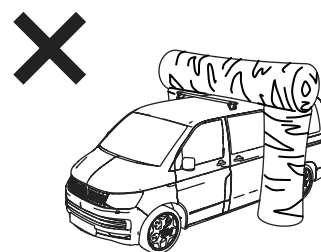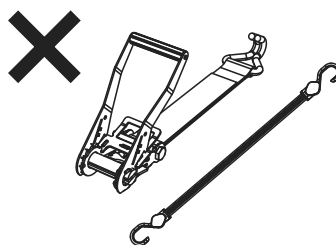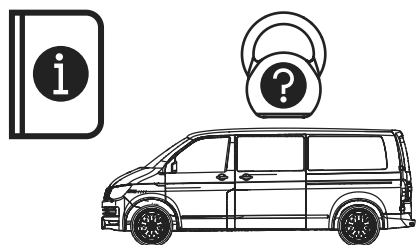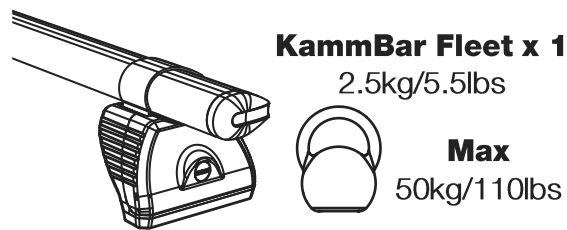


## KammBar Pro

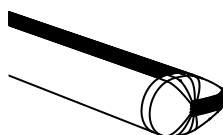


SA419 x 2 ☐



SA070 x 4 ☐

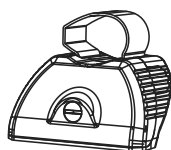


SA397 x 2 ☐

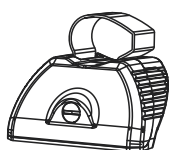


SA398 x 2 ☐


## KammBar Fleet

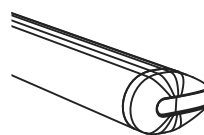

SA393 x 2 ☐

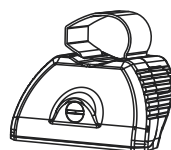


SA397 x 2 ☐

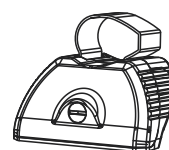


SA398 x 2 ☐

## Fitting Kit




PS175 x 2 ☐




PS023 x 4 ☐




FT01 x 1 ☐




**FS015**  
(M8 x 25) ☐  
x 2

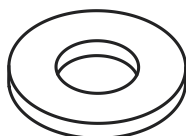

**FW002 (M8) x 4**

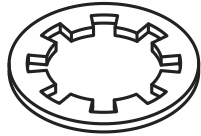

**FW009 (M8) x 4**




**FS091**  
(M8 x 60) ☐  
x 2




**C04 x 2**  
\*optional upgrade\*


1.

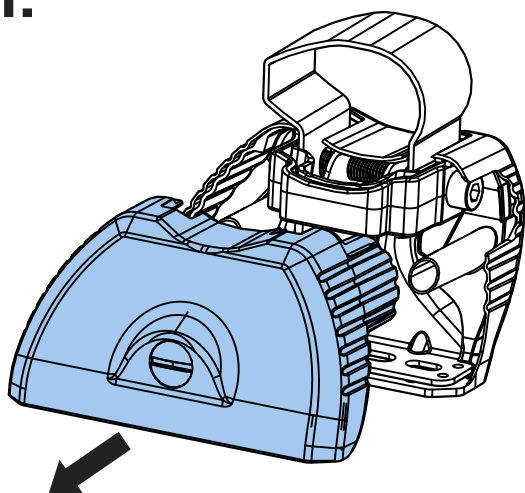


2.

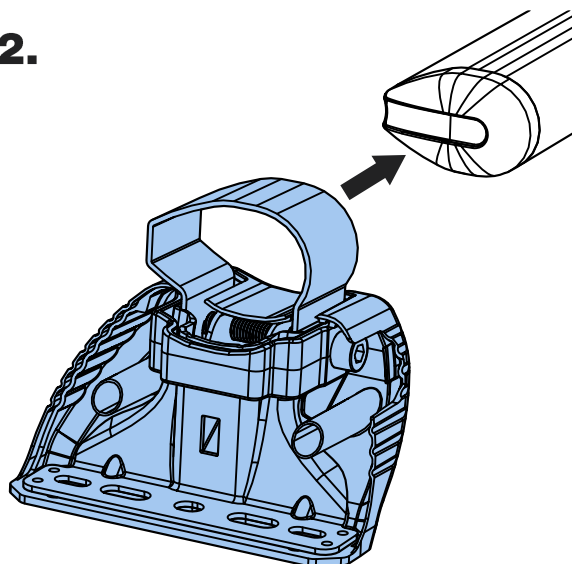



3.



**SA397**  
**PS175**

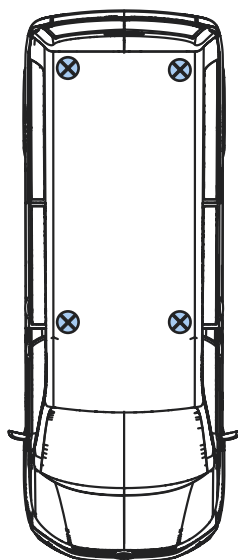


**SA398**  
**PS175**




**SA397**


**SA398**




4.

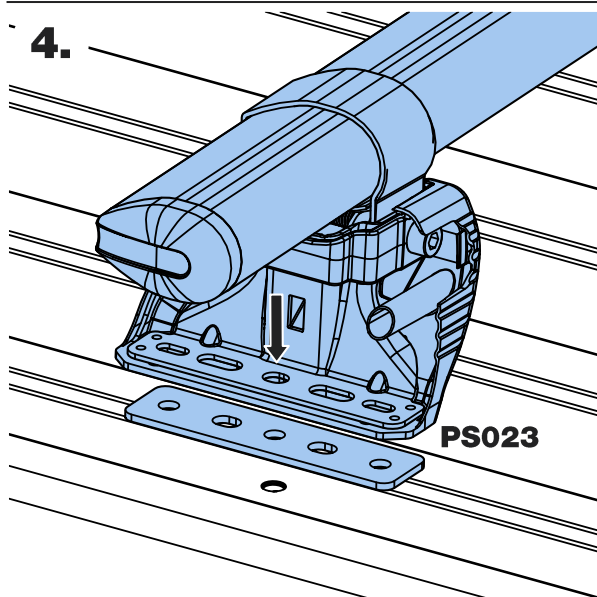


5.

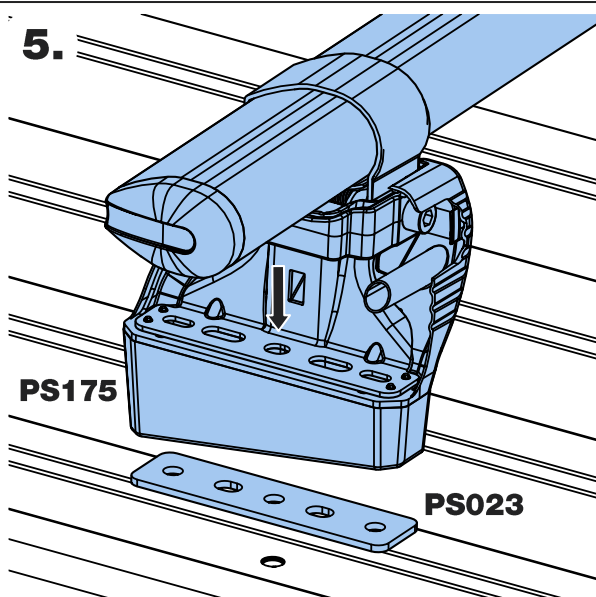


6.

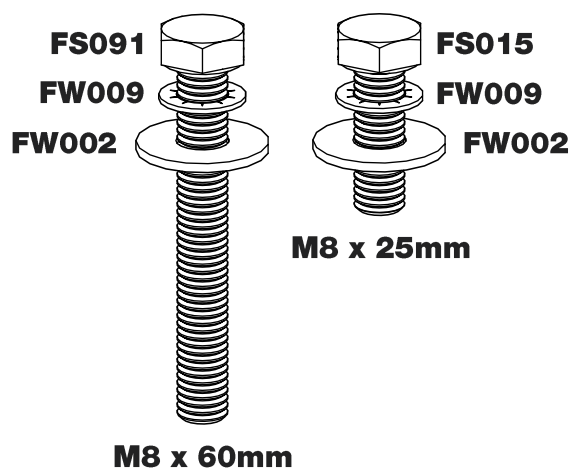


7.

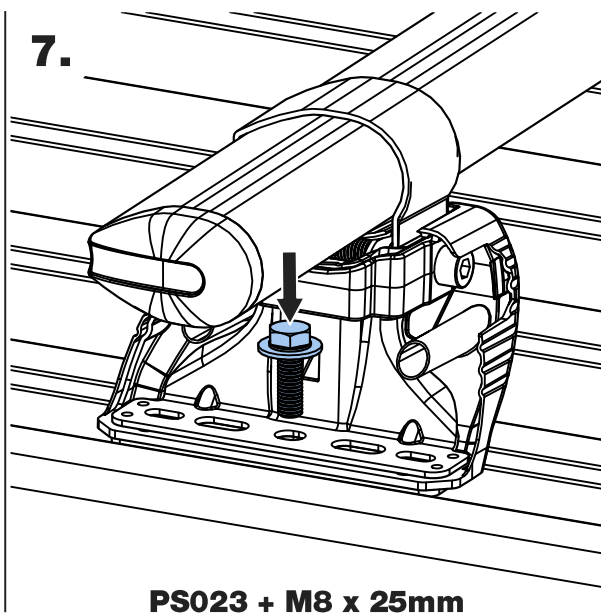


8.

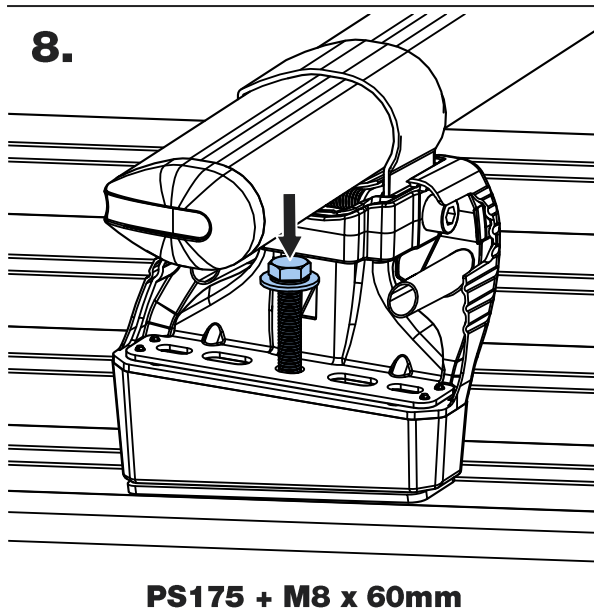


9.

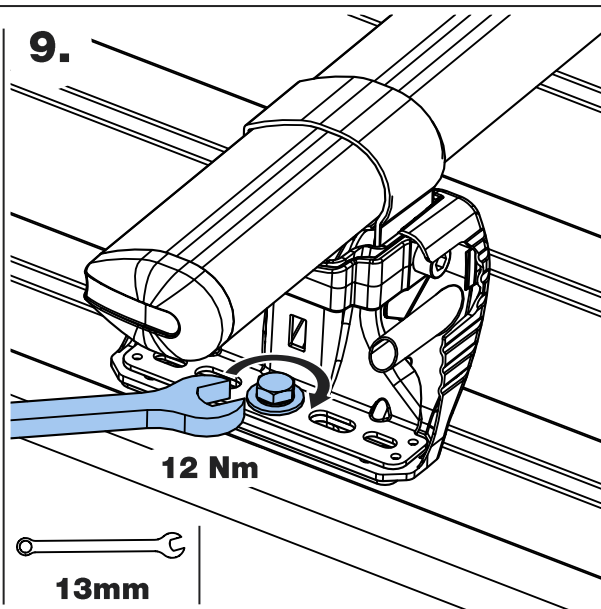


10.

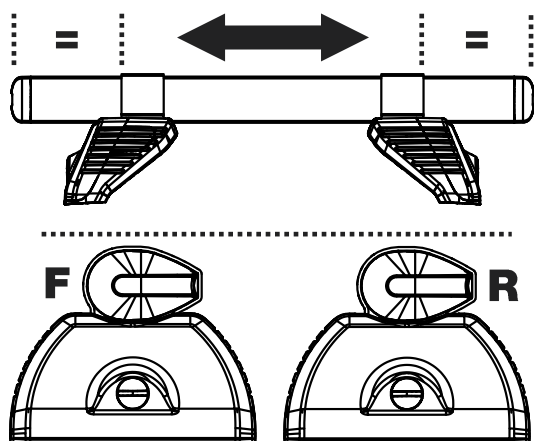

11.

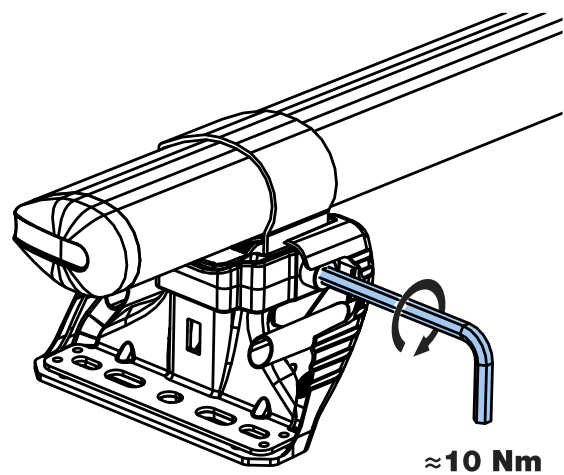

**12.**

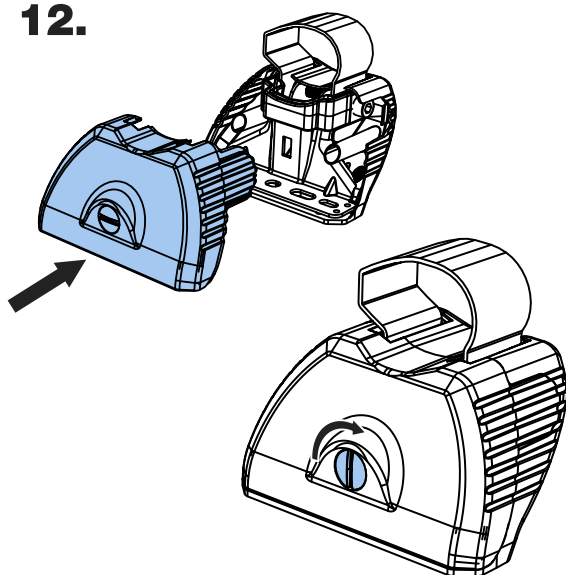

**13.**

