






ID3PR/FL KammBar

Instructions

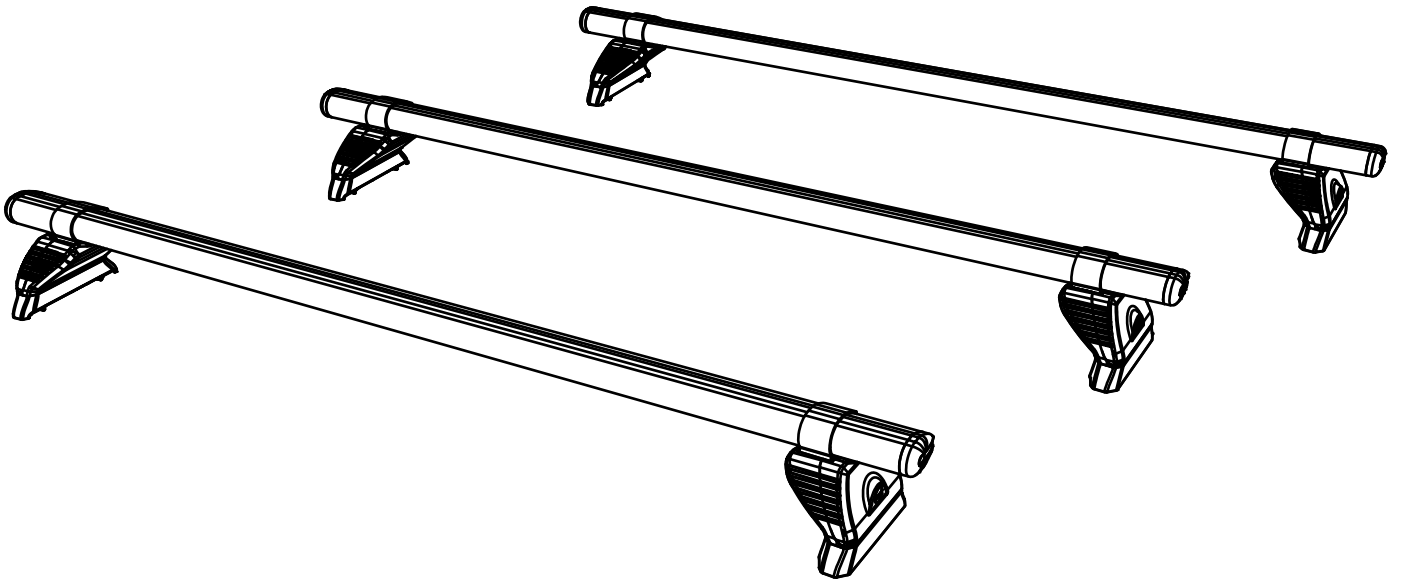


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

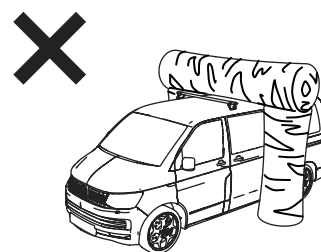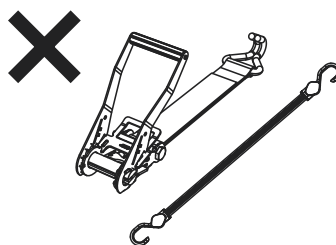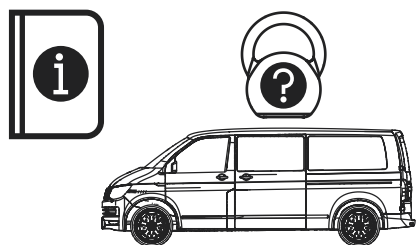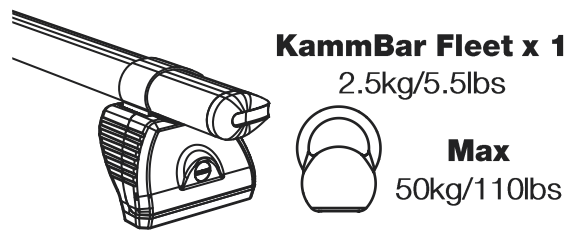


KammBar Pro

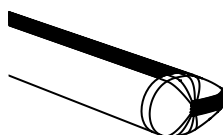


SA419 x 3 ☐



SA070 x 4 ☐

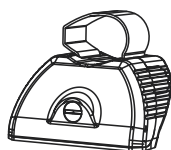


SA397 x 3 ☐

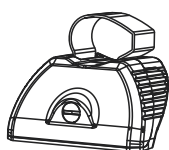


SA398 x 3 ☐


KammBar Fleet

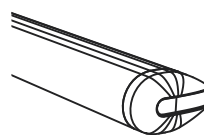

SA393 x 3 ☐

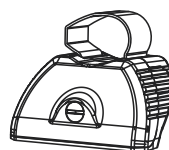


SA397 x 3 ☐

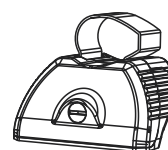


SA398 x 3 ☐

Fitting Kit




PS175 x 2 ☐




PS023 x 6 ☐




FT01 x 1 ☐




FS015
(M8 x 25) ☐
x 4

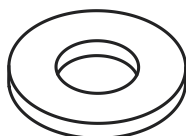

FW002 (M8) x 6 ☐

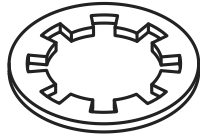

FW009 (M8) x 6 ☐




FS091
(M8 x 60) ☐
x 2




C04 x 3
optional upgrade


1.

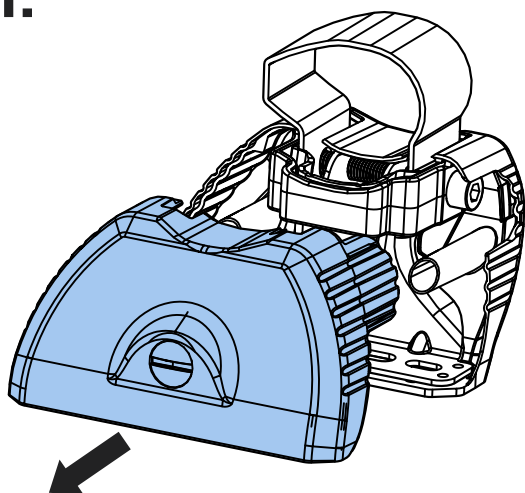

2.

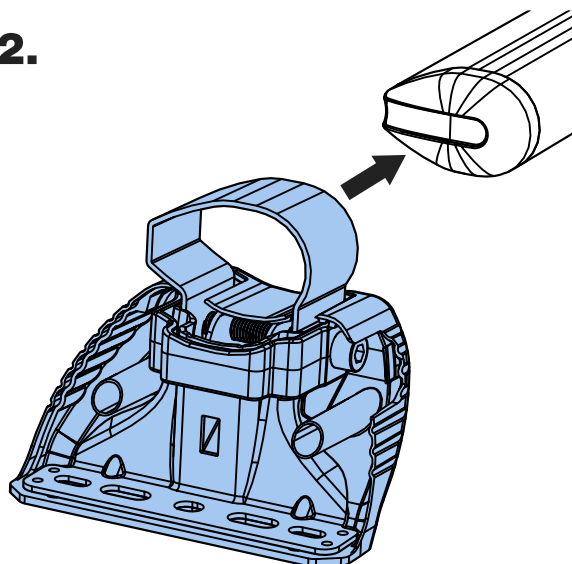

3.




SA397
PS175




SA397




SA397

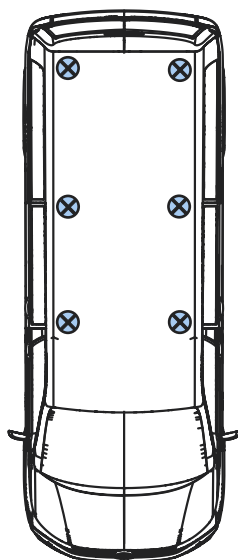


SA398
PS175




SA398




SA398




4.

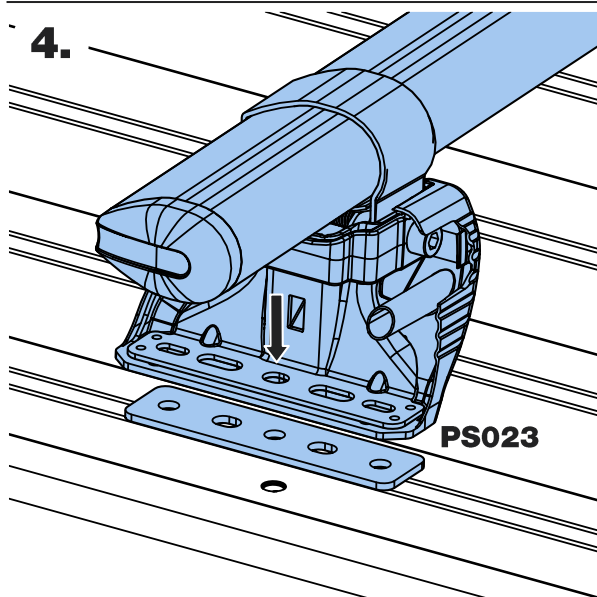


5.

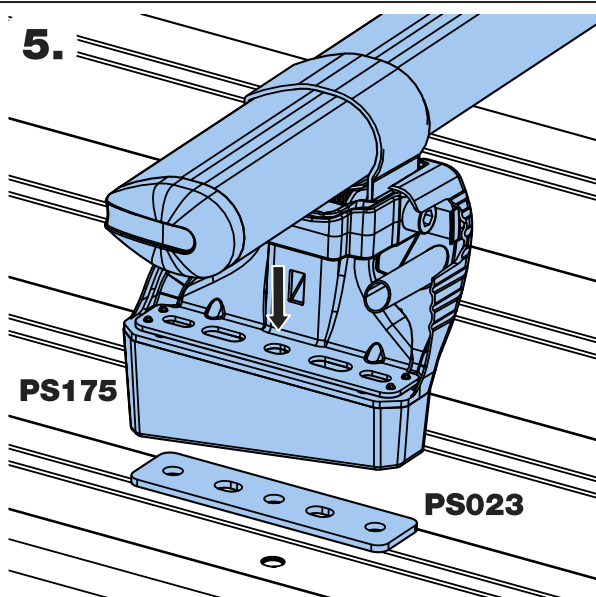


6.

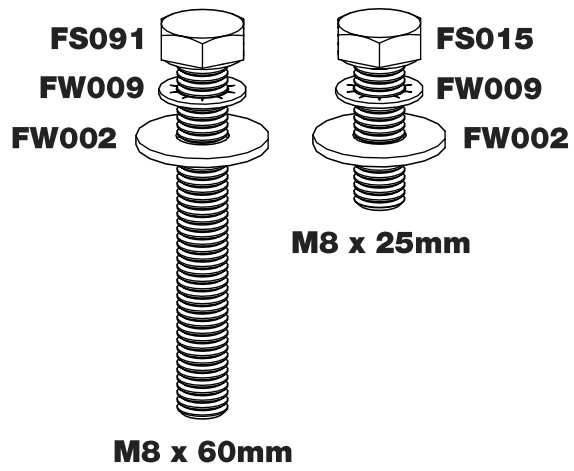


7.

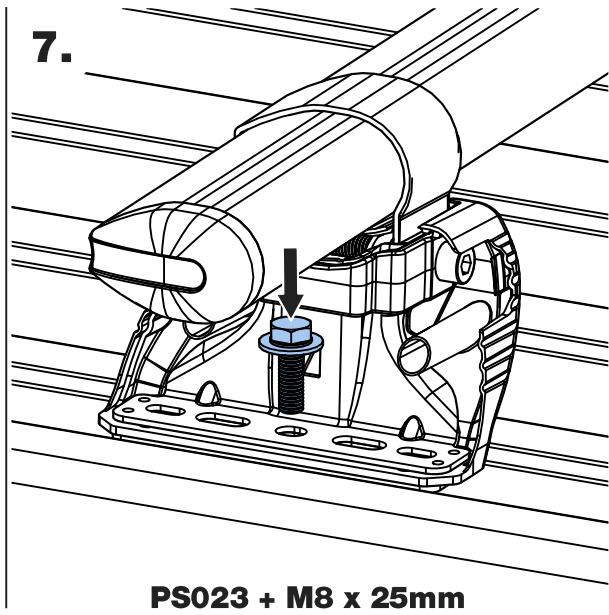


8.

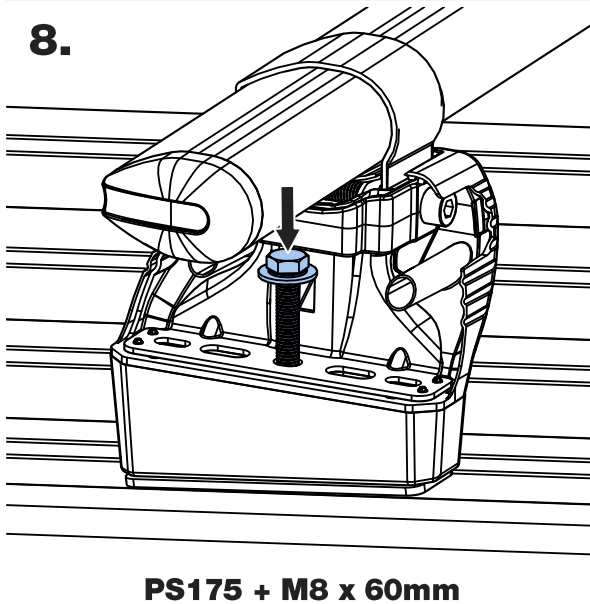


9.

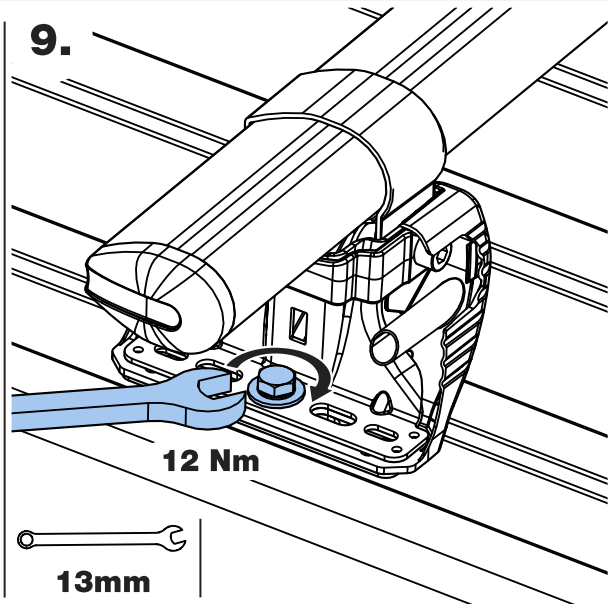


10.

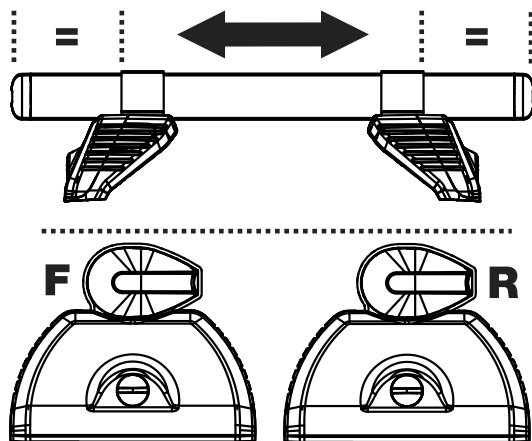

11.

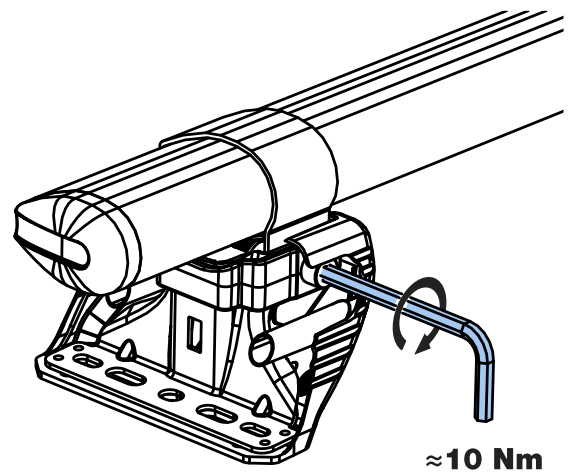

12.

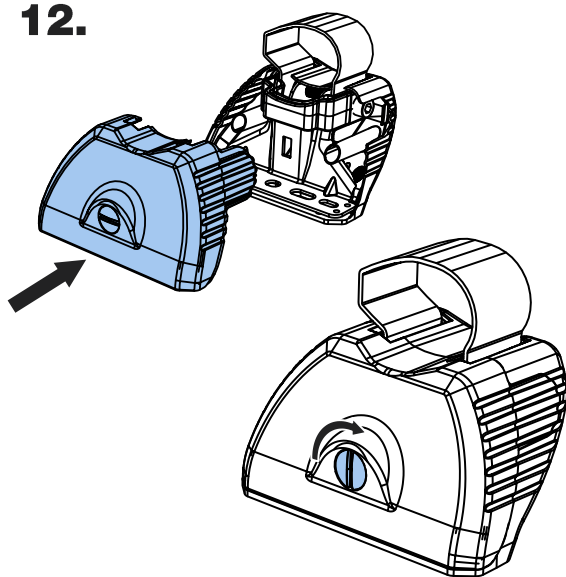

13.

