






MV2PR/FL KammBar

Instructions

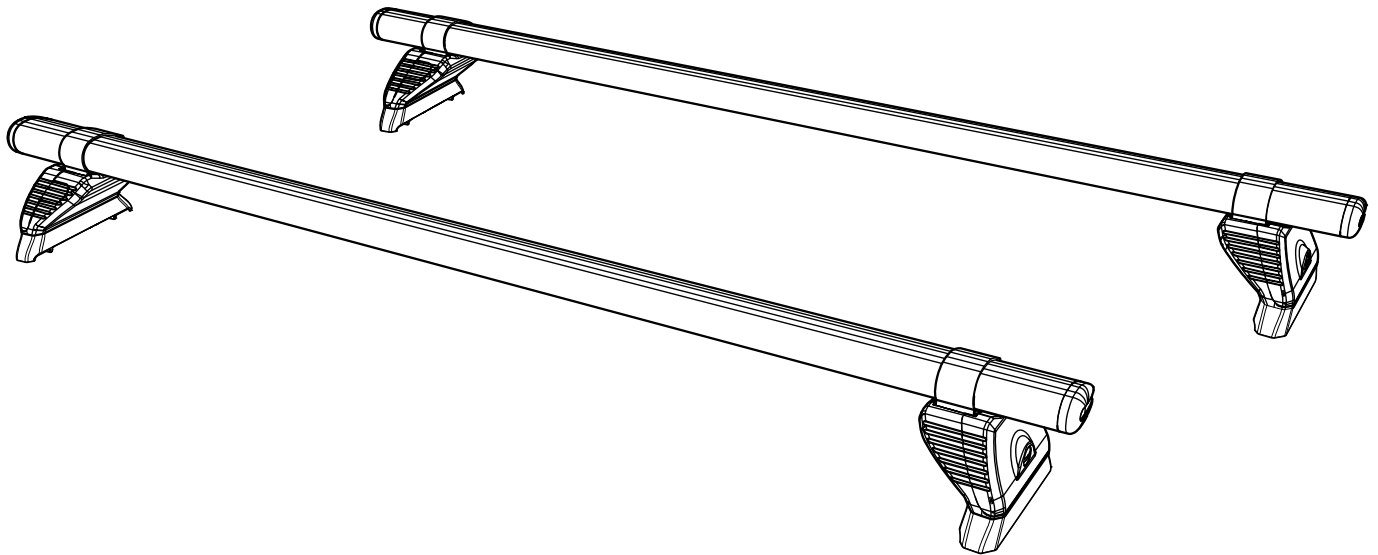


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

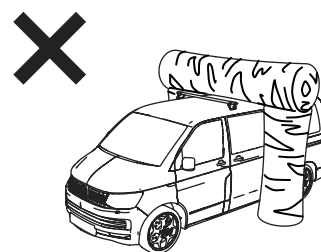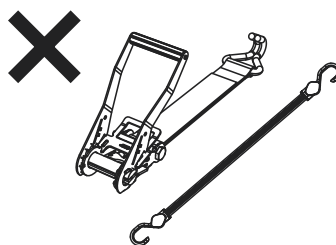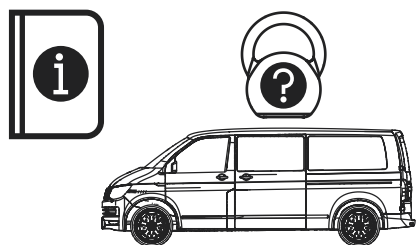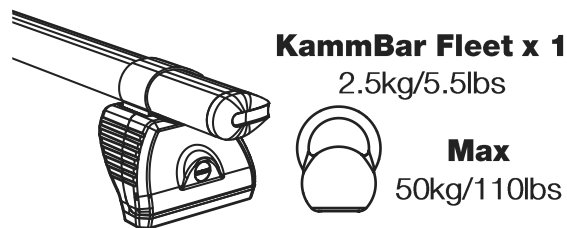


KammBar Pro

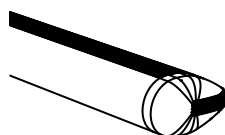


SA420 x 2 ☐



SA070 x 4 ☐

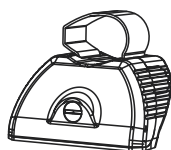


SA397 x 2 ☐

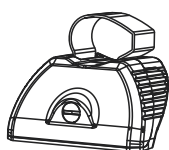


SA398 x 2 ☐


KammBar Fleet

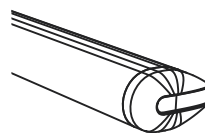

SA394 x 2 ☐

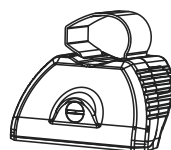


SA397 x 2 ☐

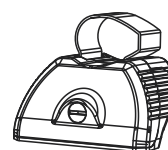


SA398 x 2 ☐

Fitting Kit




PS176 x 4 ☐




PS023 x 4 ☐




FT01 x 1 ☐

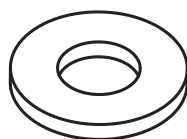


FW002 (M8) x 4

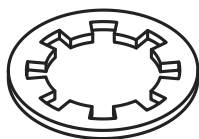


FW009 (M8) x 4

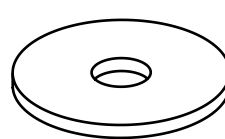

PS208 (M8) x 4




**FS081
(M8 x 50)
x 4** ☐




C04 x 2
optional upgrade


1.

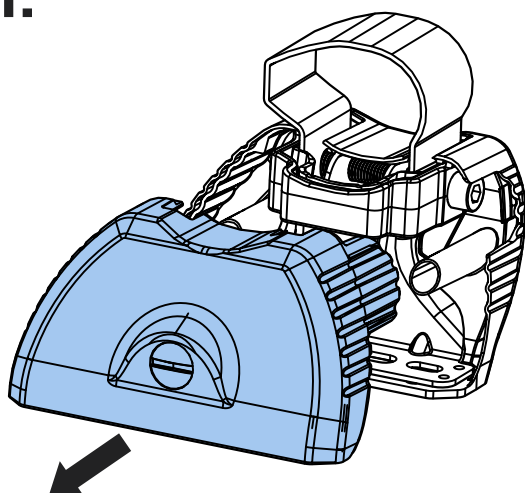


2.

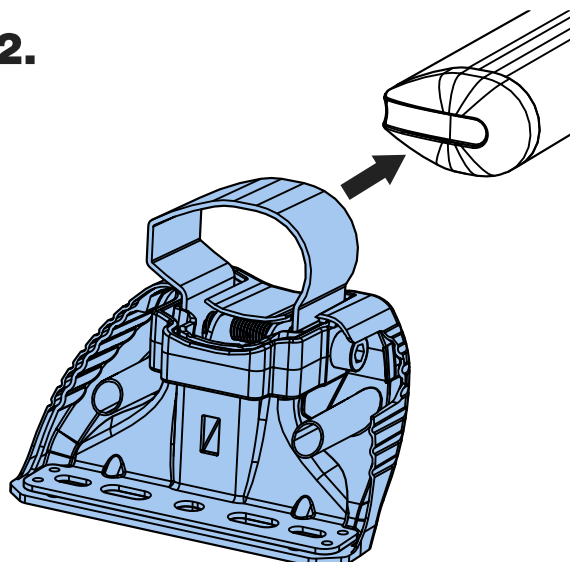


3.




SA397
PS176




SA397
PS176

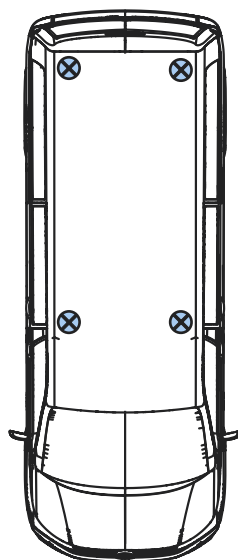


SA398
PS176



SA398
PS176



4.

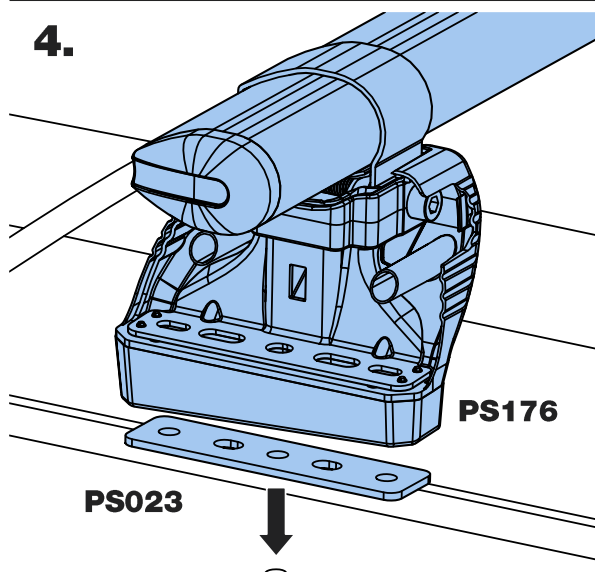

PS023

5.

