






MV3PR/FL KammBar

Instructions

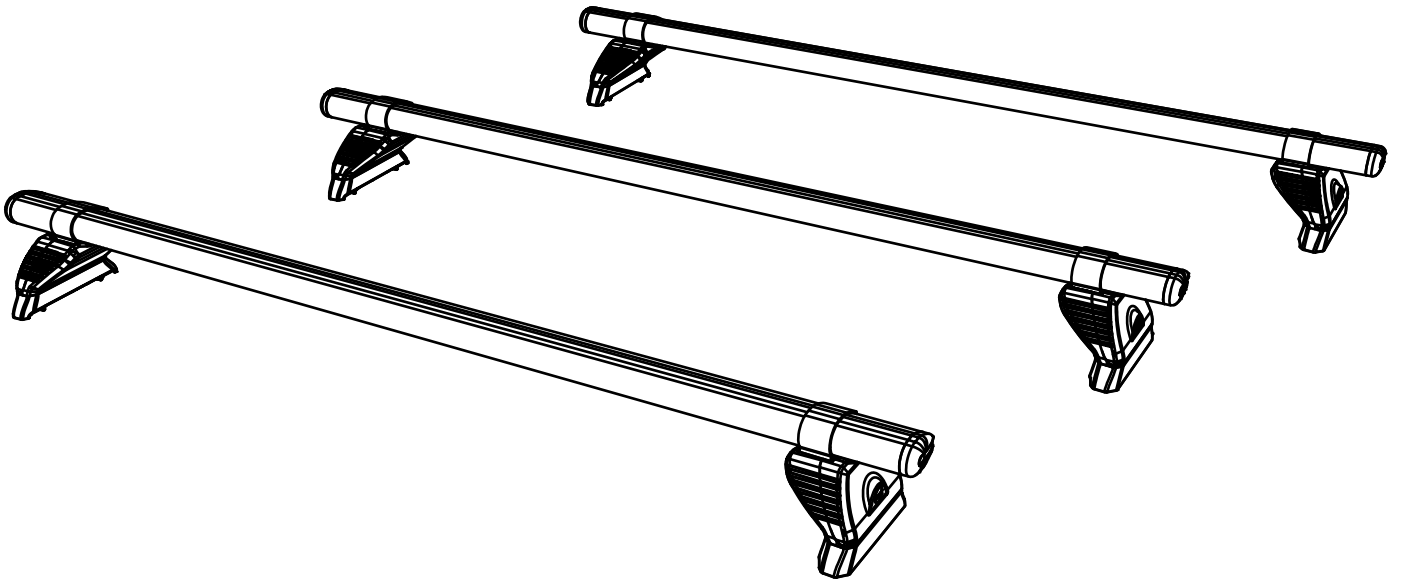


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

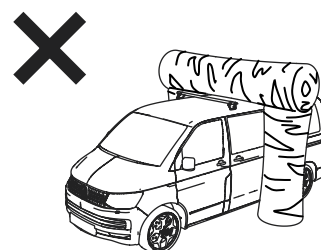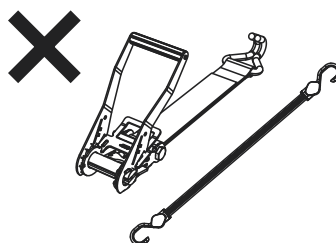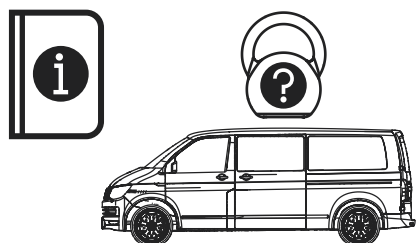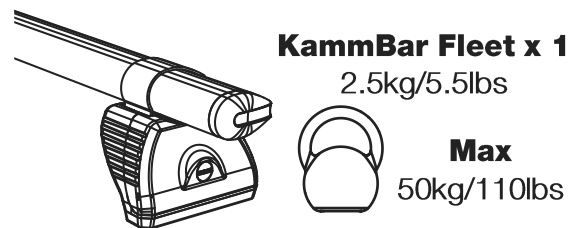


KammBar Pro

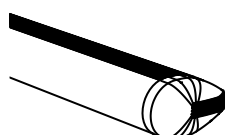


SA420 x 3 ☐



SA070 x 4 ☐

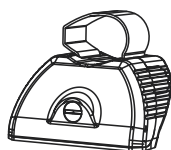


SA397 x 3 ☐

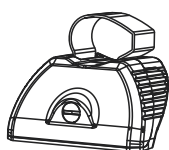


SA398 x 3 ☐


KammBar Fleet

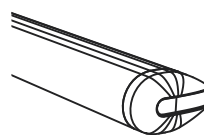

SA394 x 3 ☐

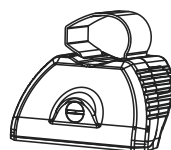


SA397 x 3 ☐

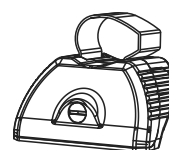


SA398 x 3 ☐


Fitting Kit



PS176 x 4 ☐




PS178 x 2 ☐




PS023 x 6 ☐




FT01 x 1 ☐

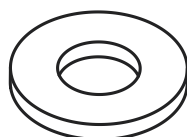


FW002 (M8) x 6

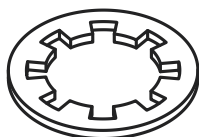


FW009 (M8) x 6

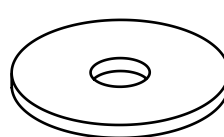


PS208 (M8) x 6



FS081
(M8 x 50)
x 4 ☐




FS061
(M8 x 35)
x 2 ☐




C04 x 3
optional upgrade


1.

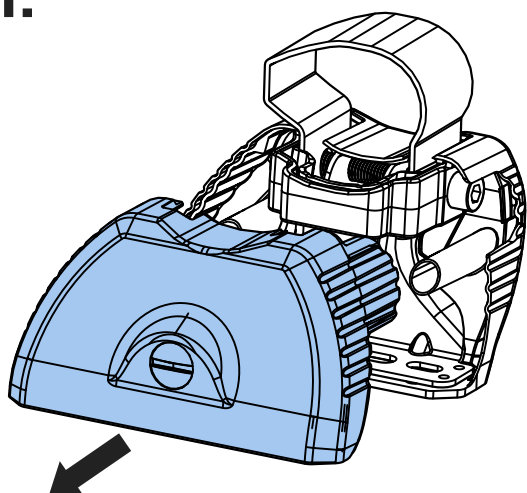


2.

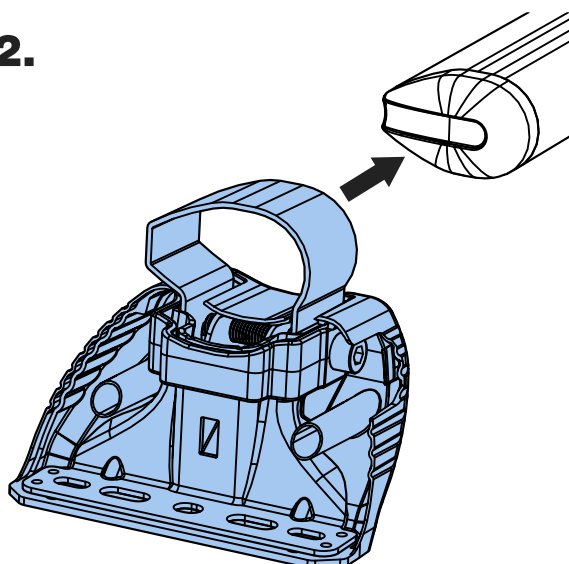


3.




SA397
PS176




SA397
PS178




SA397
PS176

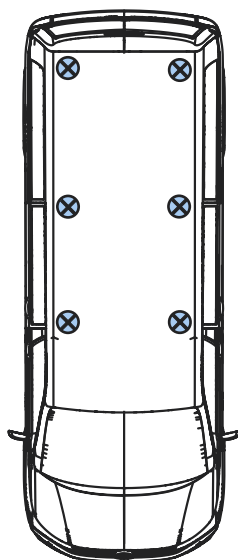


SA398
PS176




SA398
PS178




SA398
PS176




4.

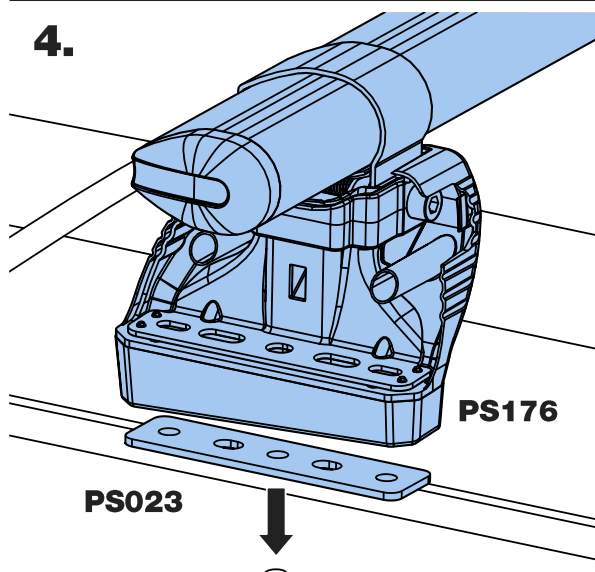


5.

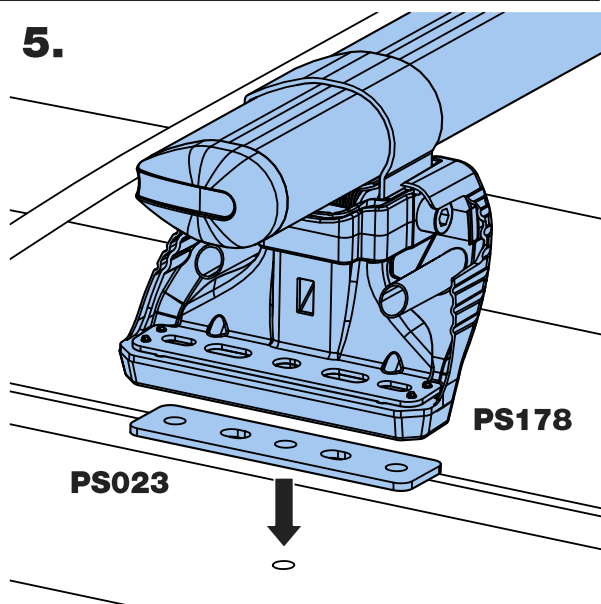


6.

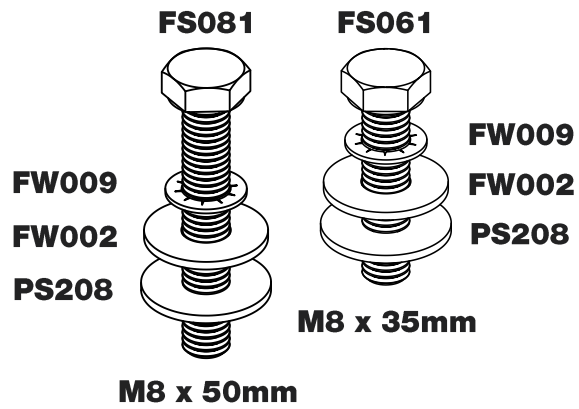


7.

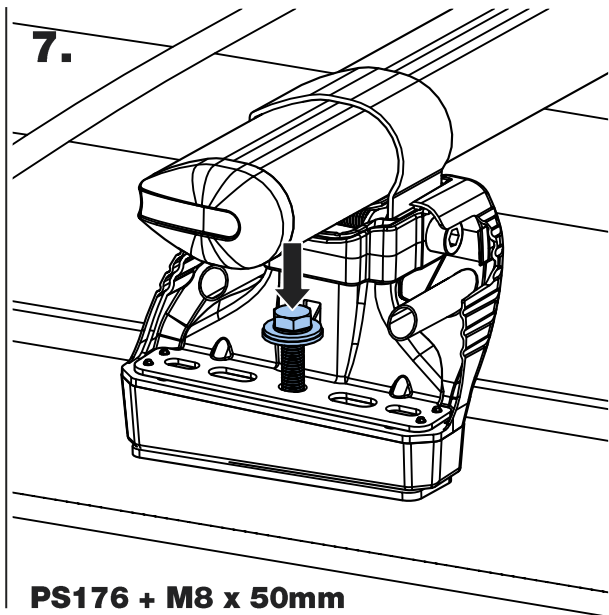


8.

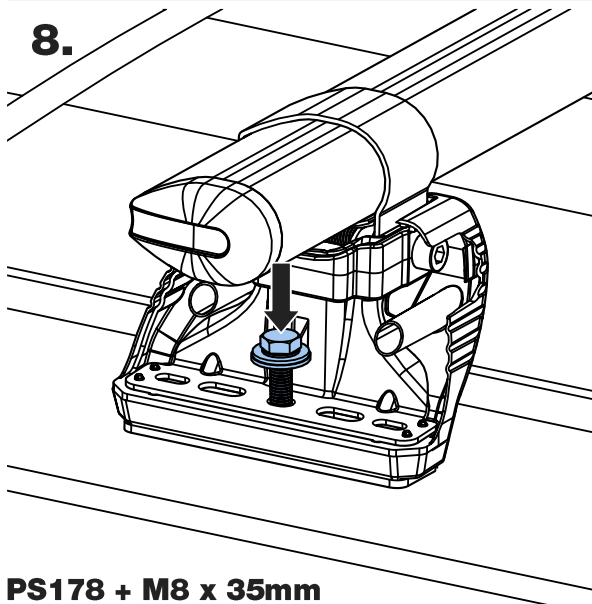


9.

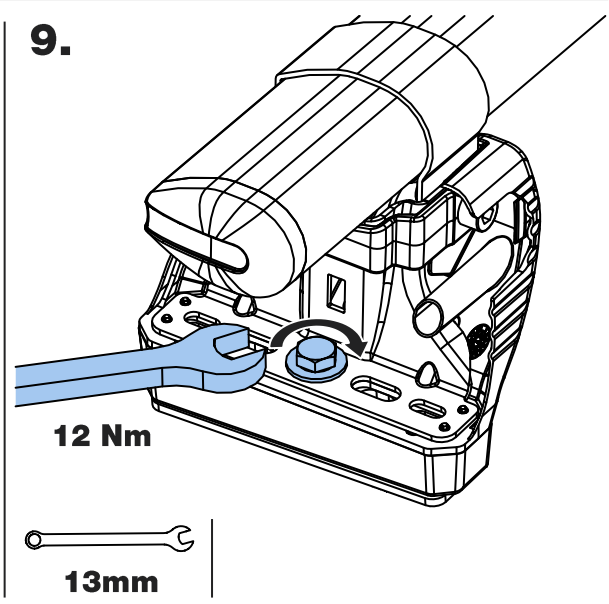


10.

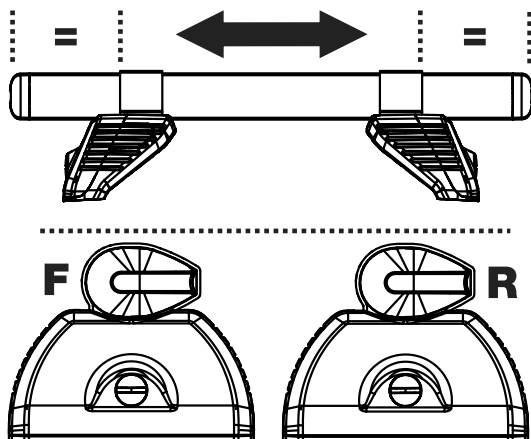

11.

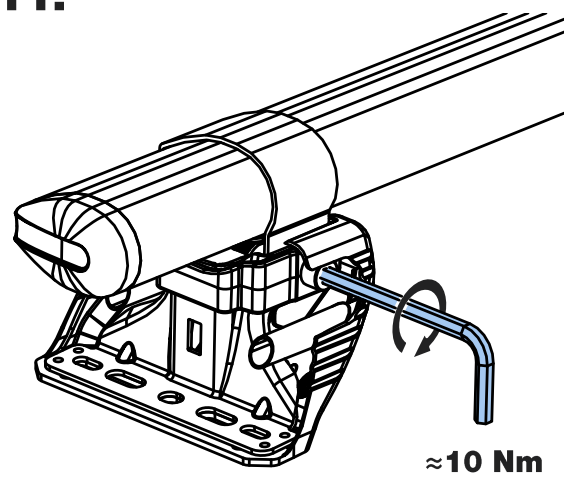

12.

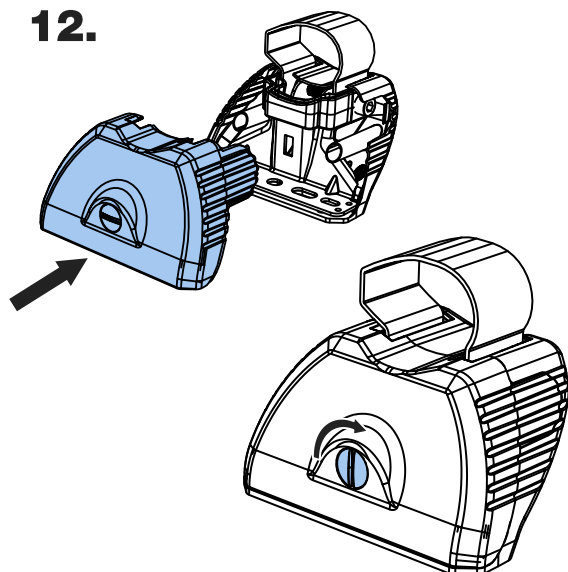

13.

