



T54FLR KammBar

Instructions

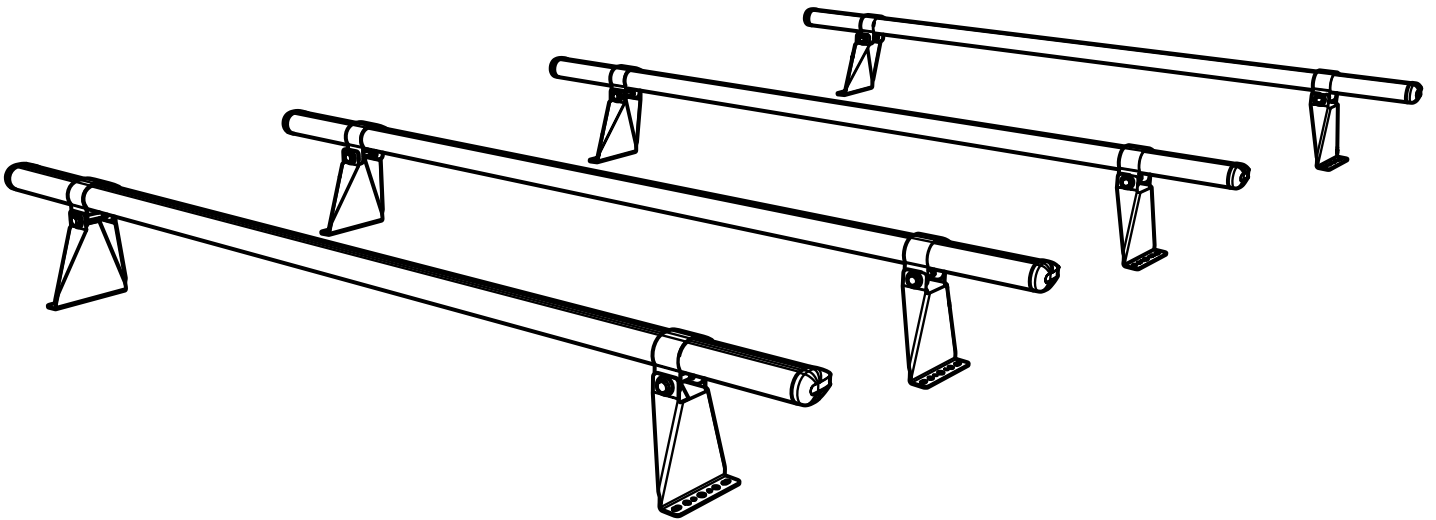

CITY CRASH (✓)

According to ISO/ PAS 11154:2006



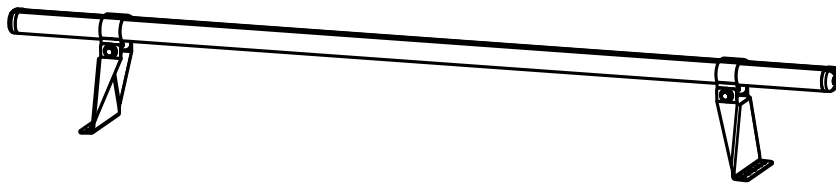


KammBar Fleet x 1


3.1kg/6.8lbs




Max
50kg/110lbs

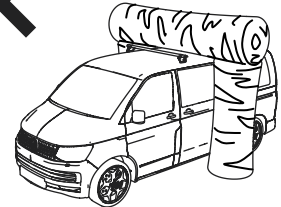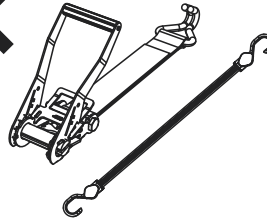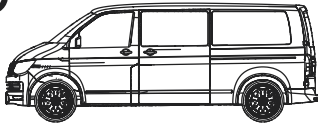


KammBar Fleet

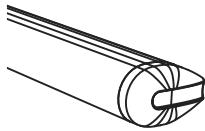


SA394 x 4 ☐



MS1551 x 8 ☐

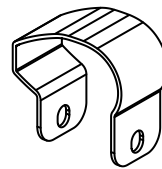


MS1142 x 8 ☐




SA070 x 4
optional upgrade


Fitting Kit




29201113 x 4 ☐



PS082 x 12 ☐



FW002
(M8) x 16 ☐

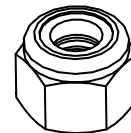

FN006
(M8) x 8 ☐



FB003
(M8 x 65) ☐
x 8



PS009
(M6) x 16 ☐



FW001
(M6) x 24 ☐



FN001
(M6) x 16 ☐



FW008
(M6) x 8 ☐




FS048
(M6 x 35) ☐
x 8




FS007
(M6 x 25) ☐
x 8








FS039
(M6 x 30) ☐
x 4









FS001
(M6 x 20) ☐
x 4




MS098
(M6) x 16 ☐

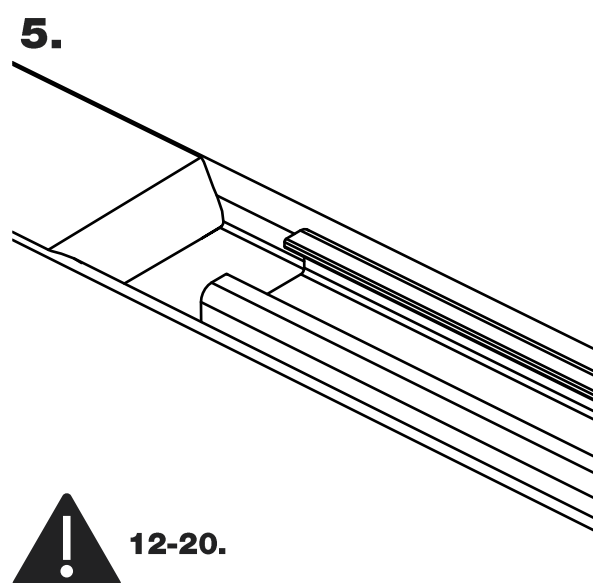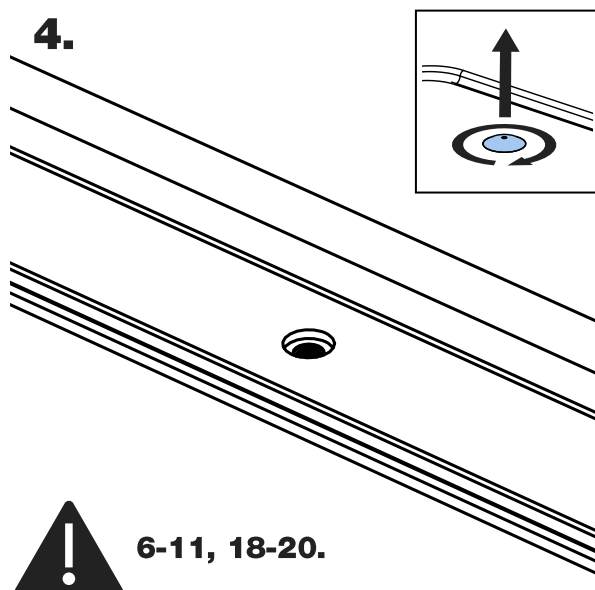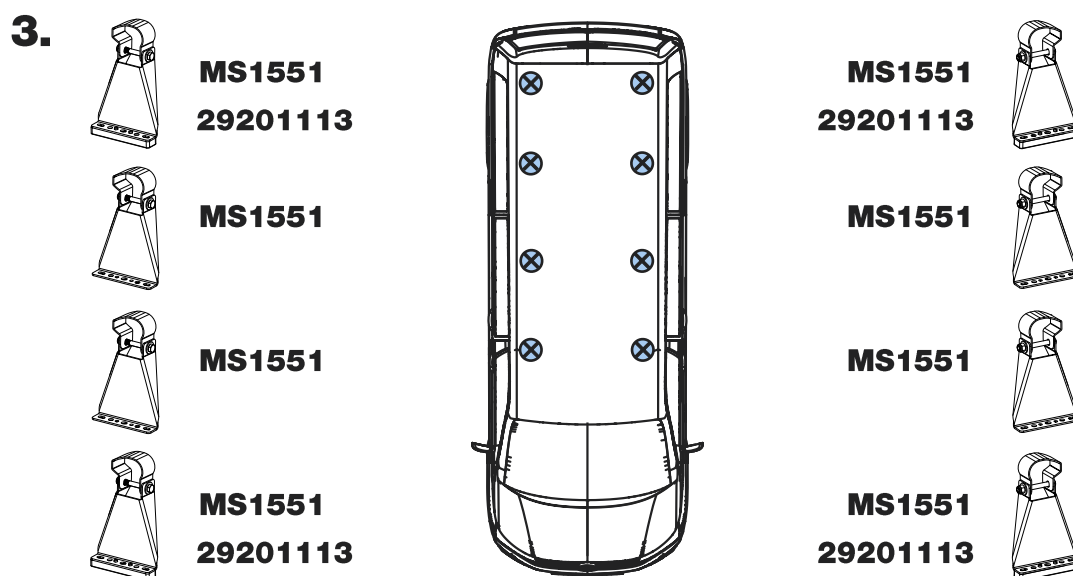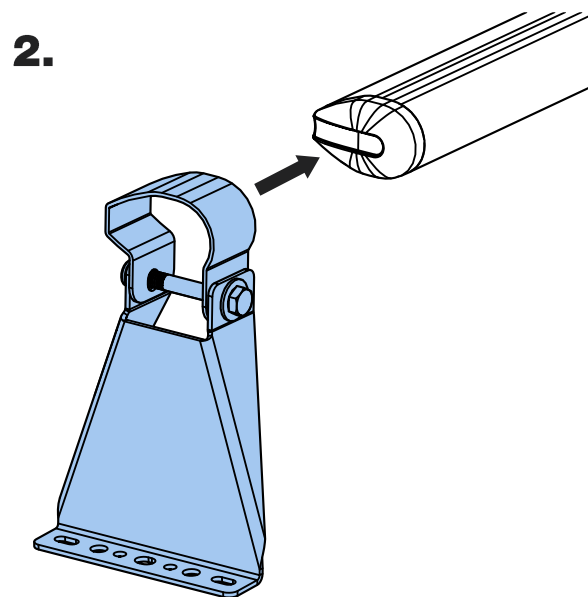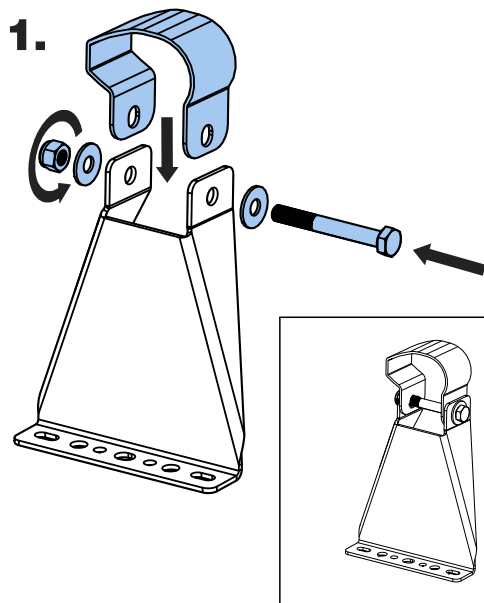

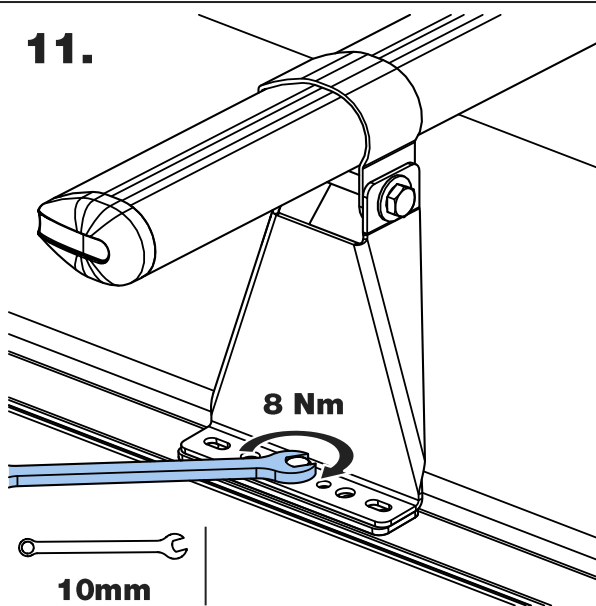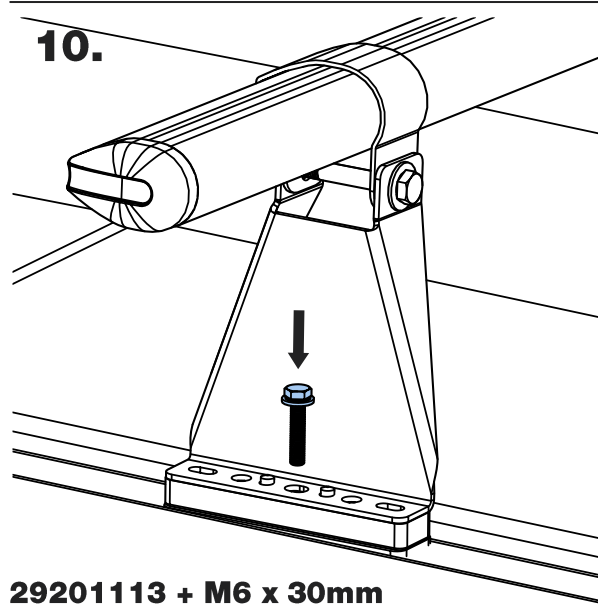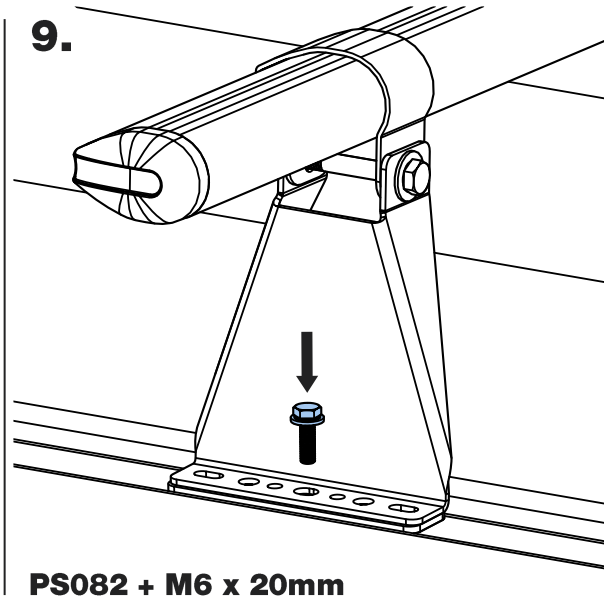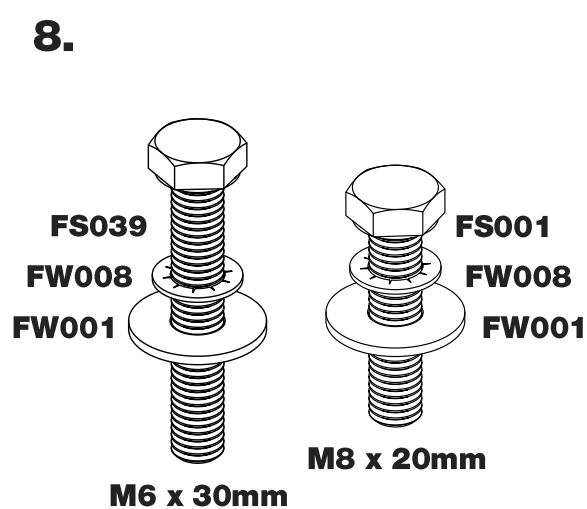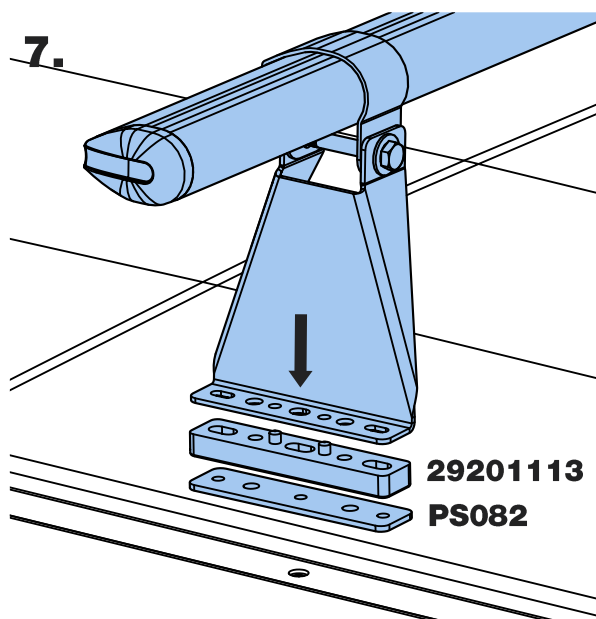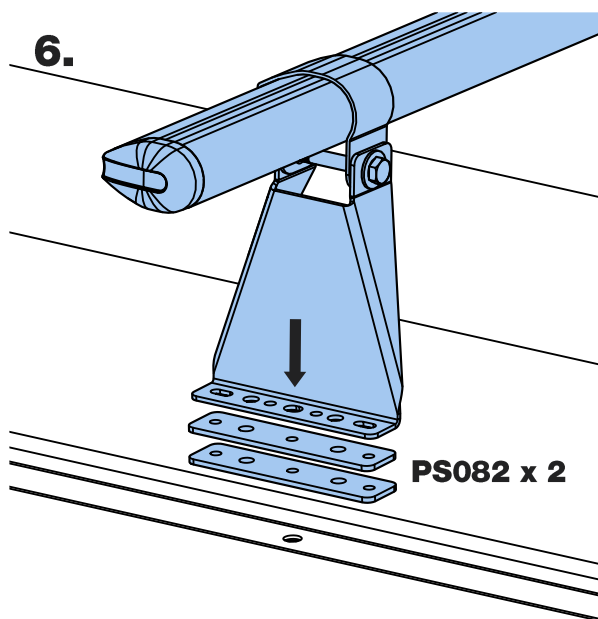


12.

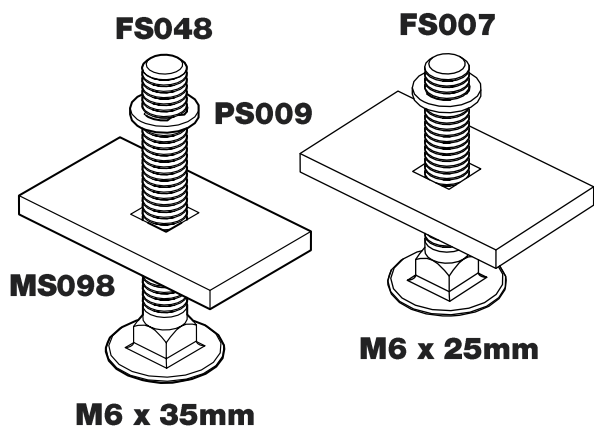


13.


- 1st. M6 x 35mm x 2
- 2nd. M6 x 25mm x 2
- 3rd. M6 x 25mm x 2
- 4th. M6 x 35mm x 2

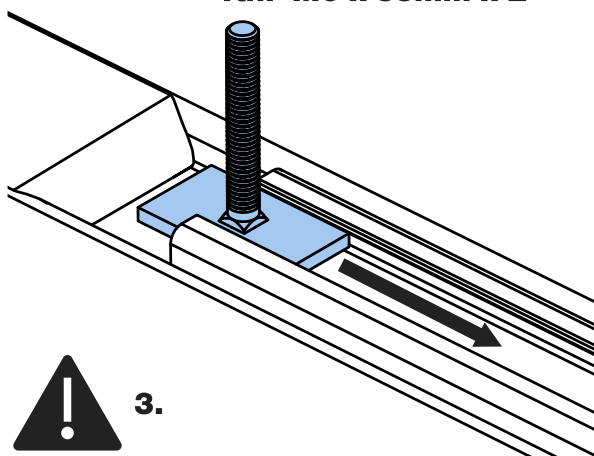


14.

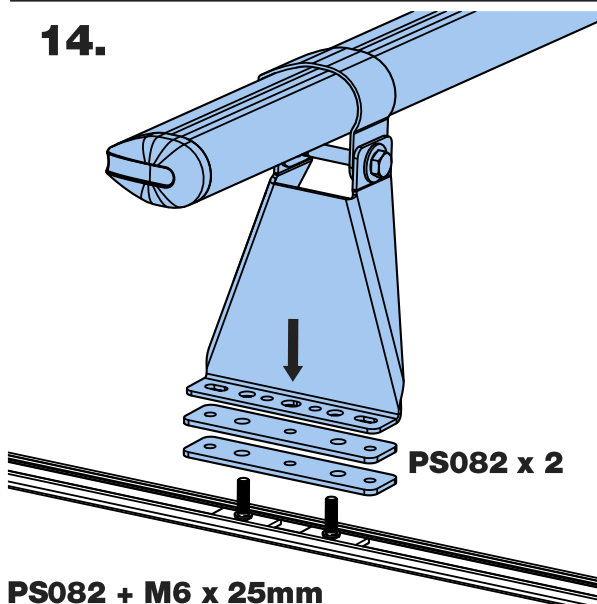


15.

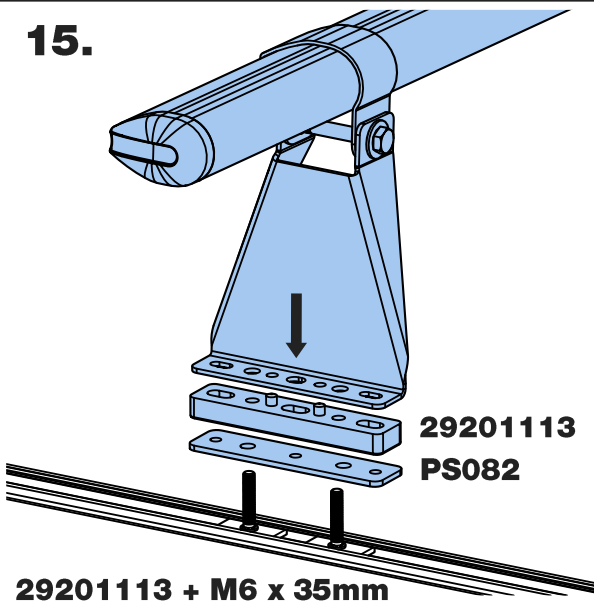


16.

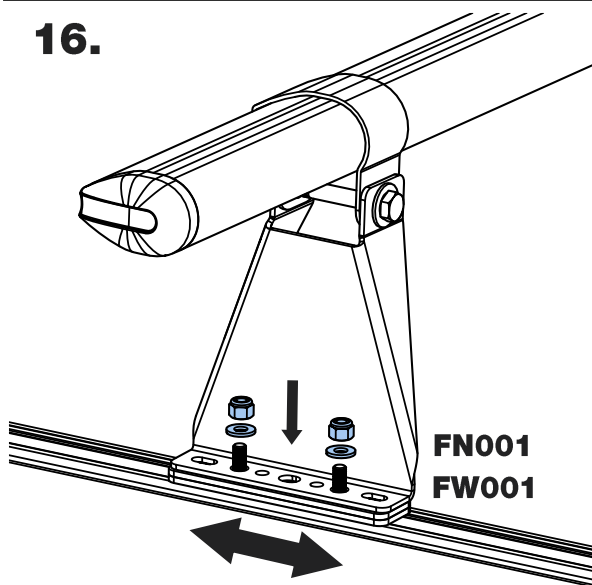


17.

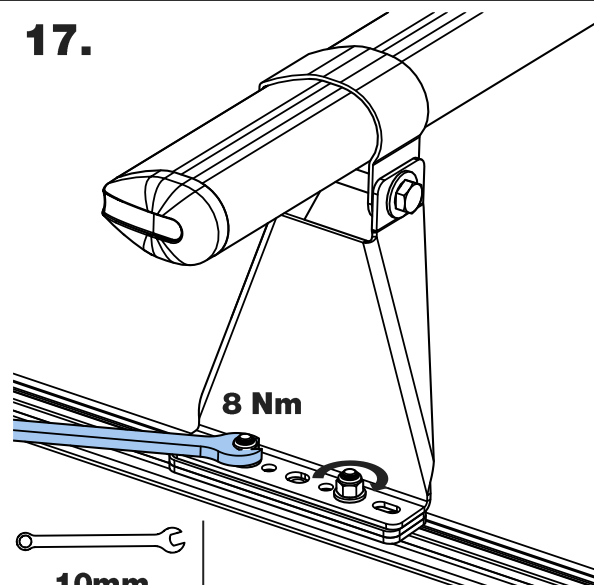

18.

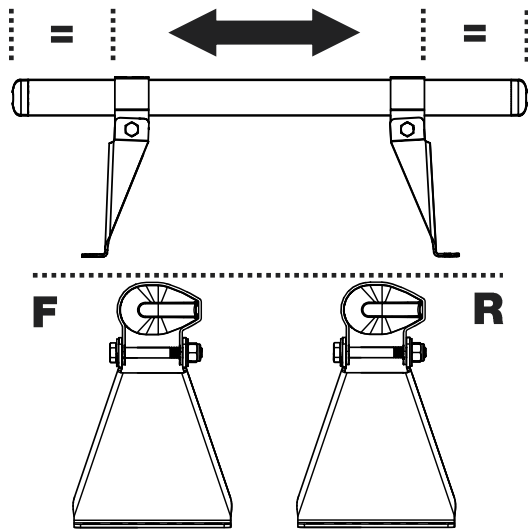

19.

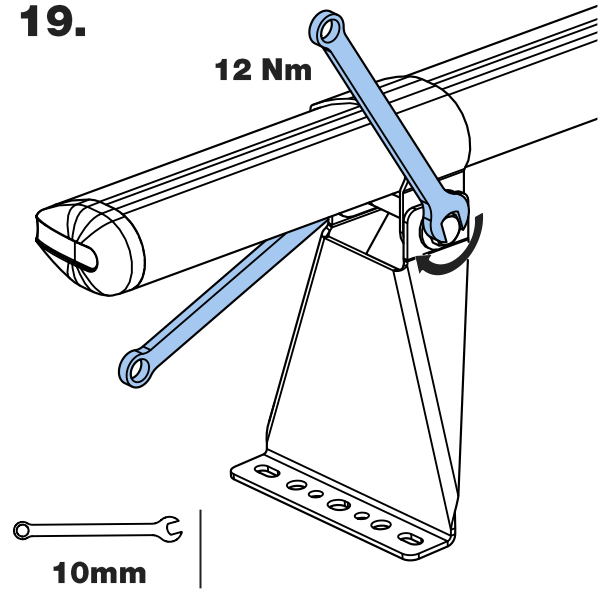

20.

