






MC3PR/FLR KammBar

Instructions

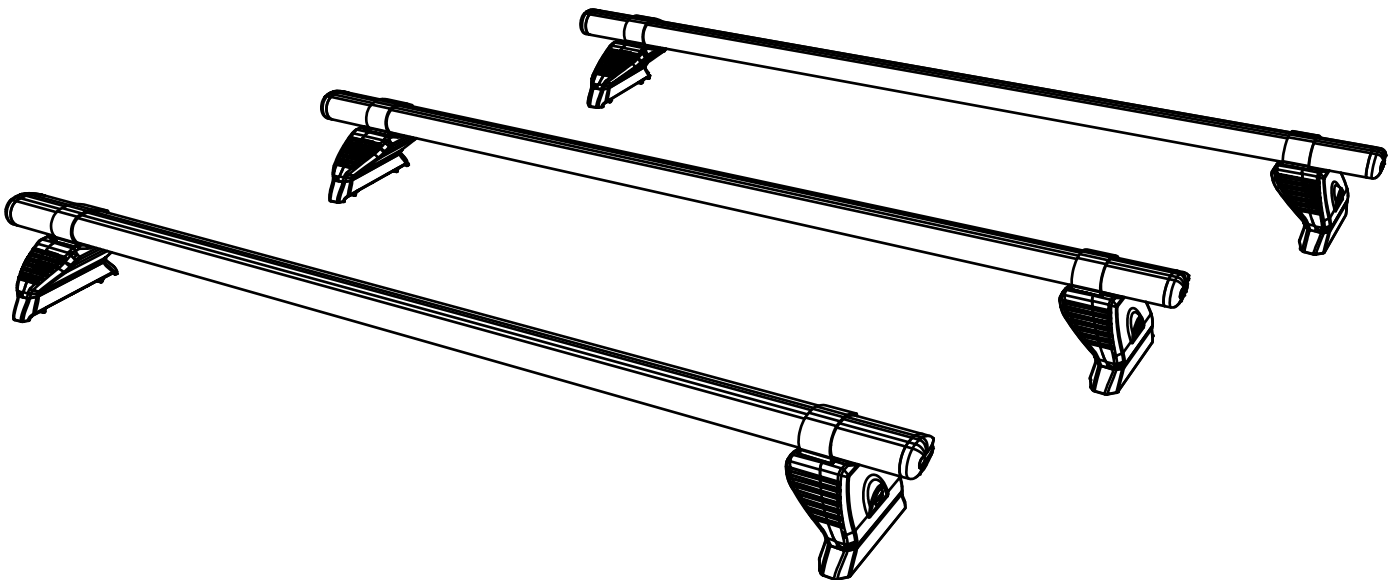


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

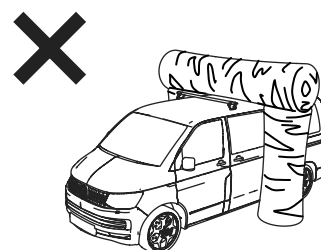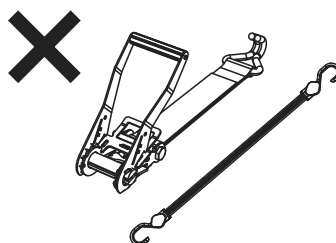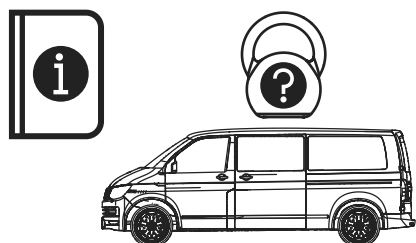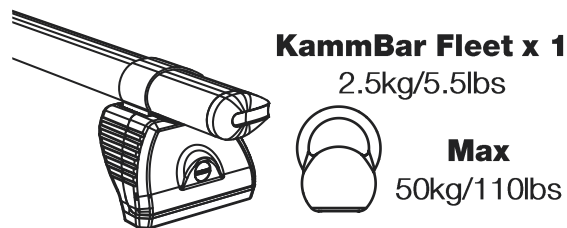


KammBar Pro

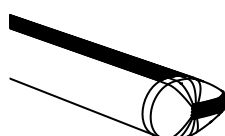


SA421 x 3 ☐



SA070 x 4 ☐

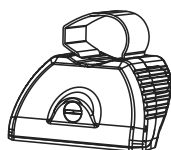


SA397 x 3 ☐

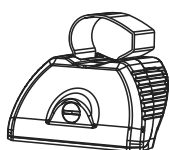


SA398 x 3 ☐


KammBar Fleet

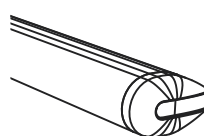


SA395 x 3 ☐



C04 x 3
optional upgrade

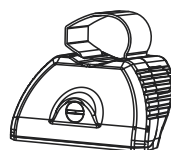


SA397 x 3 ☐

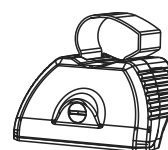


SA398 x 3 ☐

Fitting Kit




PS325 x 6 ☐




PS023 x 6 ☐



FT01 x 1 ☐

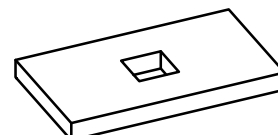

MS209 x 12 ☐



PS020 x 6 ☐




FN006 (M8) x 12 ☐



FW002 (M8) x 12 ☐




FS107
(M8 x 75)
x 6 ☐




FS293
(M8 x 65)
x 12 ☐


1.

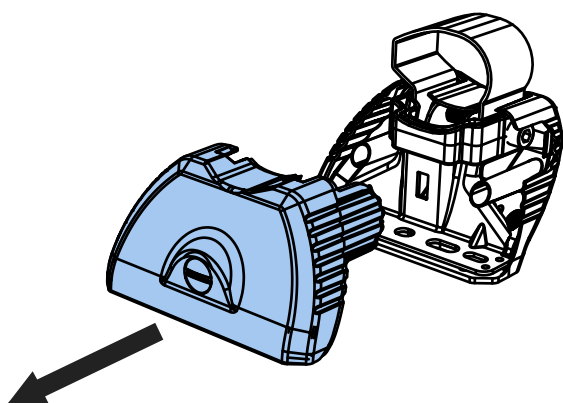

2.

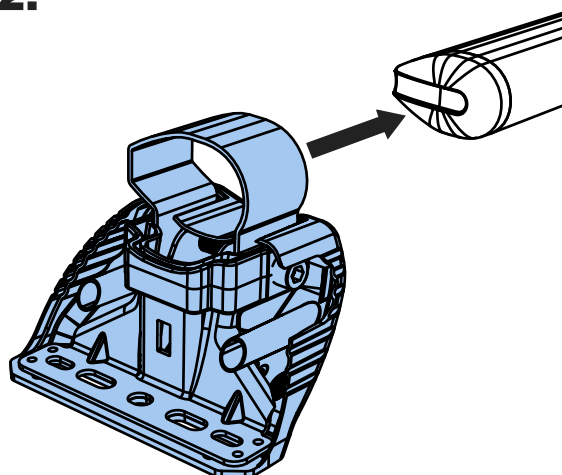


3.

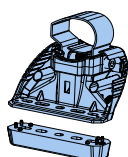


SA397

PS325

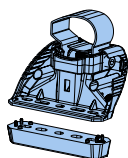


SA397

PS325

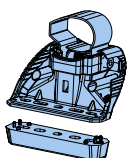


SA397

PS325

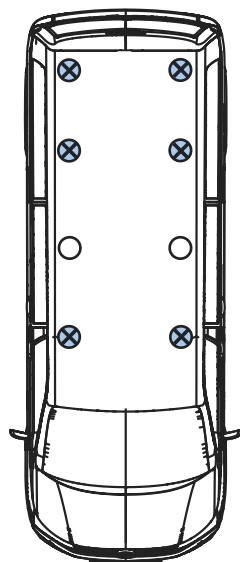


SA398

PS325

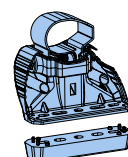


SA398

PS325

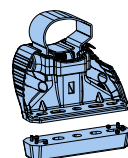


SA398

PS325

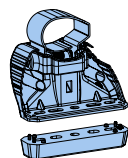


4.

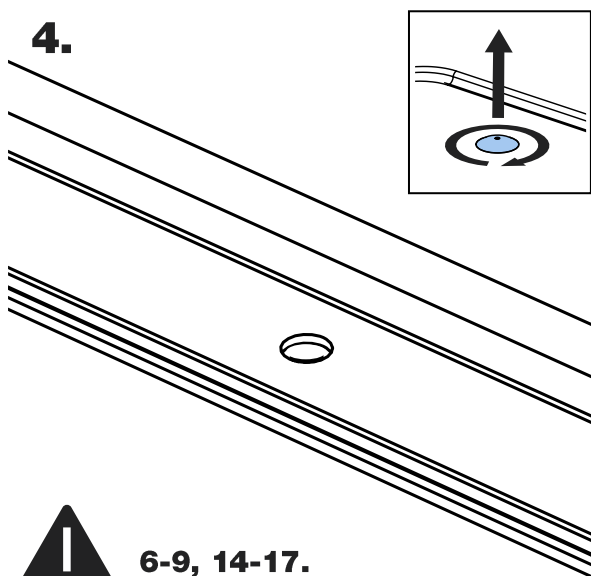

6-9, 14-17.

5.

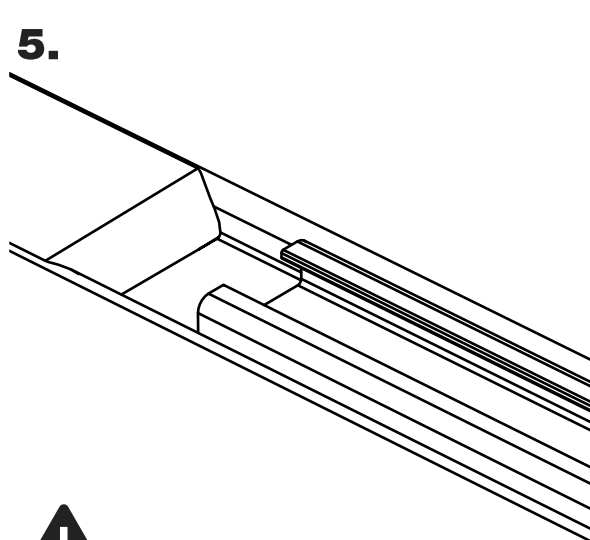

10-17.

